

FORD 6F50**AWD POWER TRANSFER OIL LIFE MONITOR RESET**

COMPLAINT: After changing the PTU oil the following message will be set "CHANGE AWD POWER TRANSFER UNIT LUBE". To get rid of the message the PTU oil life monitor must be reset.

CORRECTION: Perform the reset procedure as follows:

1. With the vehicle in Park, switch the ignition from the off position to the on position (the engine speed and vehicle speed must be 0 to perform the reset).
2. Within 10 seconds of the ignition in the ON position, fully apply and release the brake pedal 4 times within 10 seconds.
3. Within 10 seconds of applying the brake pedal 4 times, push the accelerator pedal to WOT and release 4 times within 10 seconds.
4. Within 10 seconds of pressing the accelerator pedal to WOT, press and hold both the brake and accelerator pedal to WOT. After pressing and holding both the brake and accelerator pedal for 5 seconds, a message in the information center will appear that says "AWD TRANSFER POWER UNIT LUBE SET TO NEW".

