# **Bevi Plus**

## **Operating Instructions**





ontents	Page
1. Safety instructions	2
2. Scope of supply	3
3. Operating instructions	3
4. Cleaning and service	5
5. General information	5
6. Illustration and components	6
7. Spare parts	7
8. Technical information	8

## 1. Safety Instructions

- Check the device for transport damages upon receipt
- Observe the operating instructions and always keep it next to the equipment



- It must be excluded that unauthorised persons operate the equipment
- Secure the dispensing equipment during the cleaning against use
- Do only use with water cocks not connected to a lowpressure flow heater
- We do not accept any liability for damages caused by use of not original parts and accessories, or due to inappropriate handling

## 2. Scope of Supply

- Bevi Plus
- Operating instructions
- Cleaning pellets Bevi Tab alkaline (2 pieces)

### 3. Operating Instructions

#### 3.1 Connection

- Connect the water hose to Bevi Plus
- In case of a steady connection, on site there must be a pipe disconnector with ventilation according to DVGW, and a hose burst protection
- Establish the connection of the line to be cleaned with the drain



Optional: Cleaning adapter AFG on stainless steel plate

#### 3.2 Cleaning

- Detach the adapter sight glass from the equipment by slightly turning it to the left, place Bevi Tab flat (see Fig.1), and fasten again (depending on the length of the line use 2 Bevi Tabs)
- Open the water cock
- Open the dispenser tap
- Close the dispenser tap again after cleansing agent is coming out (Fig. 2)
- Let it act for 15 to 20 minutes
- Open the dispenser tap again and rinse sufficiently (Fig. 3)
- Pay attention that the equipment is free from cleansing agent, check e.g. with pH indicator paper
- Close the water cock after the cleaning



1. Detach the adapter sight glass and place Bevi Tab flat

 


2. Cleansing agent comes out



### 4. Cleaning and Service


Disinfect inside and outside of the equipment in regular intervals,





#### 5. General Information

 - It is only allowed to connect the equipment with water cocks without low-pressure flow heaters
- Protect the equipment against temperatures below freezing point (risk of freezing and destruction of the pump)



 When operating the equipment properly the warranty for components is of 1 year

## 6. Illustration and Components



No.	Denomination
1	Water supply
2	Opening for placing Bevi Tab
3	Adapter sight glass
4	Sieve
5	Beverage line drain/cleaning distributor/KEG adapter

## 7. Spare Parts

Item no.	Component Bevi Plus
88501100	Bevi Plus admixing device
88120106	O-ring sealing 34x4
88010138	Cap nut hexagon 5/8"
88120134	Adapter sight glass for Plus with RV
88501005	Valve housing blue with non-return valve
88240126	Cleaning distributor 6-fold CC or NC
	Single valve
88123505	Rinsing adapter KEG CC/PC or Sinalco/Beer

#### 8. Technical Information

• Item No.: 88.501.100

• Standard connection: 1/2" AG or 10 mm hose fitting

Work range: 3-4 barWeight: 0,3 kg

Measures: 185x91x90 mm (HxWxD)



BeviClean strives for continuous improvement and reserves the right to up-date or change technical data without prior notice.



Carl-Benz-Straße 5 · D-56218 Mülheim-Kärlich T: +49 2630 / 966 30-0 · F: +49 2630 / 966 30-20 www.beviclean.com · info@beviclean.com