

Sabbath Mode: Refrigerators

What is Sabbath mode in Refrigerators?

Sabbath mode is a feature that enables a customer to comply with the rules of the Jewish Sabbath, which is generally from sundown on Friday to sundown on Saturday, though there are other holy days during the year when these rules may also apply. When the refrigerator is in Sabbath mode, the buttons, the display, and the internal lights do not function. The refrigerator and freezer, however, continue to cool.

Which Samsung Refrigerators feature a Sabbath mode?

Sabbath mode is currently available in several Samsung refrigerator configurations: 3-Door and 4-Door French Doors and Top Mount models.

	Model	To activate/deactivate Sabbath mode:
3-Door FD	RF28R6301 RF23R6301 RF28R6201(2) RF23R6201	Press and hold Door Alarm + Water/Ice simultaneously for 5 seconds.
4-Door FD	RF28R7351 RF22R7351 RF28R7201 RF24R7201	Press and hold Door Alarm + Water/Ice simultaneously for 5 seconds.
	RF23M8090 RF23M8070	Press and hold Freezer + Door Alarm simultaneously for 5 seconds.
Top Mount	RT21M6215 RT18M6215 RT21M6213 RF18M6213	Press and hold Power Freeze + Power Cool simultaneously for 5 seconds.

Note: Even after the refrigerator powers off and restarts, the Sabbath mode remains active. To exit Sabbath mode during its active period, you must deactivate it. The Sabbath mode stays active for 85 hours once it is activated. After that, it will be deactivated automatically.



For further assistance, guidelines for proper usage, and a complete list of models with the Sabbath feature, please visit the web at <http://www.star-k.org>.

Sabbath Mode: Ranges & Wall Ovens

What is Sabbath mode in Ranges?

The Sabbath mode in ranges is only for use in baking mode. It sets the oven so that it remains on continuously. The oven temperature may be changed after setting the Sabbath feature; the display, however, will not change and tones will not sound when a change occurs.

Options like Cooking Time and Delay Start can be set prior to activating the Sabbath mode. Once the oven is properly set for baking with the Sabbath feature active, the oven will remain on continuously until cancelled, overriding the factory default 12-hour energy saving feature.

Oven Light

If you need the oven light on during the Sabbath, press the OVEN LIGHT pad before activating the Sabbath mode. Once the oven light is turned on and the Sabbath feature is activated, the oven light will remain on until the Sabbath feature is turned off. If the oven light needs to be off, be sure to turn the oven light off before activating the Sabbath feature.

Turning the oven off

You can turn the oven off at any time by pressing **OVEN OFF**. This will turn only the oven off. If you wish to deactivate Sabbath mode, repeat the steps you followed to activate it.

Which Samsung Ranges feature a Sabbath mode?

All Samsung ranges have Sabbath mode, though the controls to activate/deactivate it vary. Refer to the next page or the user manual for instructions.



For further assistance, guidelines for proper usage, and a complete list of models with the Sabbath feature, please visit the web at <http://www.star-k.org>.