


DigiDash

TRAINING DOCUMENTS • GUIDE BOOKS

How to Link Your Screen to Your Dashboard.


Step 1 (Download & Launch DigiDash)

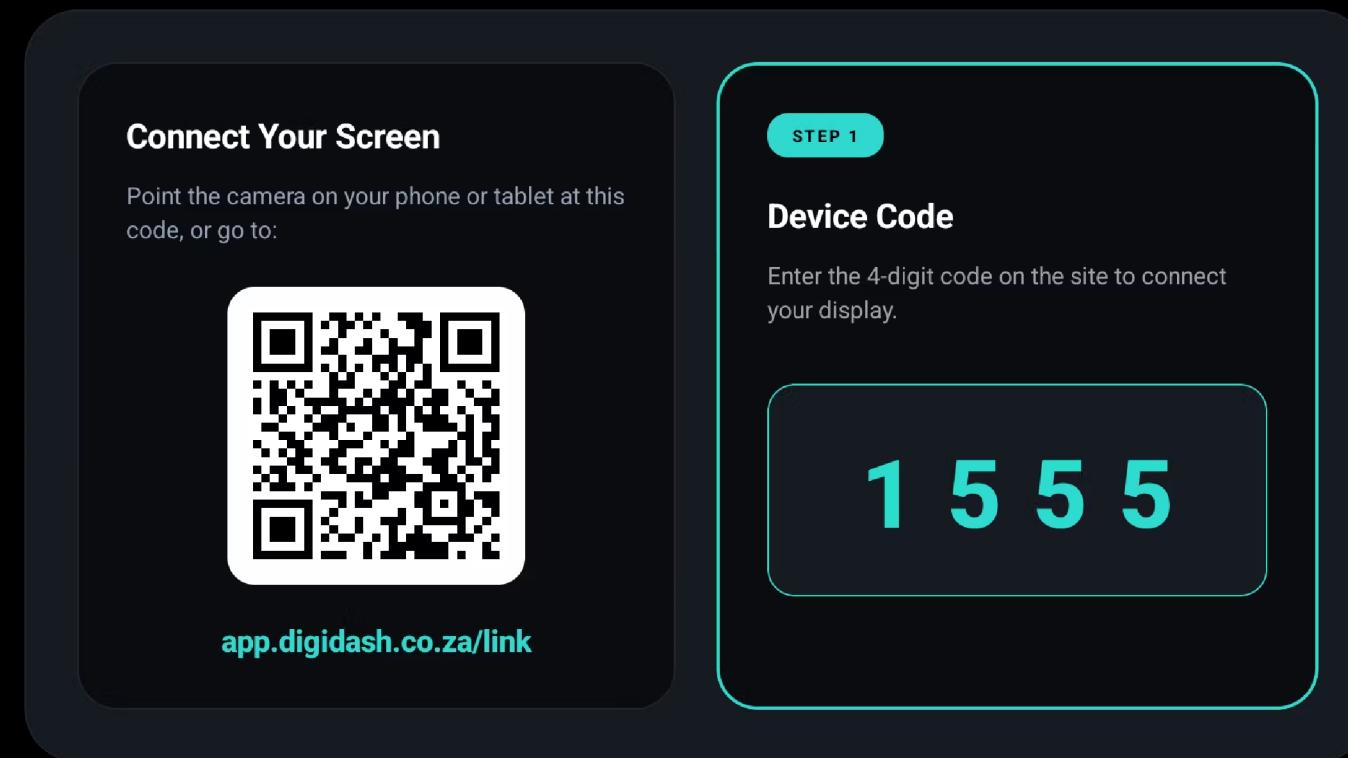

Download the DigiDash app from the Google Play Store on your Android TV or streaming device. Once it opens, you'll see a 4-digit code on your screen.

Pro Tip: For the best experience, we recommend using a Nova Pro 4K streaming box.


Try Pitch

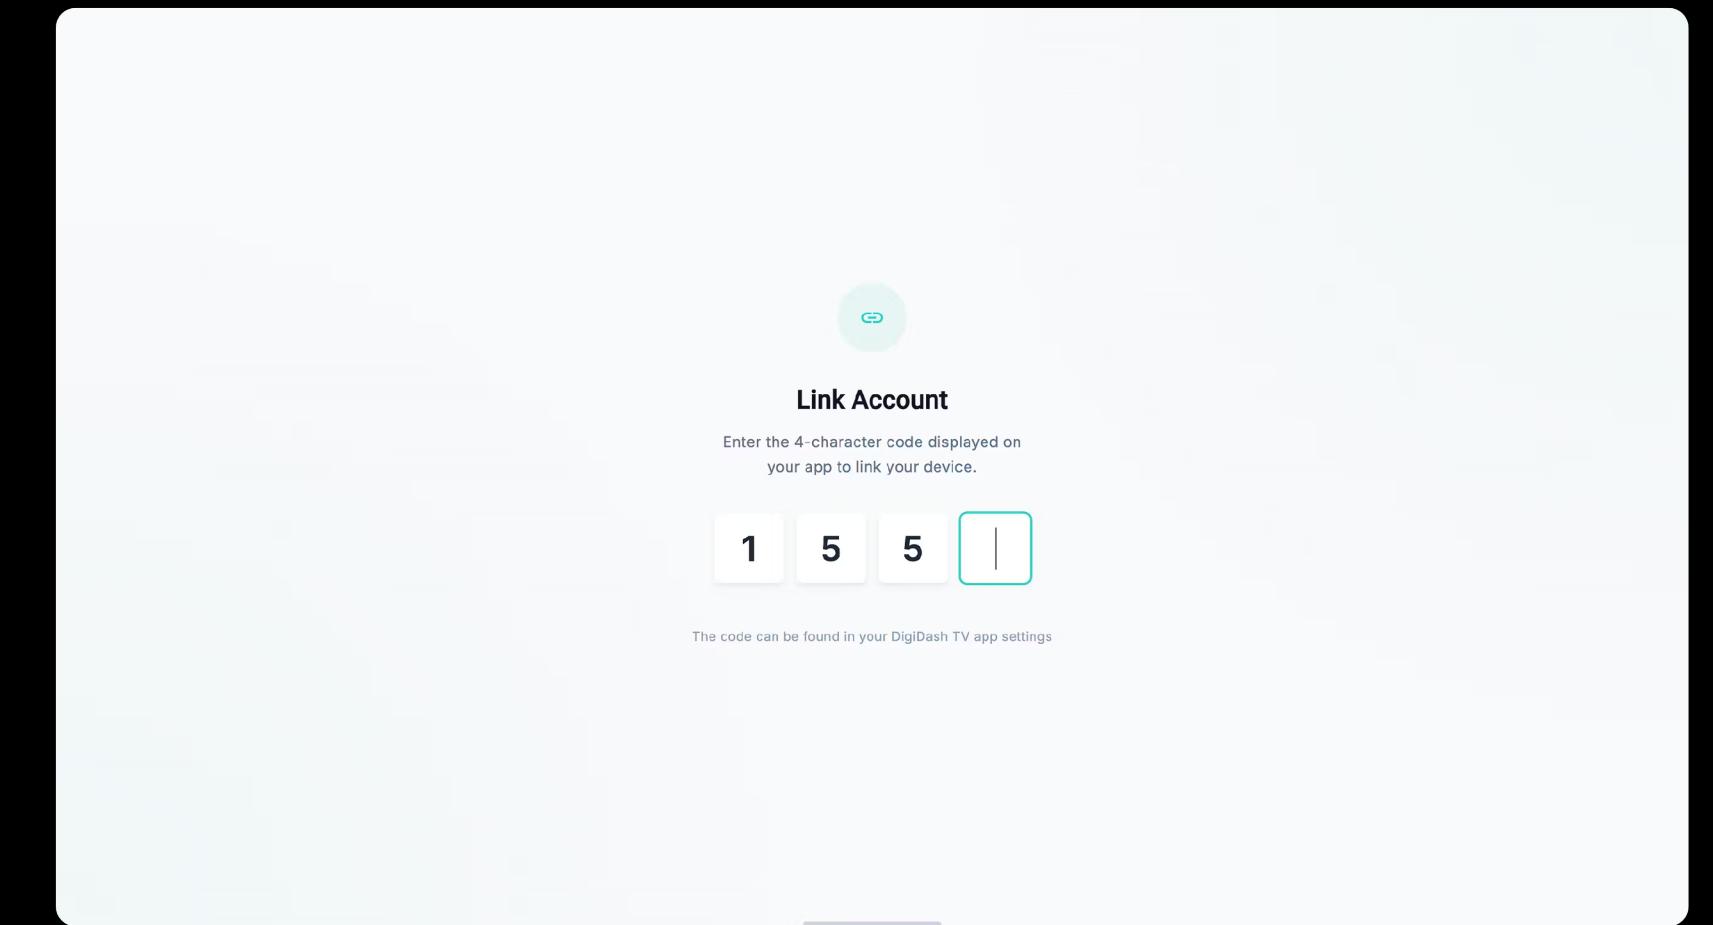

On your phone or computer, go to app.digidash.co.za/link and enter the 4-digit code from your TV screen. Your device will connect to your account automatically.

Note: Make sure you have an available device slot in your DigiDash account before linking a new device.


Step 2 (Link Your Device)

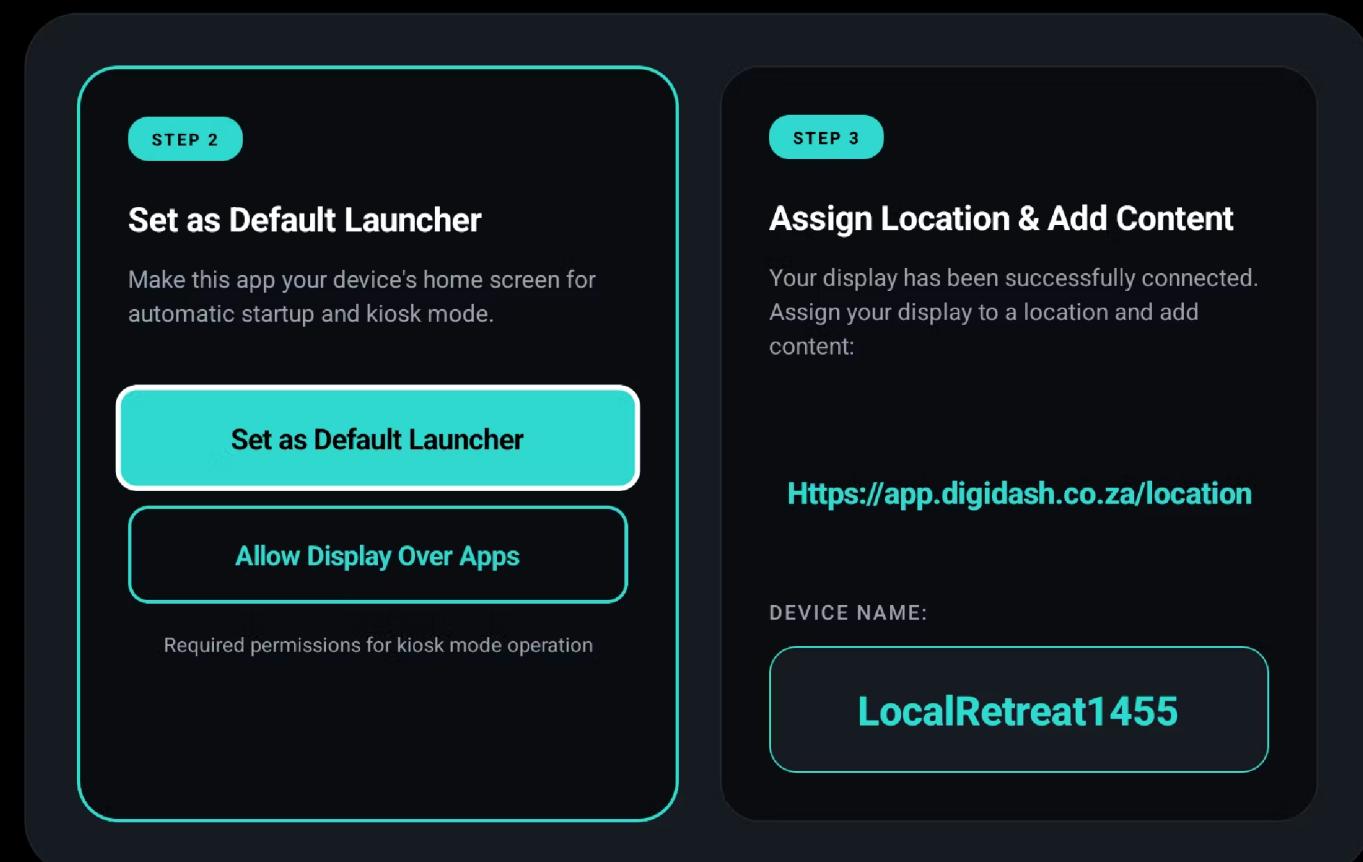

Navigate to app.digidash.co.za/locations and link your device to a location. You'll be asked to set permissions—see the next step for details.


Pro Tip: Setting permissions gives you full control over the TV experience. This will set DigiDash as the default launcher.

Try Pitch

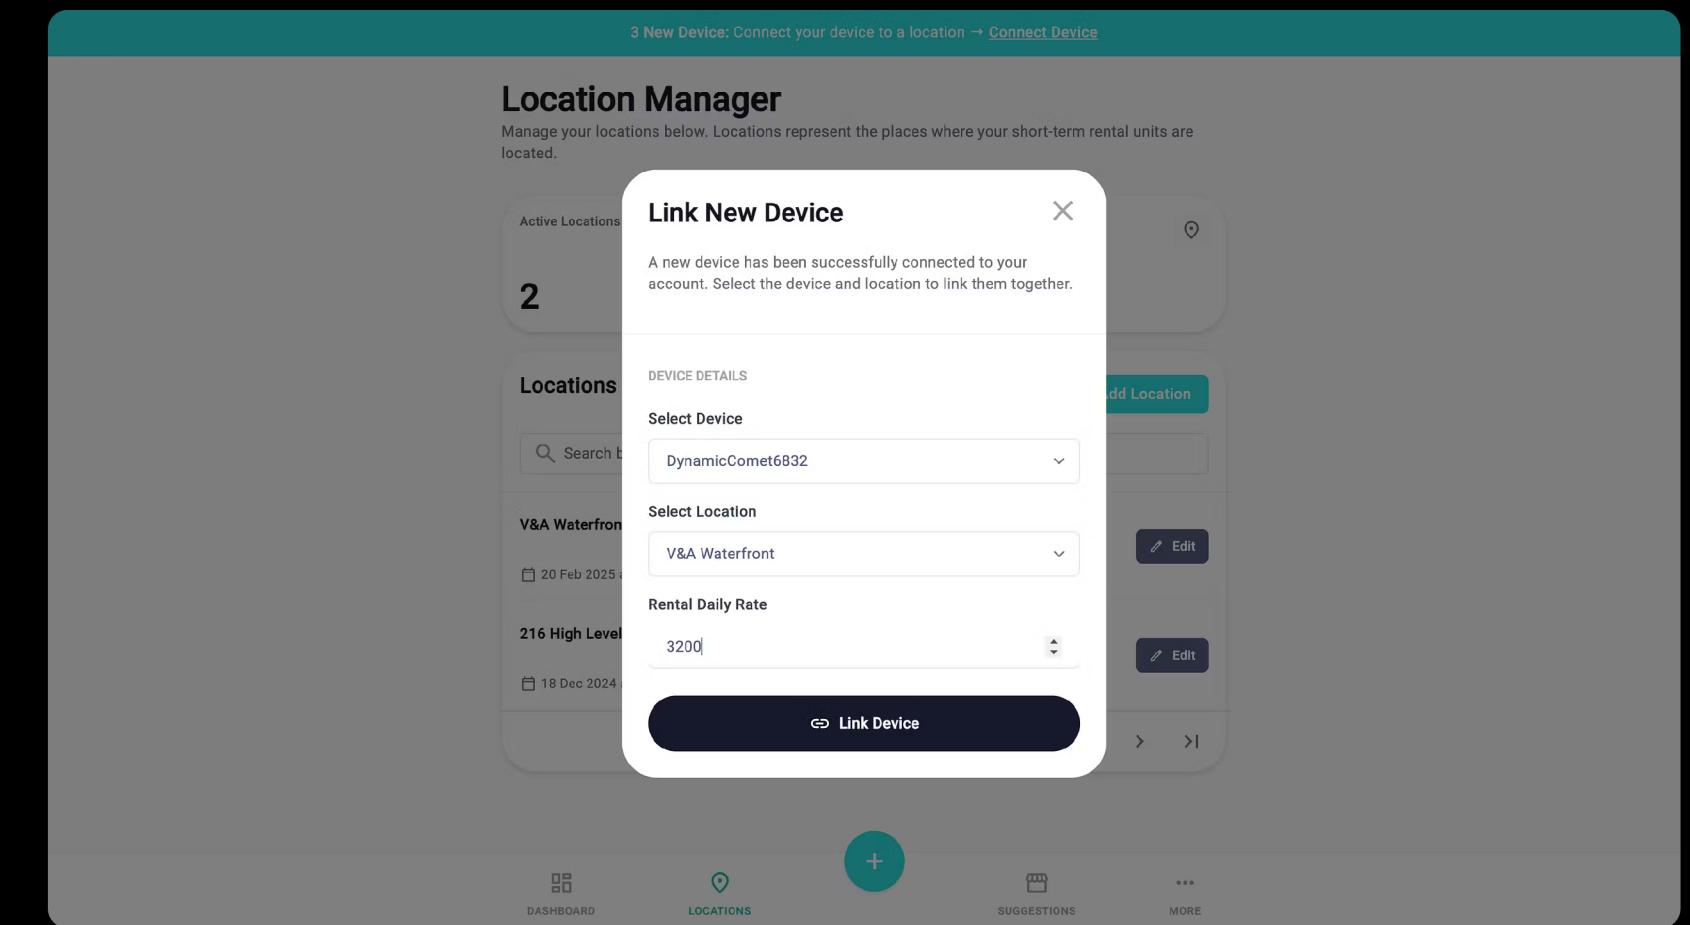


Now link the device by choosing a device name, selecting your location, and adding your rental's daily rate. This will automatically connect your device to a theme.

Permissions (Bonus set up)

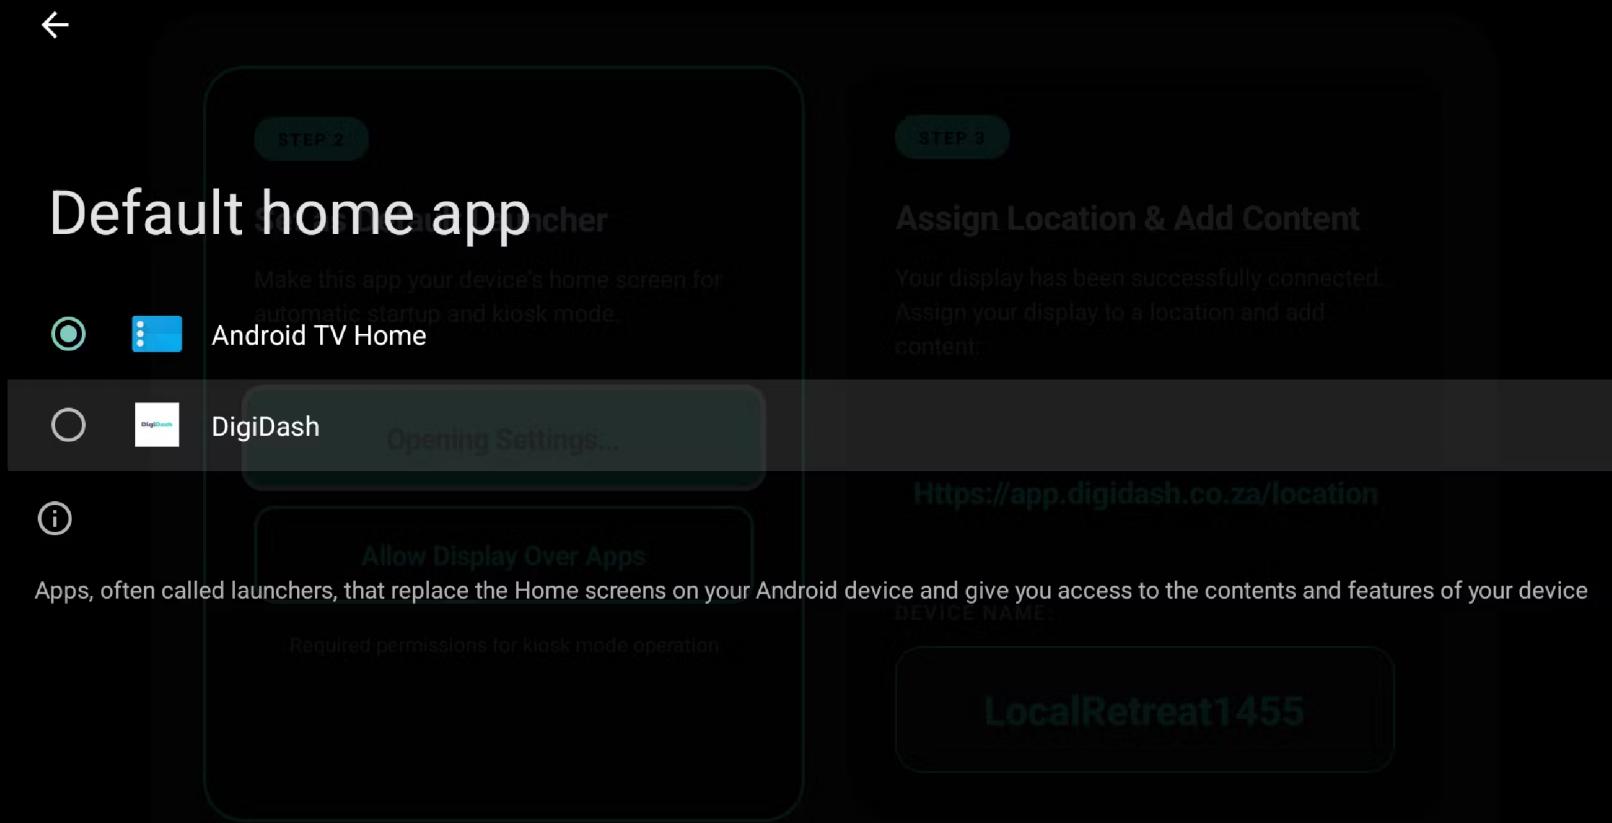



Set DigiDash as your default home app. This ensures the app opens automatically whenever guests turn on the TV—creating a seamless, custom TV experience.

Pro Tip: This is a great setting—your guests will always have easy access to local recommendations and places to explore in their area.

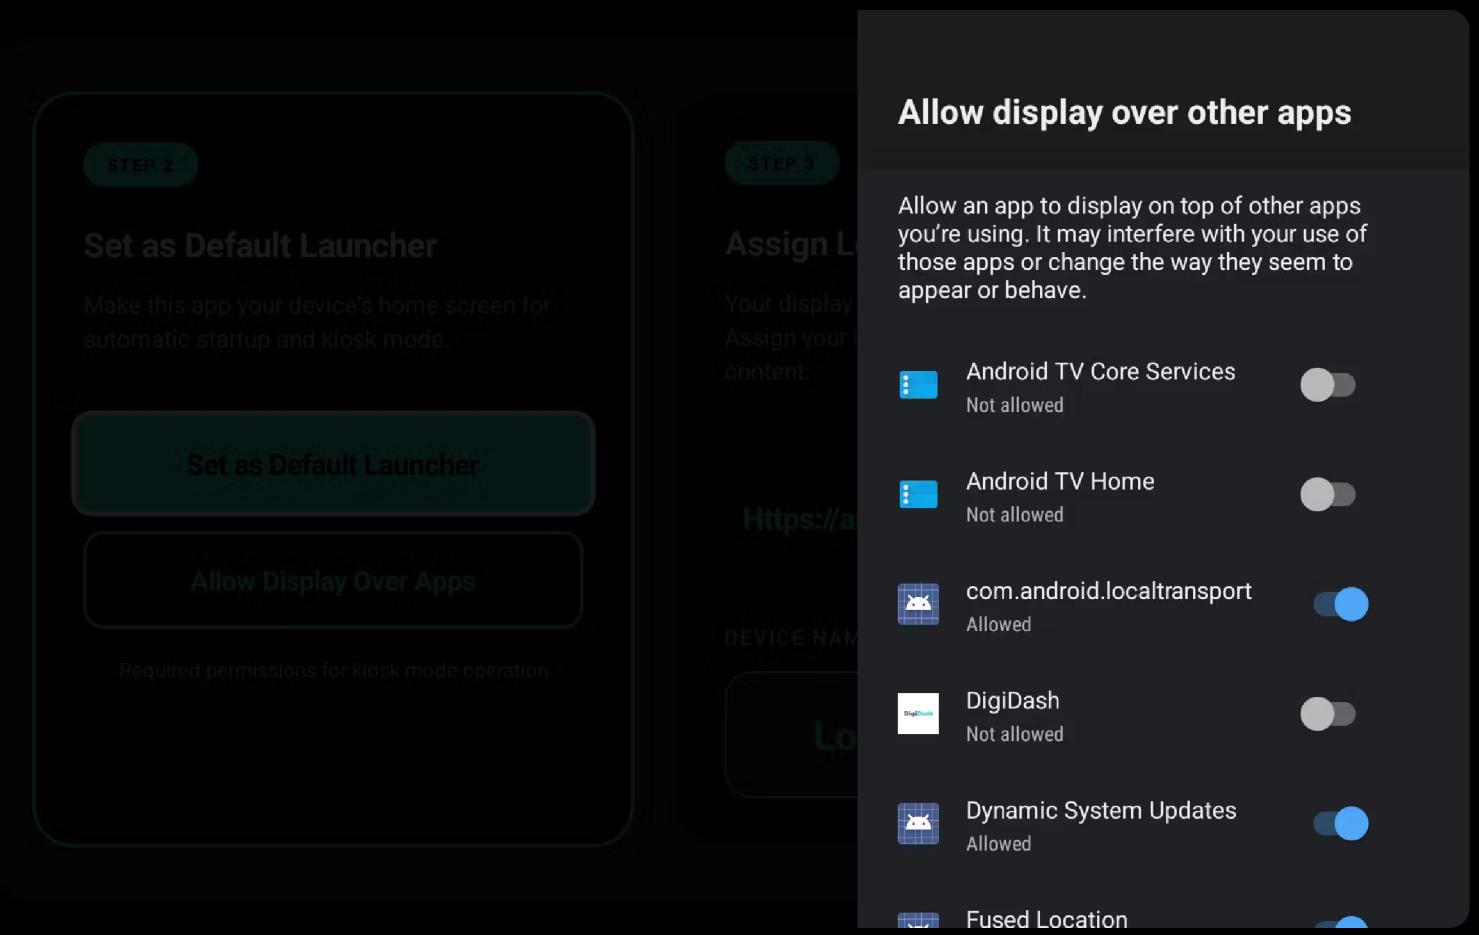

Allow display over other apps. This gives DigiDash priority on the screen, ensuring your content stays front and center even when other apps are running.

Step 3 (Load Your Content)

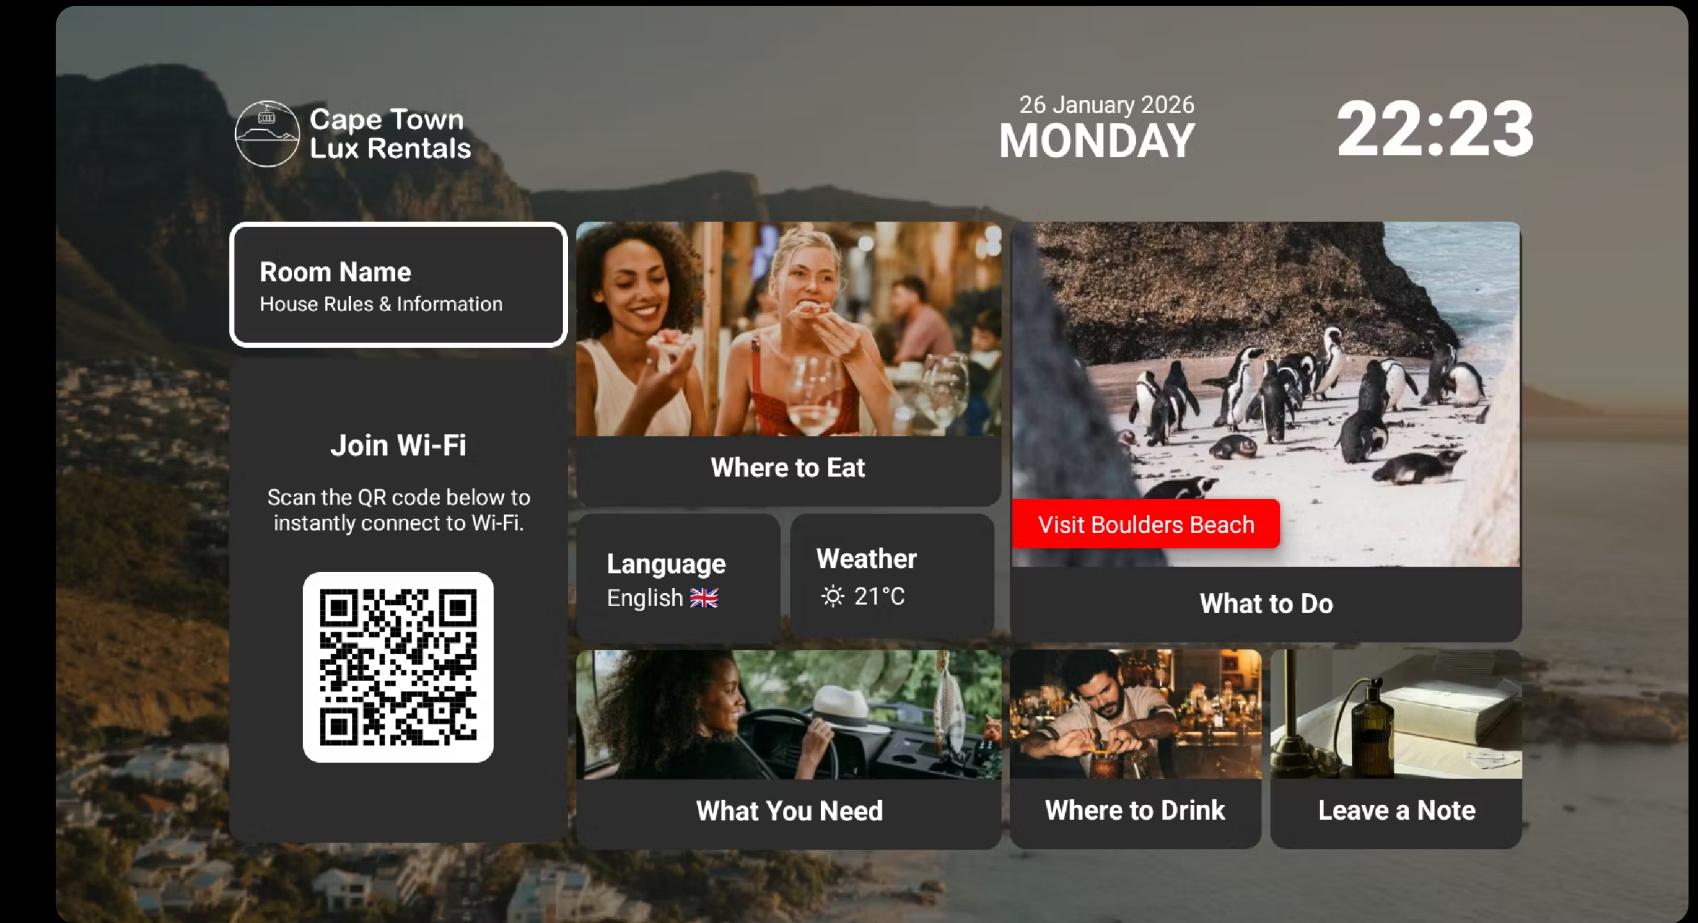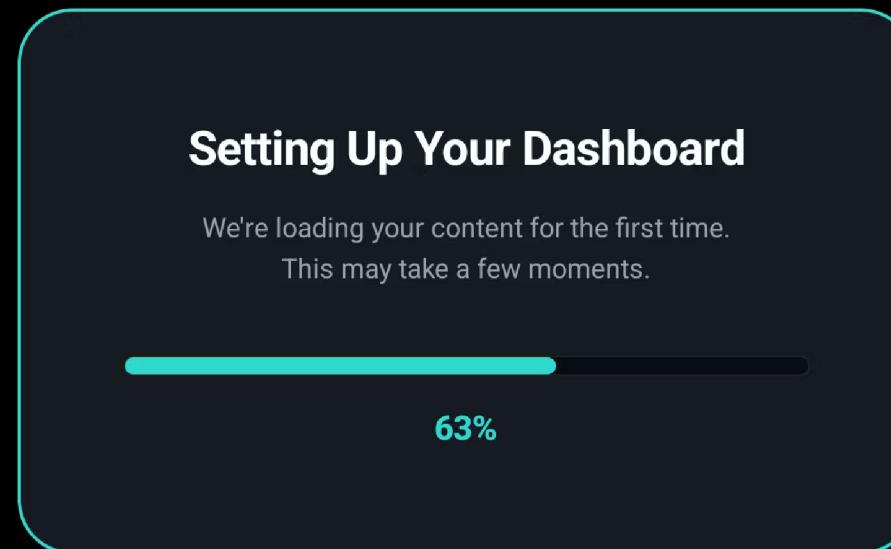

We'll now sync all your content to the device. The first load will take a few minutes as we pull in all your information, but after that, everything will load instantly.

All set! Your DigiDash is ready for your first guest.