




**WARNING**

**THE INSTALLATION SHALL BE MADE  
BY QUALIFIED INSTALLATION  
PERSONNEL AND SHOULD CONFORM  
TO ALL NATIONAL AND LOCAL CODES.**

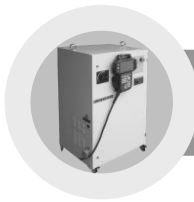

## Hi5 Controller Function Manual

**Cube interference prevention**





---

The information presented in the manual is the property of HHI.  
Any copy or even partial is not allowed without prior written authorization from HHI.  
It may not be provided to the third party, nor used for any other purposes.

HHI reserves the right to modify without prior notification.

Printed in Korea – July. 2012. 1<sup>st</sup> Edition  
Copyright © 2012 by Hyundai Heavy Industries Co., Ltd.





# Contents

<b>1. Overview</b>	<b>1-1</b>
<b>1.1. About the Function of Cube Interference Prevention</b>	<b>1-2</b>
1.1.1. Purpose of the Function	1-2
1.1.2. Scope of the function	1-3
1.1.3. Limitations on the Function	1-4
1.1.4. Associated Functions	1-4
<b>2. Relevant Functions</b>	<b>2-1</b>
<b>2.1. Setting Methods</b>	<b>2-2</b>
2.1.1. Setting Enable/Disable of the Function and Communication Systems	2-2
2.1.2. Cube area setting	2-3
2.1.3. Setting Cube I/O Signals for the Common Cube area	2-8
2.1.4. Examples of Preparing for and Running Job Programs	2-9
<b>2.2. Error Detection</b>	<b>2-16</b>







**HYUNDAI**  
HEAVY INDUSTRIES CO., LTD.

1

Overview



# 1. Overview

## Cube interference prevention

### 1.1. About the Function of Cube Interference Prevention


#### 1.1.1. Purpose of the Function

- The purpose of the function is to prevent several robots from entering the same cube area d at a time during operation.
- When a robot enters the cube area where the robot's tool center point (TCP) has been set, a signal is output so that the users may use the signal for diverse applications.





### 1.1.2. Scope of the function

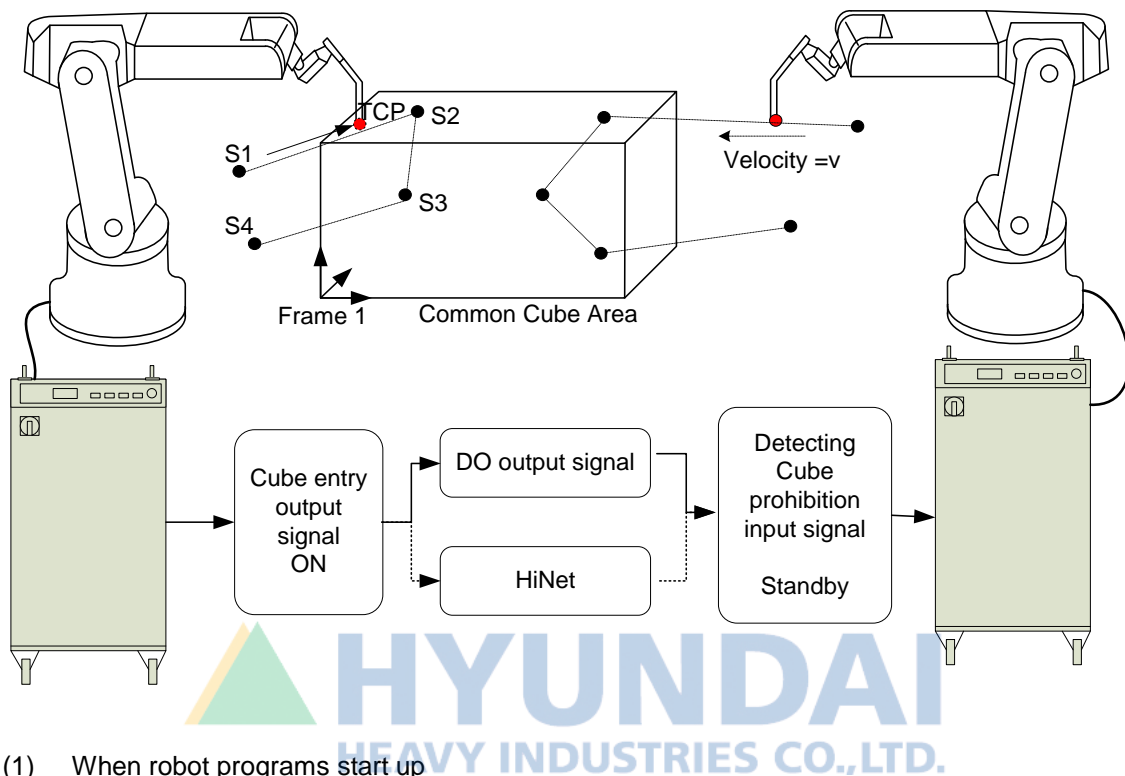

#### (1) When robot programs start up

- If a robot's TCP is inside the set cube area, an assignment signal is output; if the TCP is outside the set cube area, the assignment signal is not output.
- When a robot's TCP has entered the cube area or the step target position enters the cube area while the robot is stepping, it secures the job priority over the area and outputs the Cube entry output signal (in this case, the left robot in the above figure).
- The Cube entry output signal is translated into the input signal of prohibiting other robots' access to the cube (in this case, the right robot in the above figure), and the robot that has received the input signal automatically stops when there is possibility of the cube interference.
- When the job of the robot which has entered the cube area first is completed, the other robot in a standby mode restarts up automatically.

#### (2) When a robot is in the jog mode or stops

- In a manual mode (JOG), a robot plays a role in detecting the TCP position and outputting the Cube entry output signal.
- The robot in the jog mode does not stop automatically even though the input signal of prohibiting access to the cube has been sent; therefore, close attention shall be paid.

#### (3) Other matters

- The function is provided by Hi5 Controller version MV31.07-32 and over.
- DIO and HiNet methods may be used for the cube detection signal I/O

### 1.1.3. Limitations on the Function

This function is designed for robots to automatically stop when they are expected to enter the cube at the same time; when the input signal of prohibiting access to the cube is cleared, they restart up automatically.

However, although the robots reduce their speeds to the maximum extent at a time when they detect the input signal of access prohibition to the cube, in some case, when they enter the cube area at the same time, which is called dead-lock.

The dead-lock may happen when there is the wrong connection between the output signal of entry into cube and the input signal of access prohibition to cube over the common cube, or when there is a communication delay between two robots. In this case, errors happen because the two robots may enter the cube area at a time. (E0222 Same cube simultaneous entry detected)

- This function may have the dead-lock phenomenon where two robots enter the common cube area at the same time.
- It does not support the function to return to the starting point, automatically avoiding the dead-lock state, and may not be used in association with the function of detecting the arm interference.

### 1.1.4. Associated Functions

- Cooperative control function, HiNet
- Function of Arm Interference Prevention





**HYUNDAI**  
HEAVY INDUSTRIES CO., LTD.

2

**Relevant  
Functions**



## 2. Relevant Functions

### Cube interference prevention

### 2.1. Setting Methods

#### 2.1.1. Setting Enable/Disable of the Function and Communication Systems

Determine the Enable/Disable of whether to use the function of preventing the cube interference.


Select the menus as follows: 『[F2]: System』 → 『4: Application Parameter』 → 『7: Interference prevention』 → 『1: Cube interference prevention』 → 『1: Cube condition setting』, then determine whether to use the function and the communication systems.



- (1) Cube interference prevention <Enable, Disable>: select whether the function is Enable or Disable.  
Set up the cube area and select 'Enable' so as to use the function of preventing cube interference.  
When 'Disable' is selected, the interference area may not be set up and the I/O signals are not sent.
- (2) Communication method <DIO, HiNet>: select the communication for I/O signals of cube interference detection.  
When DIO is selected, the universal I/O signals shall be chosen; when Hinet is selected, the cooperative control network shall be connected.

### 2.1.2. Cube area setting

Select the menus as follows: 『[F2]: System』 → 『4: Application Parameter』 → 『7: Interference prevention』 → 『1: Cube interference prevention』 → 『2: Cube area setting』.

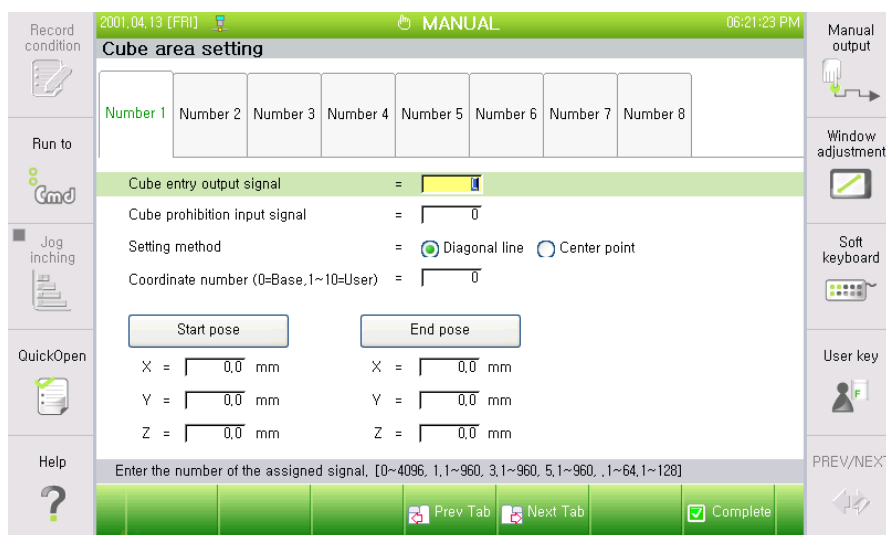

**HYUNDAI**  
HEAVY INDUSTRIES CO.,LTD.



## 2.1.2.1. Methods of Setting a Cube

Two methods of setting a cube are provided

### (1) Diagonal Method

- Set up hexahedron's two points, located diagonally as diagonal points. Manually input the diagonal starting and terminal positions as seen in the following figure.
- If recording the current robot's position as a TCP, put a cursor on the <Start Pose> or <End Pose> button, and press the 'ENTER' key.

Example)

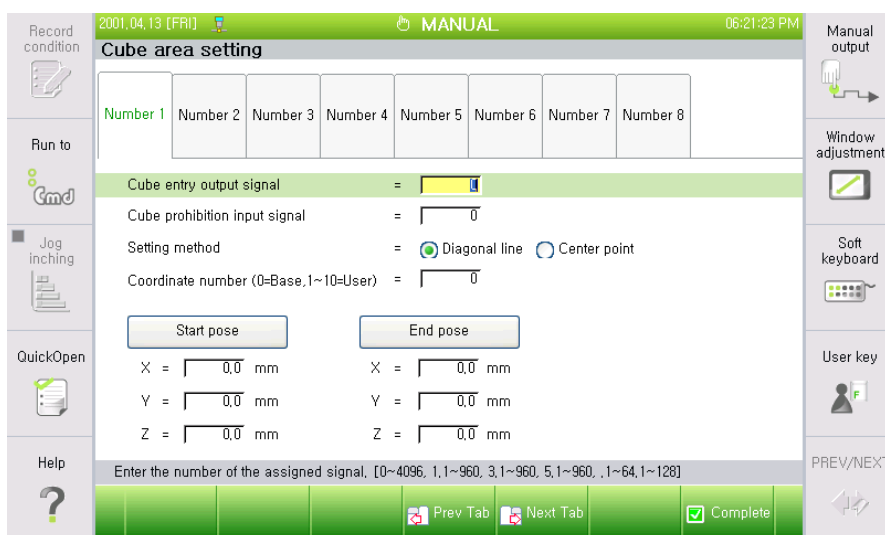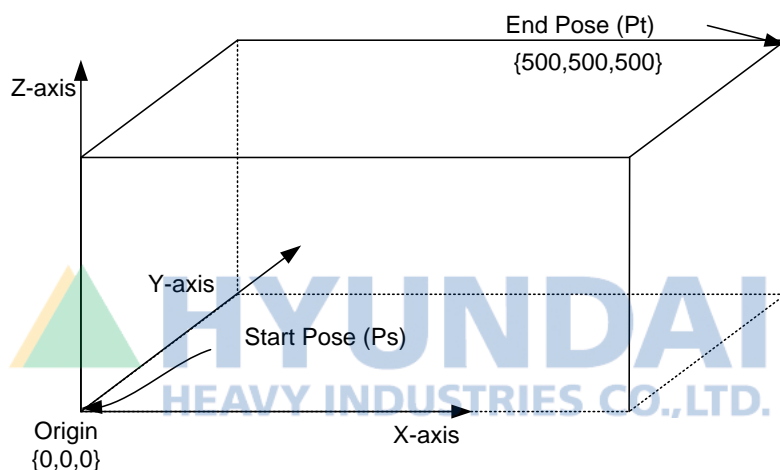


## 2. Relevant Functions

### (2) Method of Setting a Center Point


- The method of setting a Center Point is to establish the cube's Center Point and each distance in the X, Y, and Z directions, respectively.
- If recording the current robot's position as a Center Point, put a cursor on the <Central Position> button and press the 'ENTER' key.

Example)

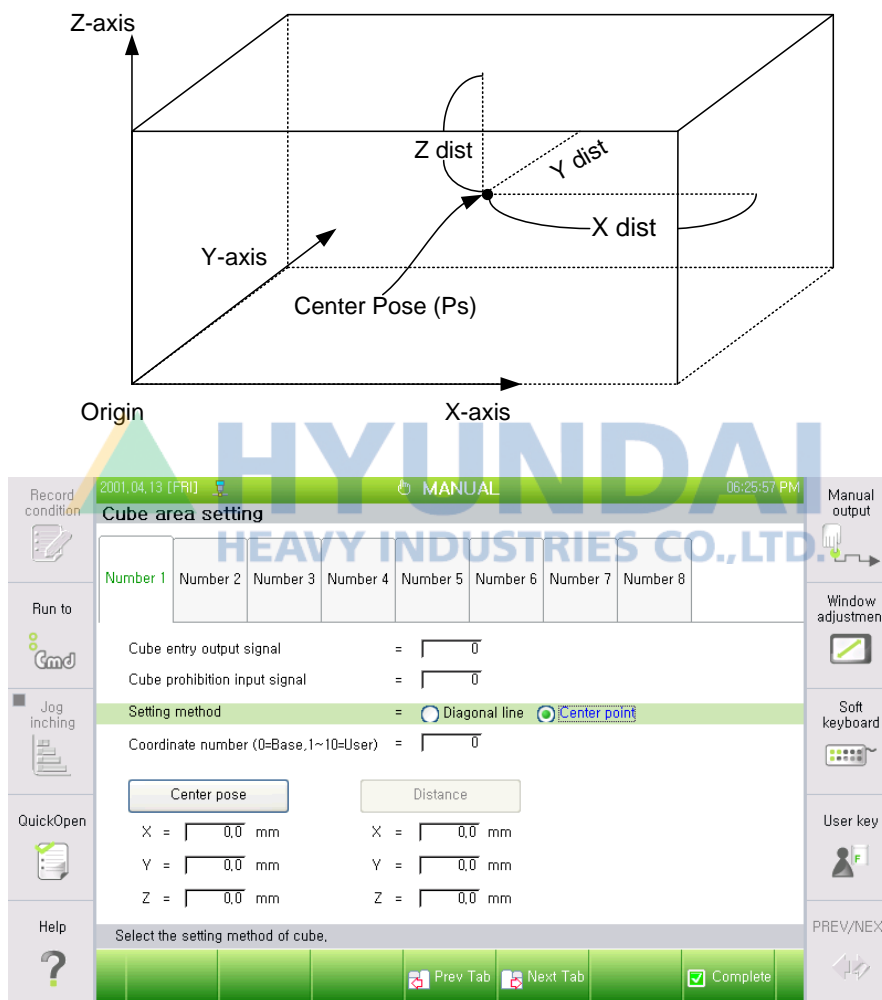

### (3) Setting a Cube in the User Coordinate System

- The cube area is created in the shape of a rectangular parallelepiped. So, if the user coordinate system is used in setting the cube, cube areas with various positions in space may be created.
- As seen in the following figures, several cubes may be established: cube 1 is set in the base coordinate system; cube 2, the user coordinate system; and cube 3, the user coordinate system 2.

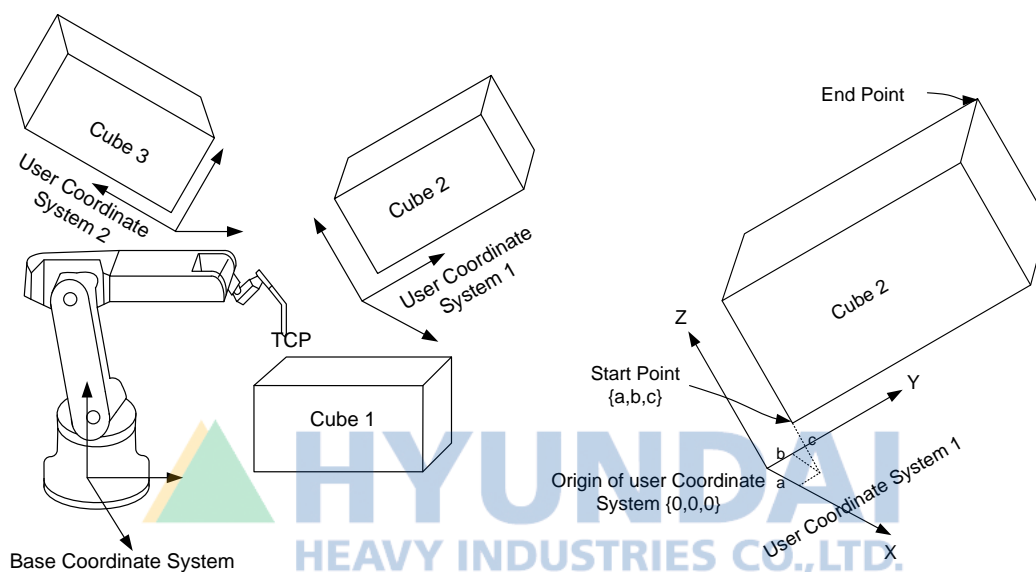

- When the user coordinate system is used in setting the cube, the diagonal and central positions shall be created in the user coordinate system.




### 2.1.2.2. Setting Cube I/O Signals

- Cube entry output signal:  
It functions for outputting a signal by detecting whether the robot has entered the cube area.  
Set up the signal number in the Output Signal of Entry into Cube.
- Cube prohibition input signal:  
Set up the signal number for other robots to receive the signal when they have entered the involved cube area.

The above two robots' common cube area is the cube 2 of robot 1 and the cube 1 of robot 2. In these cases, connect the 'Cube entry output signal' of the cube 2 of robot 1 to the 'Cube prohibition input signal' of the cube 1 of robot 2, and vice versa.



### 2.1.3. Setting Cube I/O Signals for the Common Cube area

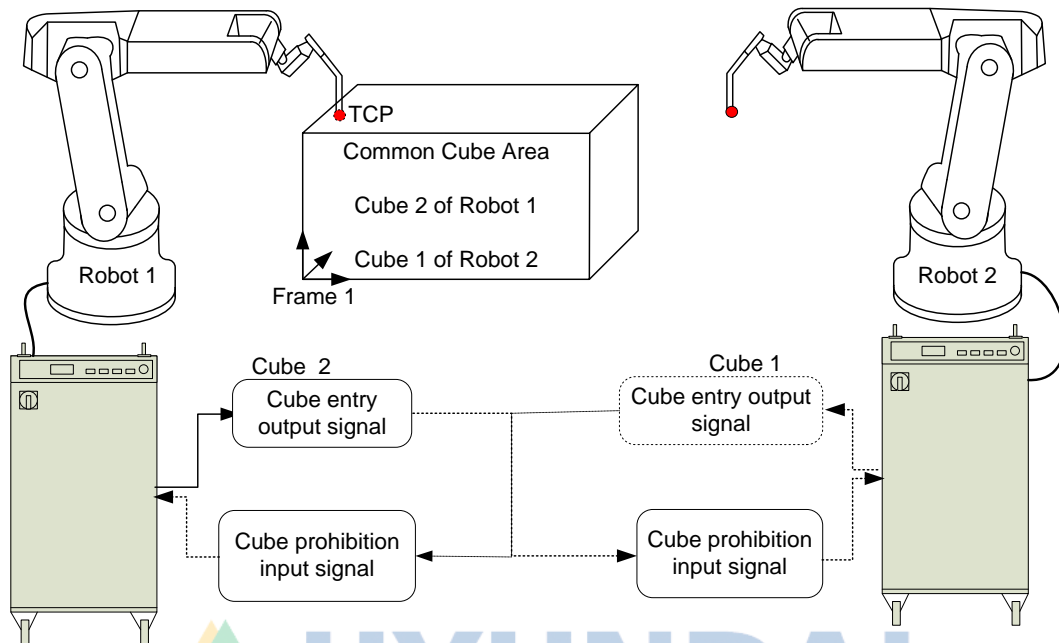


The common cube area shall be set up in the same area of each robot's space. In order to create the common area by means of the same area, first, the two robots' TCPs shall be set up precisely, then the TCPs are moved to the same position in space so as to set the cube's position (refer to the methods of setting diagonal and Center Points) and the cube's size shall be also determined in the same way.

#### **Function of automatic mutual Interlock for the common cube area**

As seen in the above figure, when the output signal of entry into cube of robot 1 is connected to the input signal of prohibiting access to cube of robot 2, and if the robot 1 is equipped with the conditions to enter the common cube prior to the robot 2, the robot 2 stops and is in a standby mode.

In the same manner, if the output signal of entry into the cube of the robot 2 is connected to the input signal of prohibiting access to cube of the robot 1 and the robot 2 is equipped with the conditions to first enter the common cube area, the robot 1 stops and is in a standby mode.

### 2.1.4. Examples of Preparing for and Running Job Programs

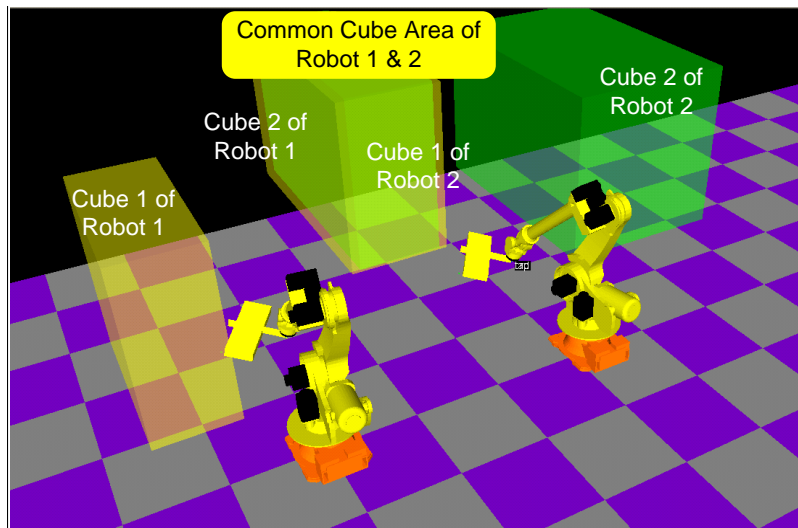

Setting Cube 2 of Robot 1

Number 1	Number 2	Number 3	Number 4	Number 5	Number 6	Number 7	Number 8
Cube entry output signal	= <input type="text" value="0"/>						
Cube prohibition input signal	= <input type="text" value="0"/>						
Setting method	= <input type="radio"/> Diagonal line <input checked="" type="radio"/> Center point						
Coordinate number (0=Base, 1~10=User)	= <input type="text" value="0"/>						

**Center pose**

X =  mm

Y =  mm

Z =  mm

**Distance**

X =  mm

Y =  mm

Z =  mm

Select the setting method of cube.

Setting Cube 1 of Robot 2

Number 1	Number 2	Number 3	Number 4	Number 5	Number 6	Number 7	Number 8
Cube entry output signal	= <input type="text" value="0"/>						
Cube prohibition input signal	= <input type="text" value="0"/>						
Setting method	= <input type="radio"/> Diagonal line <input checked="" type="radio"/> Center point						
Coordinate number (0=Base, 1~10=User)	= <input type="text" value="0"/>						

**Center pose**

X =  mm

Y =  mm

Z =  mm

**Distance**

X =  mm

Y =  mm

Z =  mm

Select the setting method of cube.

Same Size

Same Position

The same positions may have different coordinates because each robot has different base coordinate systems, but the same cube shall be set up to have the same position in space.

### 2.1.4.1. Robot 1

(1) The robot 1 is on the verge of entering the common cube area (cube 2).

→ The Cube entry output signal of the robot 1 and the Cube prohibition input signal of the counterpart (robot 2) are switched off.

#### Setting Cube Area of Robot 1

**Cube area setting**

Number 1	Number 2	Number 3	Number 4	Number 5	Number 6	Number 7	Number 8
----------	----------	----------	----------	----------	----------	----------	----------

Cube entry output signal = 0

Cube prohibition input signal = 0

Setting method = ☐ Diagonal line ☒ Center point

Coordinate number (0=Base, 1~10=User) = 0

Center pose

X = 0.0 mm

Y = 0.0 mm

Z = 0.0 mm

Distance

X = 0.0 mm

Y = 0.0 mm

Z = 0.0 mm

**Cube 2 of Robot 1**  
**Cube 1 of Robot 2**

**TCP Position**

**Robot 1**      **Robot 2**

#### Program of Robot 1

```

S3  D015=0 'CENTERING 진입 요구
    D016=1 'CENTERING 진입중
    MOVE P,S=100%,A=1,T=2
    D013=1 'VAC_ON
S4  MOVE L,S=100%,A=0,T=2
S5  MOVE P,S=100%,A=1,T=2
    D020=1 'VAC_ON CHECK
S6  MOVE P,S=100%,A=7,T=2
    D016=0 'CENTERING 진입중
    WAIT DI18=1 'VAC_ON 확인
S7  MOVE P,S=100%,A=0,T=2 → Step on the verge
    D017=1 'PRESS 진입 요구 of entering cube
    > WAIT DI21=1 'PRESS 확인
S8  D017=0 'PRESS 진입 요구
    MOVE P,S=100%,A=7,T=2 → Step that has
                             entered cube
                    
```

범용 출력신호 pg. 1/32

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40

범용 입력신호 pg. 1/32


1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40

- 1. The step on the verge of entering the cube shall be set up as a discontinuous step (A=0).
- 2. If needed, insert the commands of discontinuous motion of the step on the verge of entering the cube (WAIT, DELAY, etc.).
- 3. Because the robot 1 does not enter the cube yet, the output signal of entry into cube is switched off.
- 4. Because the signal of access prohibition is switched off, it is in the state where the entry through S8 is possible.

## 2. Relevant Functions

(2) After the robot 1 has entered the common cube area (Cube 2),

→ The Cube entry output signal of the robot 1 is switched on.

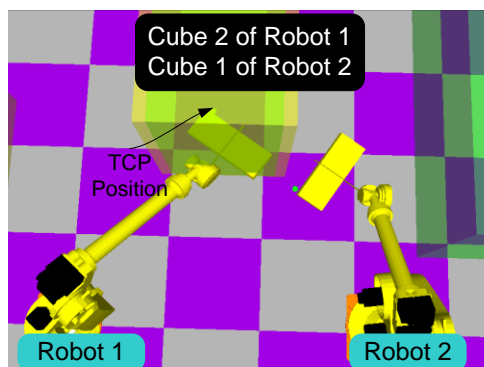


### Program of Robot 1

로봇 프로그램 --		범용 출력신호 pg.1/32	
S4	MOVE L,S=100%,A=0,T=2	1	2
S5	MOVE P,S=100%,A=1,T=2	9	10
	DO20=1 'VAC_ON CHECK	11	12
S6	MOVE P,S=100%,A=7,T=2	13	14
	DO16=0 'CENTERING 진입중	15	16
	WAIT DI18=1 'VAC_ON 확인	17	18
S7	MOVE P,S=100%,A=0,T=2	19	20
	DO17=1 'PRESS 진입 요구	21	22
	WAIT DI21=1 'PRESS 확인	23	24
S8	MOVE P,S=100%,A=7,T=2	25	26
	DO17=0 'PRESS 진입 요구 → Step entering cube	27	28
	DO18=1 'PRESS 진입중	29	30
S9	>MOVE P,S=100%,A=1,T=2 → Current Step	31	32
S10	MOVE L,S=100%,A=0,T=2	33	34
	DO13=0 'VAC_OFF	35	36

1. Because the robot 1 has entered the cube, the 'Output Signal of Entry Into Cube' is switched on.
2. The signal of access prohibition to cube is switched off because the robot 2 did not enter the cube.

(3) The robot 1 has withdrawn from the common cube area (Cube 2) and the robot 2 enters it.

→ The Cube entry output signal of the robot 1 is switched off.

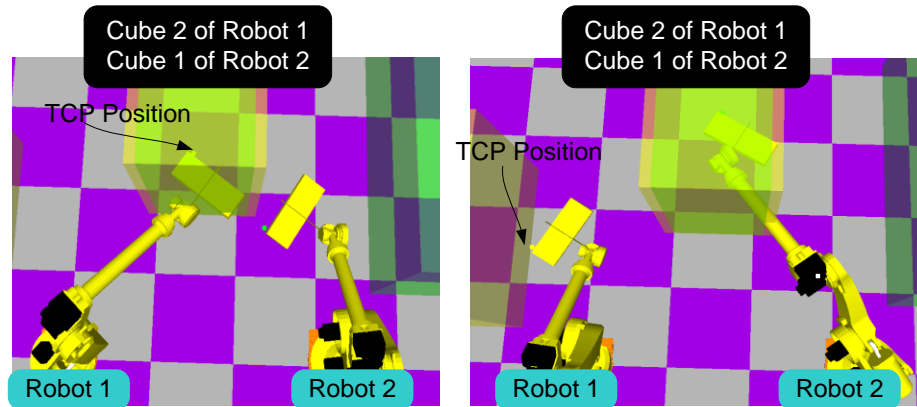

### Program of Robot 1

로봇 프로그램		범용 출력신호 pg. 1/32	
S9	MOVE P,S=100%,A=1,T=2	1	2
S10	MOVE L,S=100%,A=0,T=2	9	10
	D013=0 'VAC_OFF	17	18
	D020=0 'VAC_ON CHECK	25	26
	D014=1 'BLOW ON	33	34
S11	MOVE P,S=100%,A=1,T=2	41	42
S12	MOVE P,S=100%,A=7,T=2	49	50
	D018=0 'PRESS 진입중	57	58
	D019=1 'PRESS 타발	65	66
S13	>MOVE P,S=100%,A=7,T=2	73	74
	CONTPATH 0	81	82
	IF DI17=1 THEN S15 ELSE S14 '작업 완료	89	90
S14	MOVE P,S=100%,A=5,T=2	97	98
	GOTO S2	105	106
S15	MOVE P,S=100%,A=7,T=2 'HOME POS	113	114

1. The robot 1 has withdrawn from the cube, so the 'Output Signal of Entry into Cube' changes from switch-on to switch-off.
2. The signal of access prohibition to cube is switched on because the robot 2 has entered the cube.

### 2.1.4.2. Robot 2

(1) The Robot 2 is fully ready to enter the common cube area (Cube 1)

→ Because the robot 1 has first entered the area and is doing its job, the robot 2 automatically stops and is in a standby mode (“on standby for entry into the cube”)

#### Setting Cube 1 Area of Robot 2


큐브 영역 설정

Number 1	Number 2	Number 3	Number 4	Number 5	Number 6	Number 7	Number 8

큐브진입 출력신호 = 9  
 큐브금지 입력신호 = 4  
 설정방법 = ☐ 대각선 ☒ 중심점  
 좌표계 번호(0=Base, 1~10=User) = 0

중심위치

X = 2958.9 mm X = 1500.0 mm  
 Y = 1657.7 mm Y = 500.0 mm  
 Z = 906.3 mm Z = 1000.0 mm

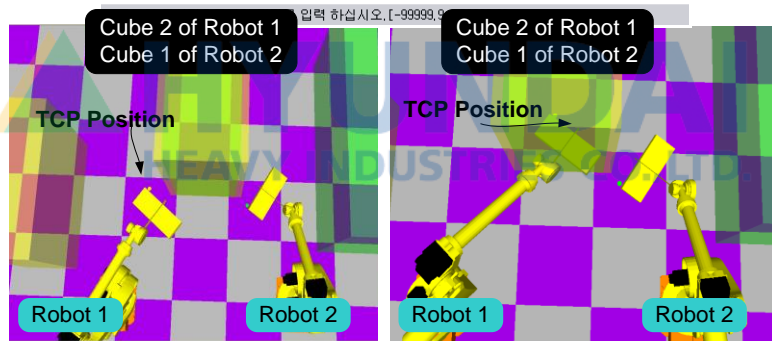

#### Program of Robot 2

로봇 프로그램 --

```

S2 MOVE P,S=100%,A=0,T=2 → step on the verge of entering cube
DO15=1 'PRESS 왼쪽 진입 요구
WAIT DI21=1 'PRESS 왼쪽 진입 요구
DO15=0 'PRESS 왼쪽 진입 종료
DO16=1 'PRESS 왼쪽 진입 중
S3 >MOVE P,S=100%,A=7,T=2 → step entering cube
S4 MOVE P,S=100%,A=1,T=2
DO13=1 'VAC_ON
S5 MOVE L,S=100%,A=0,T=2
S6 MOVE P,S=100%,A=1,T=2
S7 MOVE P,S=100%,A=7,T=2
DO20=1 'VAC_ON CHECK
S8 MOVE P,S=100%,A=7,T=2
DO16=0 'PRESS 왼쪽 진입 종료
WAIT DI21=1 'VAC_ON 확인
  
```

범용 출력신호 pg. 1/32

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48

범용 입력신호 pg. 1/32


1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48

플레이백 큐브진입대기중

1. The step on the verge of entering the cube shall be set up as a discontinuous step. (A=0).
2. If needed, insert the commands of discontinuous motion of the step on the verge of entering the cube (WAIT, DELAY, etc.).
3. Because the robot 2 does not enter the cube yet, the output signal of entry into cube is switched off.
4. Because the signal of access prohibition to cube is switched on, it is on standby for entry into S3.

(2) After the robot 1 withdrew, the robot 2 has entered the common area (Cube 1)

→ The output signal of entry into cube of robot 2 is switched on.

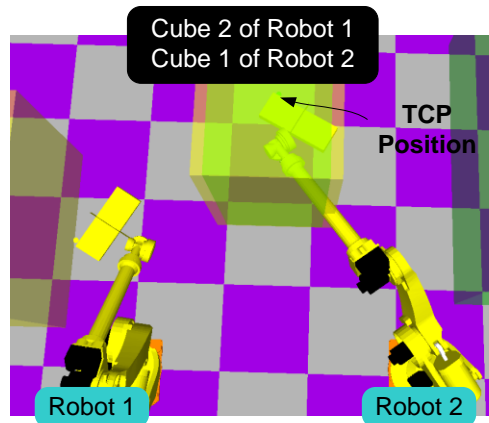

### Program of Robot 2

로봇 프로그램 __		범용 출력신호 pg. 1/32							
	. WAIT DI21=1 'PRESS 왼쪽 확인	1	2	3	4	5	6	7	8
	. DO15=0 'PRESS 왼쪽 진입 요구	9	10	11	12	13	14	15	16
	. DO16=1 'PRESS 왼쪽 진입중	17	18	19	20	21	22	23	24
S3	. MOVE P,S=100%,A=7,T=2 → Step entering cube	25	26	27	28	29	30	31	32
S4	. >MOVE P,S=100%,A=1,T=2 → Current Step	33	34	35	36	37	38	39	40
	. DO13=1 'VAC_ON	41	42	43	44	45	46	47	48
S5	. MOVE L,S=100%,A=0,T=2	49	50	51	52	53	54	55	56
S6	. MOVE P,S=100%,A=1,T=2	57	58	59	60	61	62	63	64
S7	. MOVE P,S=100%,A=7,T=2	65	66	67	68	69	70	71	72
	. DO20=1 'VAC_ON CHECK	73	74	75	76	77	78	79	80
S8	. MOVE P,S=100%,A=7,T=2	81	82	83	84	85	86	87	88
	. DO16=0 'PRESS 왼쪽 진입중	89	90	91	92	93	94	95	96
	. WAIT DI21=1 'VAC_ON 확인	97	98	99	100	101	102	103	104
S9	. MOVE P,S=100%,A=7,T=2	105	106	107	108	109	110	111	112
	. DO17=1 '아미들 진입 요구	113	114	115	116	117	118	119	120


1. Because the robot 2 has entered the cube, the 'Output Signal of Entry into Cube' is switched on.
2. The signal of access prohibition to cube has been switched off because the robot 1 withdrew from the cube.



## 2. Relevant Functions

(3) The robot 2 has withdrawn from the job area.

→ The output signal of entry into cube of robot 2 is switched off and cleared.

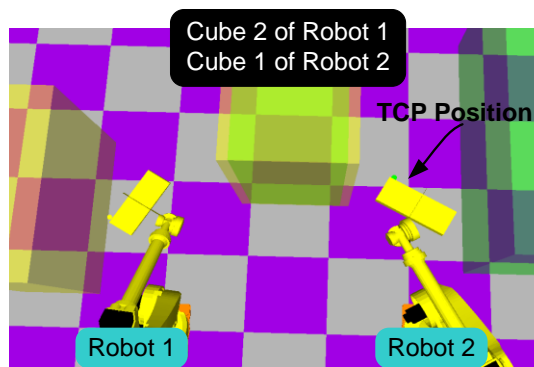

### Program of Robot 2

로봇 프로그램 --		범용 출력신호 pg. 1/32	
S3 MOVE P,S=100%,A=7,T=2 S4 MOVE P,S=100%,A=1,T=2 S5 MOVE L,S=100%,A=0,T=2 S6 MOVE P,S=100%,A=1,T=2 S7 MOVE P,S=100%,A=7,T=2 S8 MOVE P,S=100%,A=7,T=2 S9 MOVE P,S=100%,A=7,T=2	. WAIT DI21=1 'PRESS 왼쪽 확인' . DO15=0 'PRESS 왼쪽 진입 요구' . DO16=1 'PRESS 왼쪽 진입중' . DO13=1 'VAC_ON' . DO20=1 'VAC_ON CHECK' . DO16=0 'PRESS 왼쪽 진입중' . > WAIT DI21=1 'VAC_ON 확인' . DO17=1 '마미들 진입 요구'	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48	범용 입력신호 pg. 1/32 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48

1. Because it has withdrawn from the cube, the 'Output Signal of Entry into Cube' is switched off.
2. The signal of prohibition access to cube is switched off because the robot 1 did not enter the cube.

## 2.2. Error Detection

<b>Possible Causes of Errors</b>	The cause is that the signal of access prohibition to the cube is input when a robot has entered the cube.
<b>Error Message</b>	E0222 Same cube simultaneous entry detected
<b>Solutions</b>	1) Move the robot outside the cube area and restart it up. 2) Correct the program so that these errors do not occur. - Designate the step which is on the verge of entering the cube area as a discontinuous step. - Execute an additional Interlock function by using the WAIT command when the robot is on the verge of entering the cube.





- **Head Office**

Tel. 82-52-202-7901 / Fax. 82-52-202-7900  
1, Jeonha-dong, Dong-gu, Ulsan, Korea

- **A/S Center**

Tel. 82-52-202-5041 / Fax. 82-52-202-7960

- **Seoul Office**

Tel. 82-2-746-4711 / Fax. 82-2-746-4720  
140-2, Gye-dong, Jongno-gu, Seoul, Korea

- **Ansan Office**

Tel. 82-31-409-4945 / Fax. 82-31-409-4946  
1431-2, Sa-dong, Sangnok-gu, Ansan-si, Gyeonggi-do, Korea

- **Cheonan Office**

Tel. 82-41-576-4294 / Fax. 82-41-576-4296  
355-15, Daga-dong, Cheonan-si, Chungcheongnam-do, Korea

- **Daegu Office**

Tel. 82-53-746-6232 / Fax. 82-53-746-6231  
223-5, Beomeo 2-dong, Suseong-gu, Daegu, Korea

- **Gwangju Office**

Tel. 82-62-363-5272 / Fax. 82-62-363-5273  
415-2, Nongseong-dong, Seo-gu, Gwangju, Korea

- **본사**

Tel. 052-202-7901 / Fax. 052-202-7900  
울산광역시 동구 전하동 1번지

- **A/S 센터**

Tel. 82-52-202-5041 / Fax. 82-52-202-7960

- **서울 사무소**

Tel. 02-746-4711 / Fax. 02-746-4720  
서울특별시 종로구 계동 140-2번지

- **안산 사무소**

Tel. 031-409-4945 / Fax. 031-409-4946  
경기도 안산시 상록구 사동 1431-2번지

- **천안 사무소**

Tel. 041-576-4294 / Fax. 041-576-4296  
충남 천안시 다가동 355-15번지

- **대구 사무소**

Tel. 053-746-6232 / Fax. 053-746-6231  
대구광역시 수성구 범어 2동 223-5번지

- **광주 사무소**

Tel. 062-363-5272 / Fax. 062-363-5273  
광주광역시 서구 농성동 415-2번지