



Panel Socket Adapters (PS Series)



DESCRIPTION

PS9-F-AC2-ETH with Accuenergy Acuvim II with fuses, Ethernet & 485

The Panel Socket Meter Adapters (PS series) allow the user the ability to install an Accuenergy panel meter into any socket meter location. The installation is the same as any socket meter installation. Easy installation translates into lower labor costs, which makes the meter upgrade feasible for many applications. For indoor use only.

With this solution, all the existing panel or socket based meters can now be replaced with the exact same new panel meter. Convenient user accessible fuses allow new electronic meter to be protected. Using the same meter for panel and socket retrofits is a huge advantage.

These adapters are among the newest additions to SUSI's comprehensive patented Panel Adapter products.

ADVANTAGES

- Easy installation. No re-wiring, just plug the meter into the socket
- Retrofits into any socket meter installation
- Fuse Protected (User Accessible)
- All the meter applications will use the same hardware, spare parts and software
- Lower initial and replacement costs
- Easier to maintain only one type of meter
- Reduces meter and spare part inventory
- Easy access to meter controls. No cover to deal with
- Excellent indoor-rated solution


- ***Easy installation.
No re-wiring***
- ***Cost-effective solution
that allows end-users to
replace socket meters
with panel meters***
- ***Easy access to meter
controls, no cover to
deal with***
- ***Provides an excellent
indoor-rated solution***
- ***Fuse Protected***




PRODUCT AVAILABILITY

Panel based meter will fit into these adapters.

- Available forms are 5S, 6S, and 9S (2, 2 1/2 and 3 elements).
- Contact SUSI Adapters for non-standard installations.

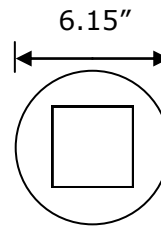

Front View
PS_-AC2

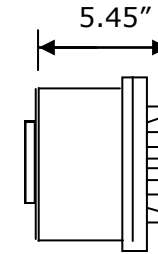


Side View
PS_-AC2

SUSI Part Numbers

<u>SUSI PN</u>	<u>Meter Form</u>	<u>New meter plugging into adapter</u>
PS5-F-AC2	5	Any Accuenergy Acuvim series panel meter with fuses
PS6-F-AC2	6	Any Accuenergy Acuvim series panel meter with fuses
PS9-F-AC2	9	Any Accuenergy Acuvim series panel meter with fuses
PS5-F-AC2-ETH	5	Any Accuenergy Acuvim series panel meter with fuses and Ethernet
PS6-F-AC2-ETH	6	Any Accuenergy Acuvim series panel meter with fuses and Ethernet
PS9-F-AC2-ETH	9	Any Accuenergy Acuvim series panel meter with fuses and Ethernet
PS5-F-AC2-ETH-485	5	Any Accuenergy Acuvim series panel meter with fuses, Ethernet, and 485
PS6-F-AC2-ETH-485	6	Any Accuenergy Acuvim series panel meter with fuses, Ethernet, and 485
PS9-F-AC2-ETH-485	9	Any Accuenergy Acuvim series panel meter with fuses, Ethernet, and 485

Options

- Add "-F" to part number for fuses.
- Specify which panel meter options to bring out of socket meter.
- Add "-ETH" to part number for Ethernet
- Add "-485" to part number for 485 connection

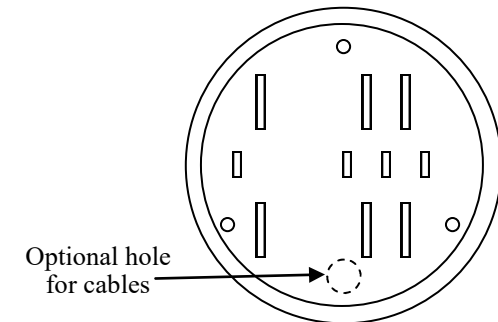

Back View
PS9-AC2