




VicBooth **Ultra**

Installation Manual


V/COUSTIC

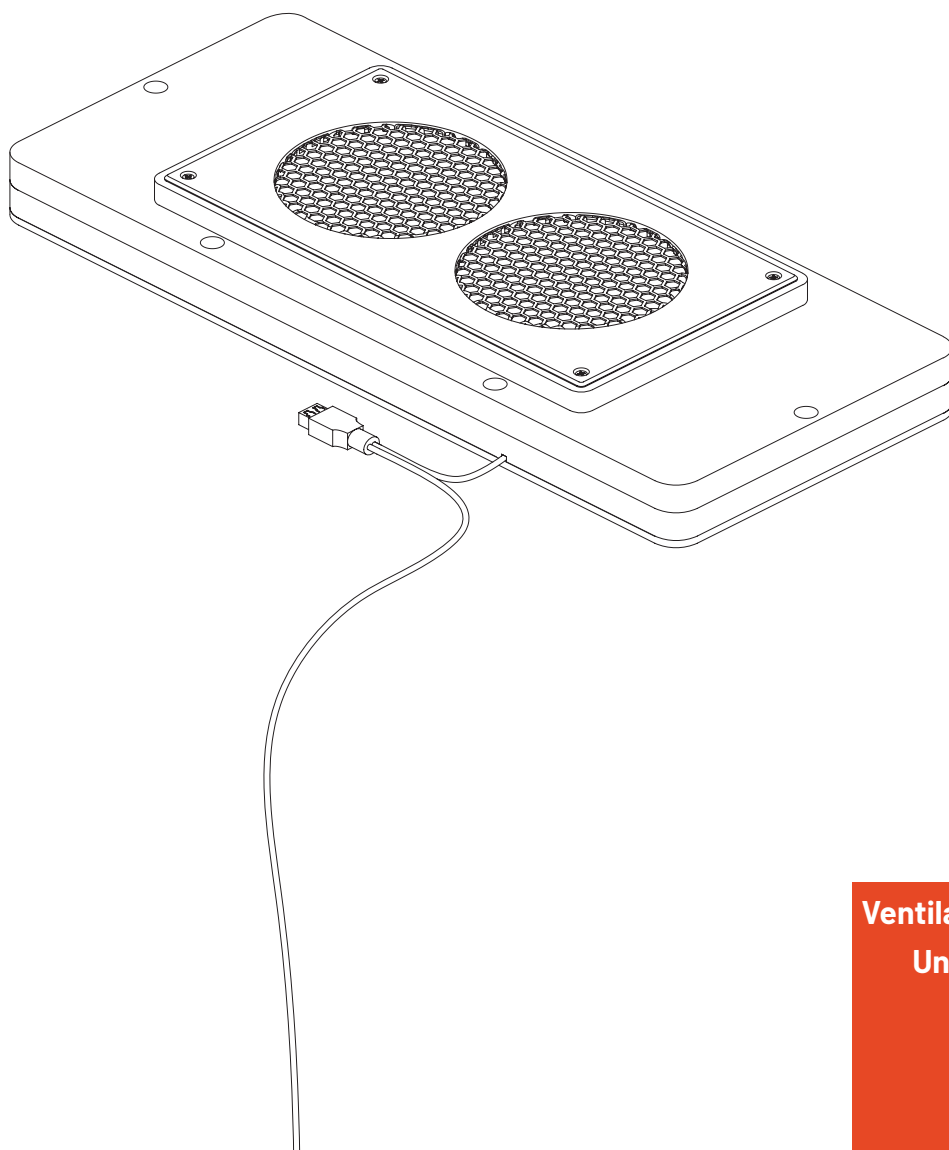


**Ventilation
Unit**

Material Needed


Included

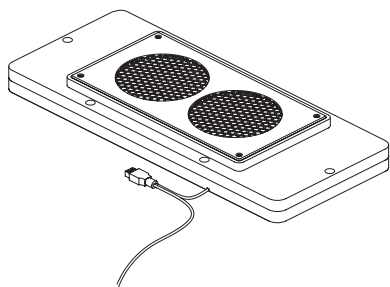


Ventilation unit | 1 uni.

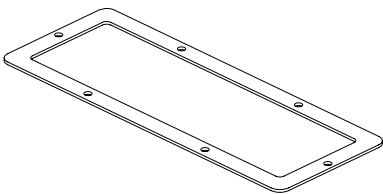


Insulation Seal | 1 uni.

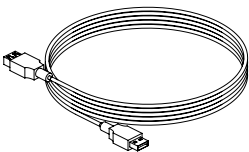

USB extension cable (3m) | 1 uni.

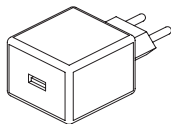

USB power adapter | 1 uni.

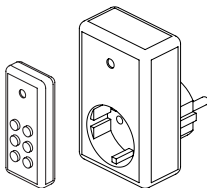


Remote control electrical outlet | 1 uni.




Fixing screws | 6 uni.

Not included

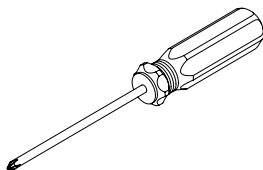


6mm Phillips Screwdriver


- 1 Start by placing the Insulation seal on the ceiling of the VicBooth Ultra.

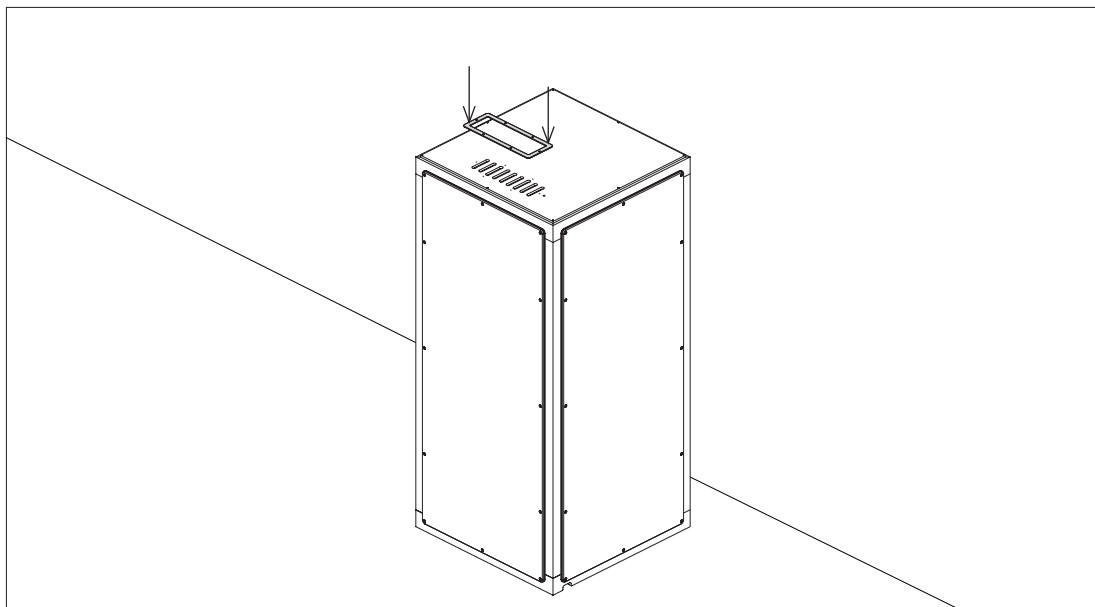

- 2 Place the Ventilation unit aligned with the Insulation seal and the fixing holes.

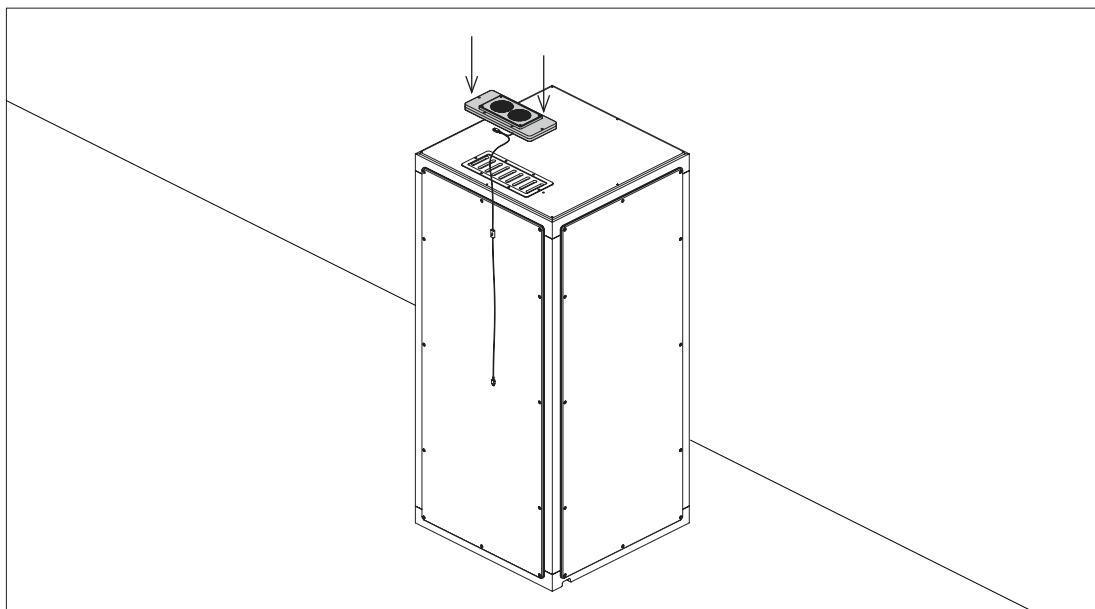


- 3 Fix the Ventilation unit using the included screws (P) and a 6mm Phillips Screwdriver.


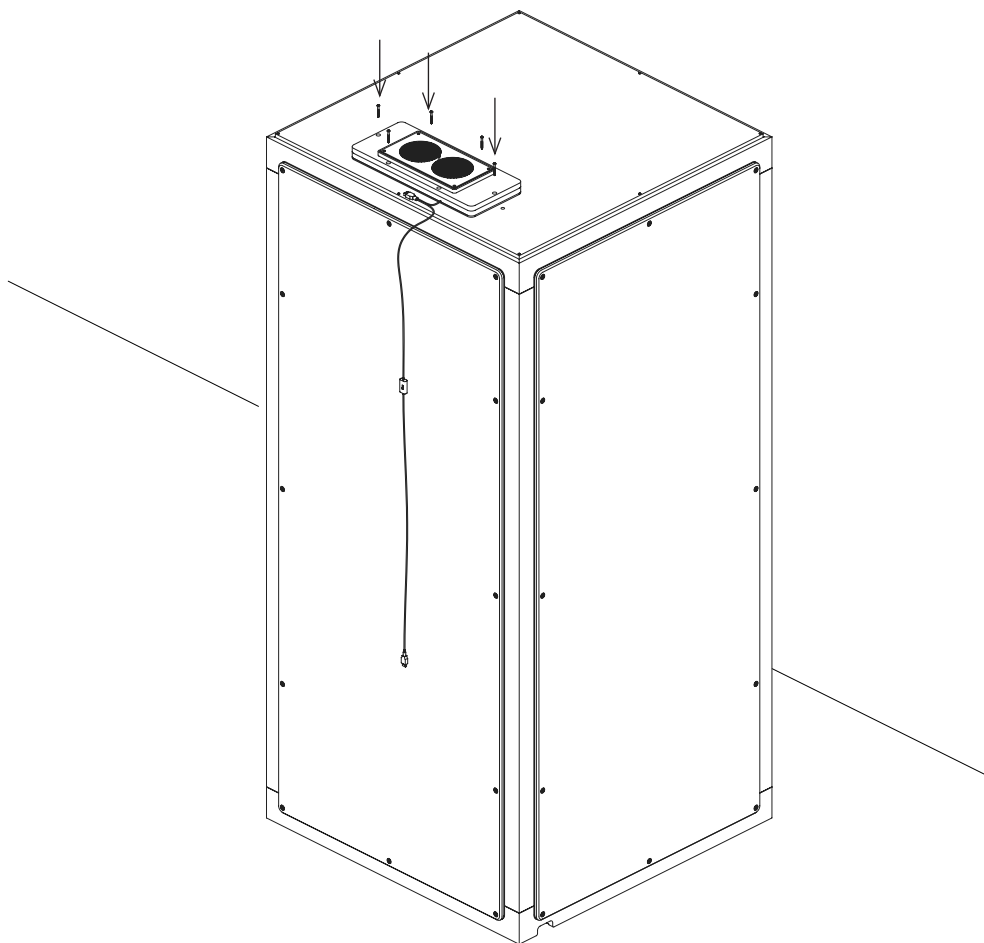


Step's Material


P

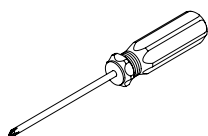



6mm Phillips Screwdriver

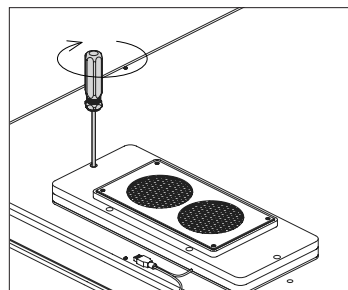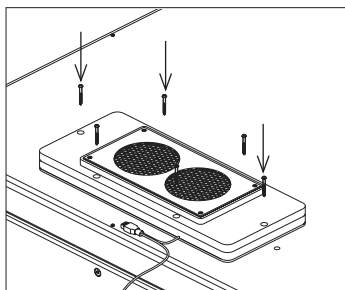


4 Connect the included USB extension.

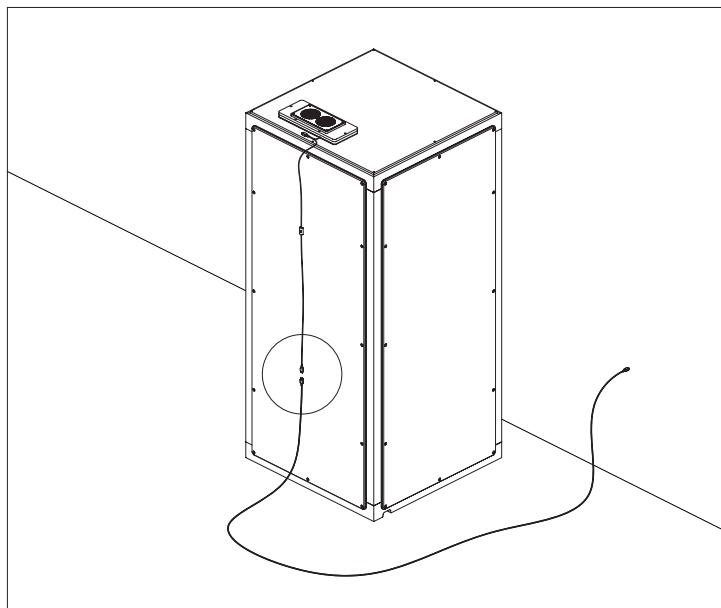



Step's Material

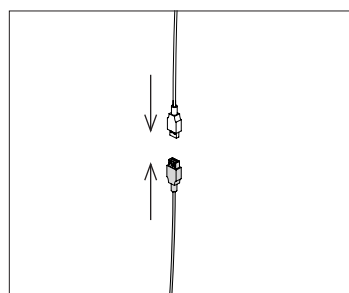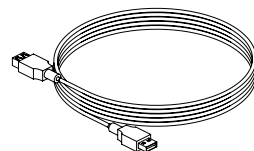


5 Connect the Remote Control Electrical Outlet and the USB power adapter to a wall socket.
You can switch the fan ON and OFF from inside the cabin using the remote control.

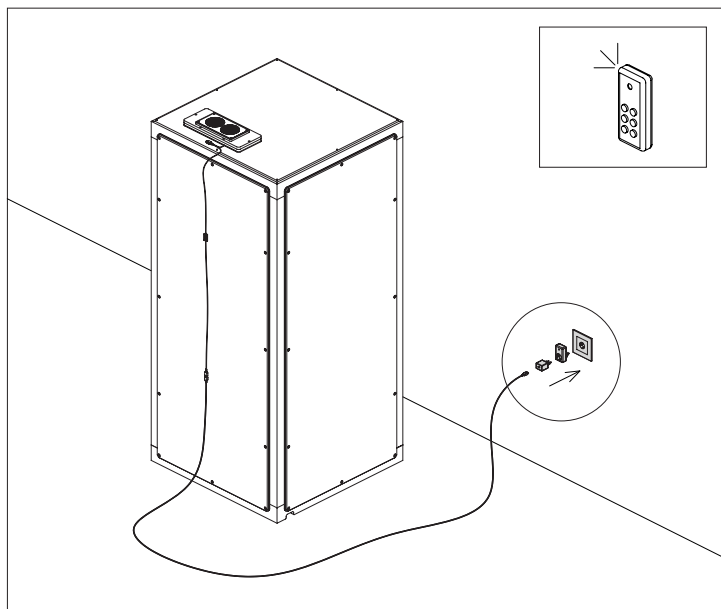




Step's Material

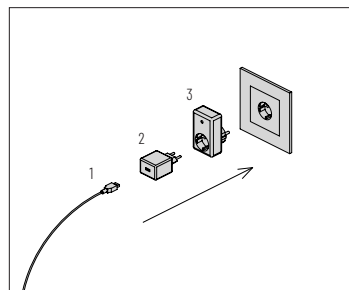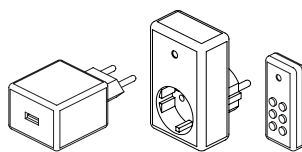

! We recommend that the speed controller should be set to the maximum speed (H).

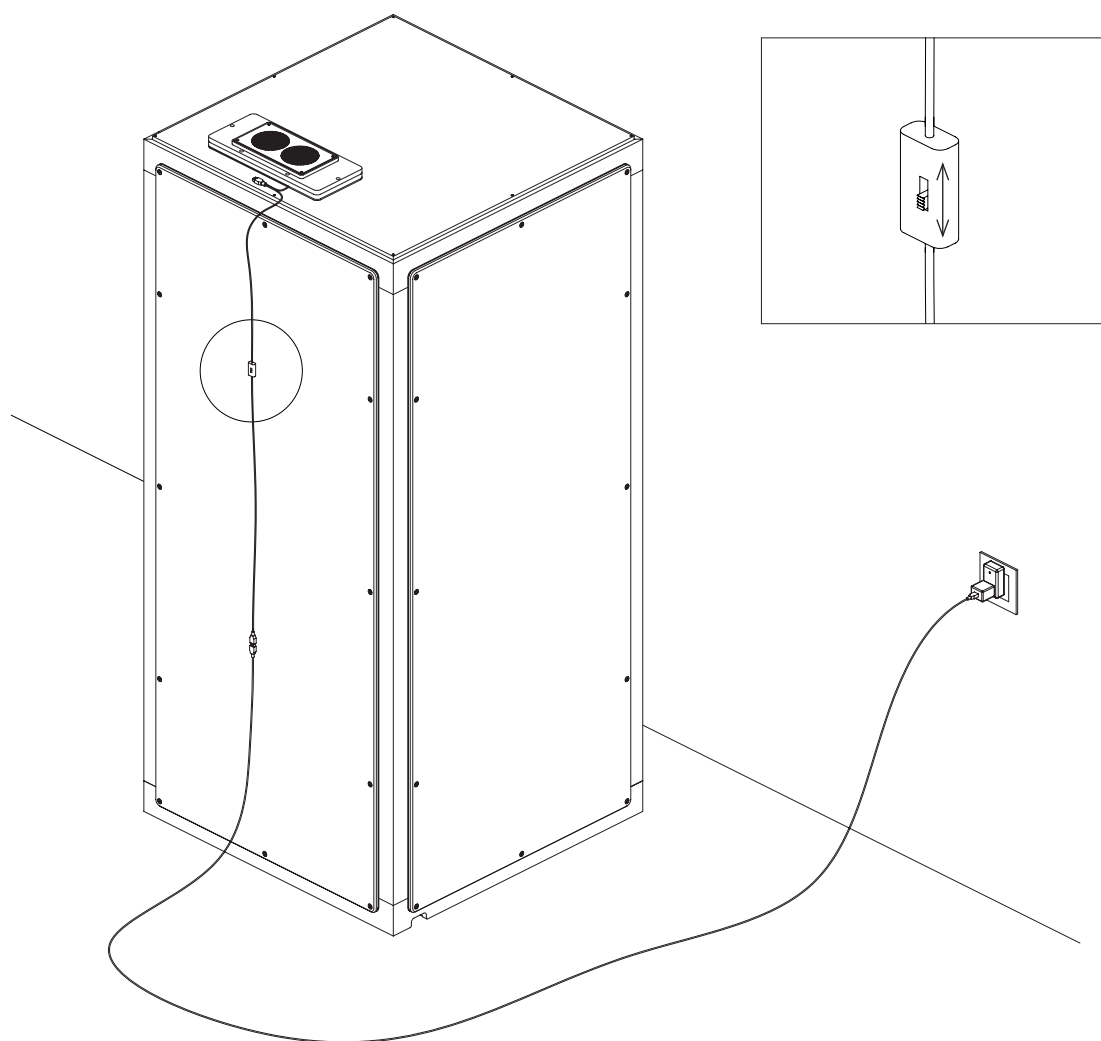

- 6 Up to two ventilators can share the same USB power source and must have their inline speed controller set to high to prevent overload.

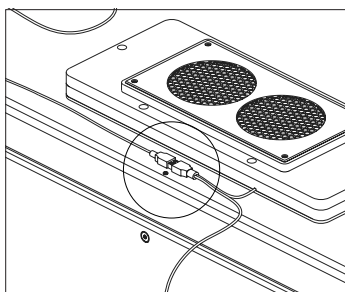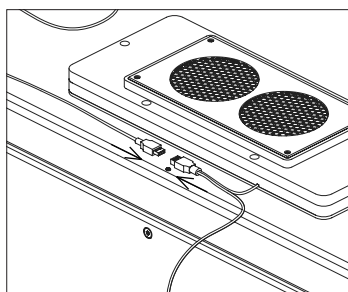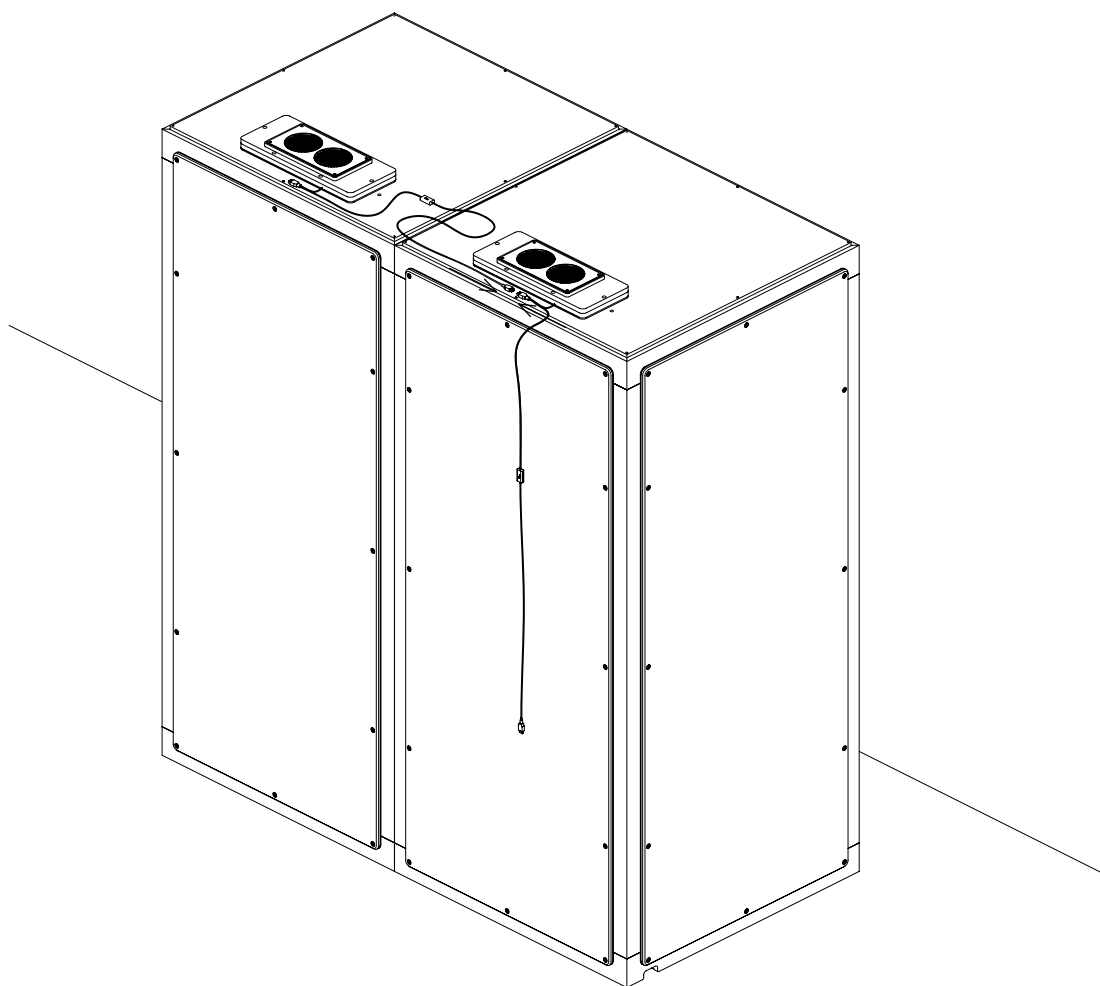

**Main Office, R&D & Logistics**

Avenida do Pólo 3, N.º 159, Carvalhosa
4590-137 Paços de Ferreira, Portugal

Office

Rua Quinta do Bom Retiro N.º 16, Armazém 9
2820-690 Charneca da Caparica, Portugal
T (+351) 212 964 100

Info and Sales

E sales@vicoustic.com

www.vicoustic.com

© Vicoustic, 2020 | V2

No parts of this document might be copied and/or
published without written consent of Vicoustic.