

Wireless Handheld Barcode Scanner with Base V-HHBS-A1B

160 mm

COUNTRY KEYBOARD LAYOUT

Note: Keyboard layouts vary from country to country. The default setting is U.S. keyboard.



United States (default)



German



France



Spain



Italy



Japan



International universal keyboard



Portugal



United Kingdom



Brazil (Portuguese)



Russia

Note 1: How to use the setting barcode: You only need to find the barcode with the required function in the setting barcode and scan it once. If the buzzer beeps, it indicates that the scanning is successful.

Note 2: For additional information on using the scanner, please contact the vendor for a complete user manual.

5. Troubleshooting

Serial NO.	Problem	Possible Causes	Solution
1	Unable to connect device	Scanner battery is low	Check the battery before use and then connect
		Did not follow the connection steps	Please follow the file steps for configuration settings
2	Scanner does not decode barcodes	This type of symbology is not enabled	Enable the symbology by scanning setting barcode.
		The Barcode is defaced	Scan other barcodes of the same barcode type
		The Barcode is defaced	Scan other barcodes of the same barcode type
3	Host displays scanned data incorrectly	Host Input method is not matching	Set up English keyboard on host
		Other settings have been made to the scanner	Restore the scanner parameters to the factory settings or contact your barcode scanner vendor
4	Host displays scanned data incorrectly	The scanner's keyboard language is not same as the host keyboard language	Make sure that the PC or smartphone keyboard language is the same as barcode scanner language
5	Scanner is not reading any barcode	Device conversion error	Restart the scanner and restore it to factory default

Notice

- Don't disassemble the protective cover by yourself to avoid direct beams of light to your eyes.
- Prohibit disassembly, impact, etc. If there is serious swelling, please don't continue to use.
- If it needs to be disassembled, adjusted or repaired, please refer to professionals.
- Don't expose the device to high temperatures.

90 mm

90 mm

VOLCORA

Wireless Handheld Barcode Scanner with Base Quick Reference Guide

Certificate

After testing, this product meets our standards

Product Warranty Card

Name	TEL	ZIP CODE
Purchase Date	Product Name & Model	
Address		

Maintenance Record

Date	Maintenance Content	Replace Parts		Repairman
		Name	Quantity	

Model: V-HHBS-A1B

Dear Users:
Thank you for choosing our products. We will provide you with high-quality products and considerate services. For better use of this product, please read this manual carefully before use.

W-V3

1. 2.4G Wireless Mode

For scanner with 2.4G wireless function. Wireless 2.4G mode supports windows, Mac OS, Linux, Unix, Android and other systems through dongle.

Step 1: Scan 2.4G wireless mode barcode. Scanner will pair with previous dongle by default.



2.4G Wireless Mode

Step 2: Scan Quick Pair barcode. The indicator light will flicker.



Quick Pair

Step 3: Plug in the dongle with the host device (within 60 seconds). If pair successfully, you will hear a beep and the indicator light is always on.

2. Bluetooth HID Mode

For scanner with Bluetooth function. Bluetooth HID mode is compatible with Windows, MAC, OS, IOS, Android operating systems.

Step 1: Scan Bluetooth HID Mode barcode. The scanner will pair with previous host by default.



Bluetooth HID Mode

Step 2: Scan Quick Pair barcode. The barcode scanner indicator light flashes rapidly, enter the Bluetooth HID pairing state.



Quick Pair

Step 3: Search for and select the Bluetooth device "Barcode Scanner-HID" on the host device. If pair successfully, you will hear a beep and indicator light flashes.

3. Bluetooth SPP/BLE Mode

For scanner with Bluetooth function. Wireless Bluetooth SPP/BLE Mode are compatible with Windows, MAC OS, IOS, Android operating systems.

Step 1: Scan Bluetooth SPP Mode or Bluetooth BLE Mode barcode. The barcode scanner indicator light flashes rapidly, when setting the Bluetooth SPP or BLE mode, the barcode reader will automatically enter the broadcast state.



Bluetooth SPP mode



Bluetooth BLE mode

Step 2: Search and select the Bluetooth device Barcode Scanner SPP or Barcode Scanner BLE on the host device. If pair successfully, you will hear a beep and the indicator light is always on.

4. Common settings

SYSTEM SETTINGS



Restore factory settings



Version Number

BATCH/STORAGE MODE



Real time mode (Default)



Storage Mode



Transmit All Stored Barcodes



Total Stored Amount



Clean Stored Barcodes



Manual Trigger Mode



Auto Scanning Mode

TERMINATOR SUFFIX



<Data><CR> (Default)



<Data><TAB>



No terminator suffix

Vibration (optional)



Vibration on (Default)



Vibration off

SCANNER POWER TIME-OUT TIMER



Time-out immediately



Time-out after 1min



Time-out after 5min



Time-out after 30min



No Time-out

160 mm

360 mm