

# INSTRUCTION SHEET

## HARDWARE CONTENTS

AA




Mounting Screw  
X2

BB




Wire Connector  
X2

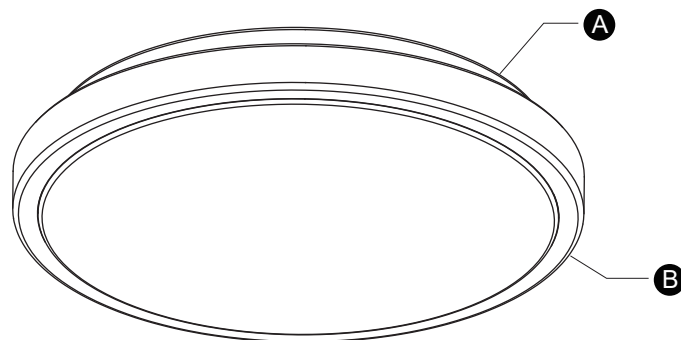

## ASSEMBLY INSTRUCTIONS


Turn off the power at fuse or circuit box.

1. Attach the two mounting screws (AA) to the holes on outlet box, thread them in part way: 2 to 3 turns only.

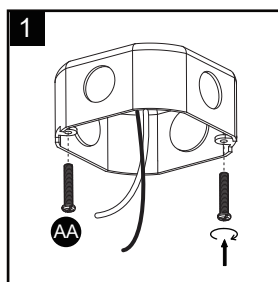


3. Pull out the source wires from the outlet box, thread them through the big hole of the ceiling pan (A).

Attach the ceiling pan (A) to the outlet box by inserting two mounting screw (AA) heads into the key holes, then slide the ceiling pan until it is locked in place.

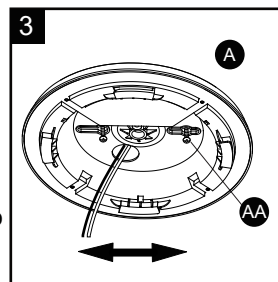


5. Connect the black wire to black (power) wire, white wire to white (neutral) wire with supplied wire connectors (BB). Tuck all wires into outlet box. Then secure the mounting screws tightly with screwdriver (not included).


Finally connect the Female Connector to the Male Connector.

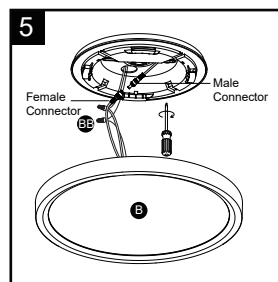


2. Slide the Ceiling pan (A) until it separate from the plastic shade (B). Pull out the Male connector from the Female connector.

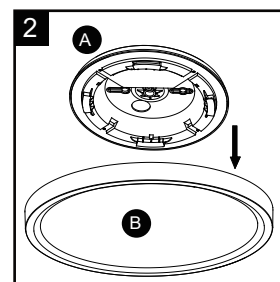

4. Please set your desired color temperature before installation.

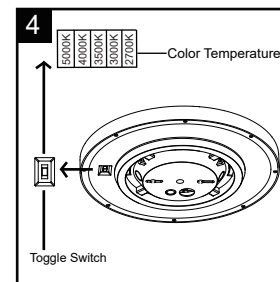


6. Attach the main body (B) to the ceiling pan (A) by aligning studs and slots, then turn it clockwise until it is locked in place. Turn on the power at fuse or circuit box.

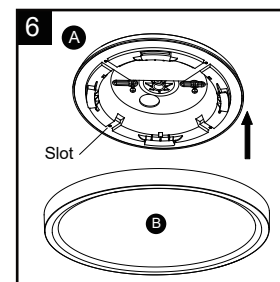


## Selecting Main Light / Night Light Mode

7

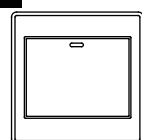

Wall Switch

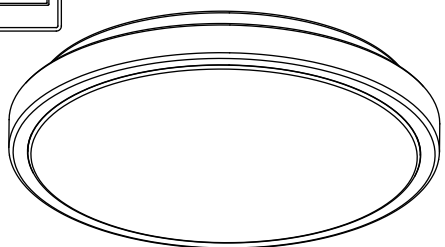

1. Switch once, main light turns on.
2. Switch twice, night light turns on.
3. Switch three times, main light and night light turn on at the same time.
4. In case of any out-of-step, switch the wall switch off then back on again for 2 times within 1 seconds, all light fixtures connected in a same electrical circuit will reset to main light mode.
5. The light has memory function  
When the light turns off for more than 7 seconds, the memory function will initiate and keeps the same setting when the light turns back on.