

Wall Light Series LED Wall Sconce Light

PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION


- To prevent personal injury or product damage only licensed electricians should install.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- Disconnect product and allow cooling prior to servicing.
- Any alteration or modification and/or electrical shock this product is forbidden as it may cause personal injury, death
- propertydamage and/or product malfunction.
- This luminaire is designed to operate in ambient temperatures ranging from -20 \degree to 40 \degree (-4 \degree to 104 \degree)
- MIN 75 °C SUPPLY CONDUCTORS.
- CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.

 
Mounting Bracket

 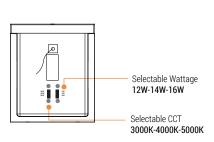


 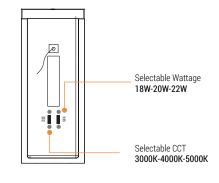


Dimensions

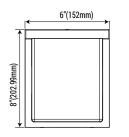











Installation Method A

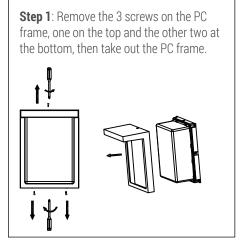

 Step 2: Remove the screws on both sides of the light, and take out the installation bracket.



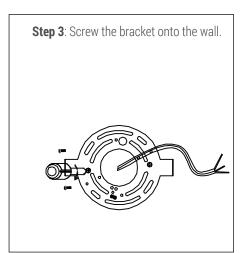

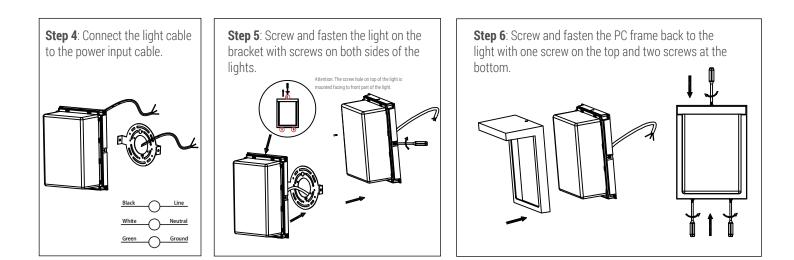

Installation Method B

