
7. Push the lamp body against the installation plane in the direction of the safety rope relaxation until it cannot be pushed, and the installation of the lamp is completed.

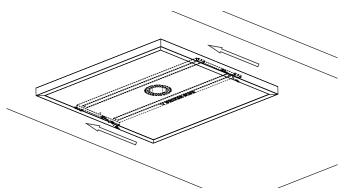







THE INSTALLATION MUST ONLY BE PERFORMED BY A LICENSED ELECTRICIAN. TO PREVENT DEATH, INJURY OR DAMAGE TO PROPERTY, THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE TO NATIONAL ELECTRIC CODE (NFPA70) IN THE US OR CANADIAN ELECTRICAL CODE (CSA22.1) IN CANADA.

CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR. SUITABLE FOR DAMP LOCATIONS. SUITABLE FOR OPERATION IN AMBIENT NOT EXCEEDING 45°C (113°F). VAPOR BARRIER MUST BE SUITABLE FOR 90°C (194°F). ACCESS ABOVE CEILING REQUIRED. CAUTION - RISK OF FIRE. MIN 75°C (167°F) SUPPLY CONDUCTORS.

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards please read all warnings and instructions included with and on the fixture box and all fixture labels.
- · Follow all manufacturer's warnings, recommendations and restrictions for: driver type, burning position, mounting locations/methods, replacement and recycling.
- Wear gloves and safety glasses at all times when removing luminaire from carton, installing, servicing or performing maintenance.
- Disconnect or turn off power before installation or servicing the luminaire.
- · Allow lamp/fixture to cool before handling.
- · Do not exceed maximum wattage marked on the label.
- Do not operate in close proximity to persons, combustible materials or substances affected by heat or drying.
- · Verify that supply voltage is correct by comparing it with the label information.
- Wiring connections should be capped with UL-approved wire connectors.
- DO NOT INSTALL DAMAGED PRODUCT! This luminaire has been properly packed so that no parts should have been damaged during transit. Inspect to confirm. Any part damaged during or after assembly should be replaced.
- Maintenance of the luminaires should be performed by person(s) familiar with the luminaires' construction and operation and any hazards involved. Regular fixture maintenance programs are recommended.
- · It will occasionally be necessary to clean the outside of the refractor/lens. Frequency of cleaning will depend on ambient dirt level and minimum light output which is acceptable to user. Refractor/lens should be washed in a solution of warm water and any mild, non-abrasive household detergent, rinsed with clean water and wiped dry.
- · Should optical assembly become dirty on the inside, wipe refractor/lens and clean in above manner, replacing damaged gaskets as necessary.
- These instructions do not purport to cover all details or variations in equipment nor to provide every possible contingency to meet in connection with installation, operation, or maintenance.

WESTGATE




WESTGATE




INSTALLATION INSTRUCTIONS


1. The words 'driver sides' are on the same side as driver, align the cable holes of the carrier board with the junction box.

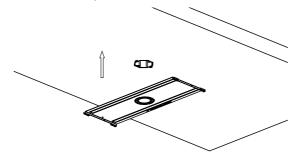


2. After the carrier plate is flattened to the ceiling, the four corner screws are locked.

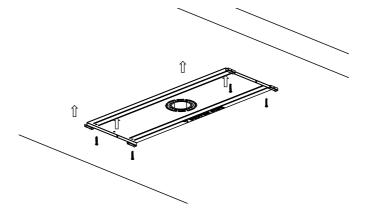


3. Use the safety rope that comes with the lamp to hang the lamp on the carrier board, and the lamp will be tilted to one side at this time.

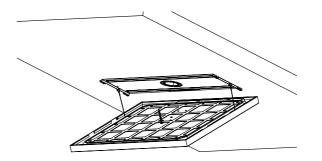


4. Connect the wire.

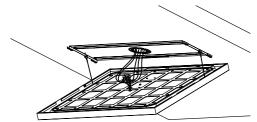

5. After wiring, plug the wire back into the junction box on the mounting plane.

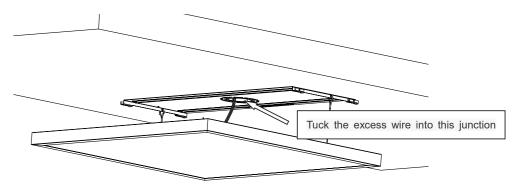

6. Align the aluminum frame notch of the lamp body to the U-shaped fold of the carrier board, and tighten the safety rope, and the aluminum frame notch will automatically align with the U-shaped fold of the carrier board. Place the lamp body flat on the mounting plane.

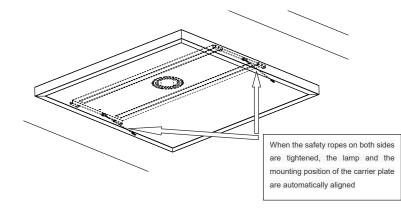

WESTGATE

Phone: (877) 805-2252 | Fax: (877) 805-2252 www.westgatemfg.com



