


Special functions instruction:

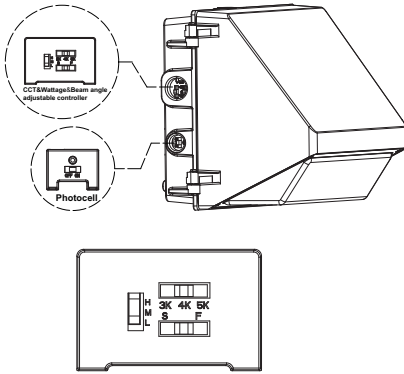

Color temperature adjustable instruction

1. The color temperature of the lamp turns to 3000K when the DIP switch is set to 3K;
2. The color temperature of the lamp turns to 4000K when the DIP switch is set to 4K;
3. The color temperature of the lamp turns to 5000K when the DIP switch is set to 5K;

Wattage adjustable instruction

The power of the lamp will be changed accordingly when the DIP switch is set to L/M/H;
Adjustable wattage range: 25%-100%.


LED switch instruction

Only the Bottom Led will light up when the DIP switch is set to F;
Both the Bottom Led and Front Led will light up when the DIP switch is set to S;
Note: Please turn off the power before adjusting any function.

Photocell:

1. Set the DIP switch to "ON" will active the function of photocell.
2. Set the DIP switch to "OFF" will inactive the function of photocell.

Accessories

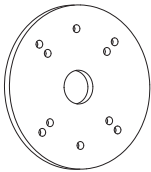

LED Wall Pack Light Installation Instruction

Applications:


Tunnel (except for motor vehicle tunnel), workshop, warehouse, factory, house, building exterior, etc.

Cautions:


1. Do not use an electric generator to test the LED fixture.
2. Please abide by related country, regional and local law and regulations when installing this fixture;
3. Do not install the fixture in raining days to avoid electrical shock or damage.

Notes:


1. To avoid possibility of electrical shock or fire, the installation personnel must have professional electric knowledge;
2. Please wear gloves to avoid injury before installation;
3. If at some point during or after installation you should notice smoke or fire coming from the fixture, turn the power off immediately and notify an electrician.
4. This fixture is available for outdoor use. The recommended minimum distance from the fixture to ground is 2 meters.

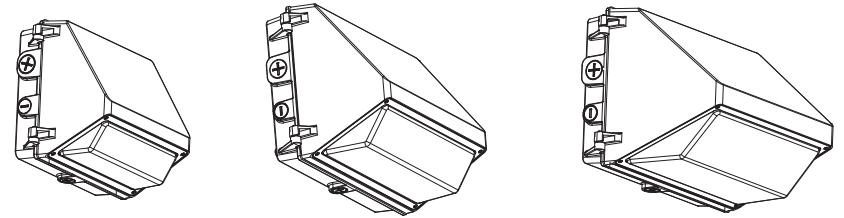


Installation:

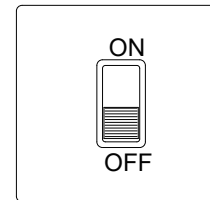


1. Turn power off.

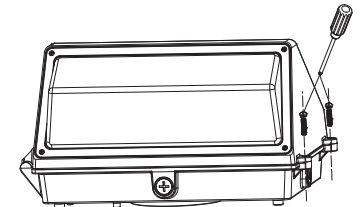


2. Use a screwdriver to remove the screws on both sides.

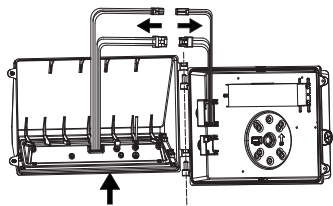


3. Open the fixture, disconnect the connection terminals, and remove the upper cover from the fixture.

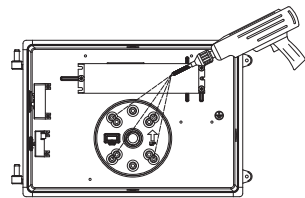


4.1.1 Drill through the mounting hole with an electric drill.

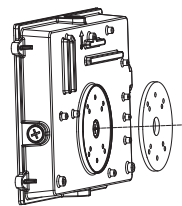


4.2.3 Attach EVA cotton pad to bottom shell, use a screwdriver to remove the plug.

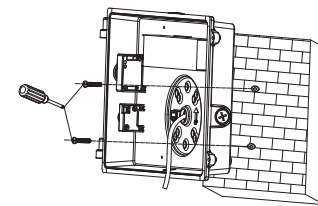


4.2.4 Attach the bottom shell on the mounting seat with screws.

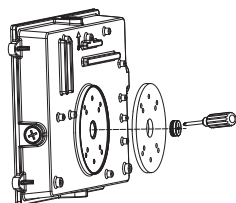


4.1.2 Attach EVA cotton pad to bottom shell, use a screwdriver to remove the plug.

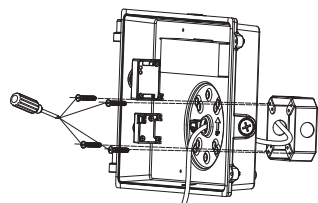


4.1.3 Attach the bottom shell on the mounting seat with screws.

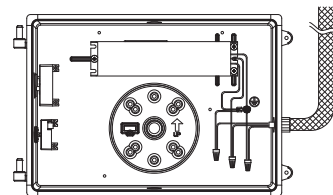


4.2.5 Connect corresponding positive, negative, and ground wires correctly.

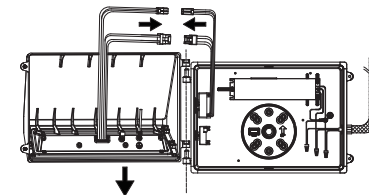


4.2.6 Reconnect the terminals.

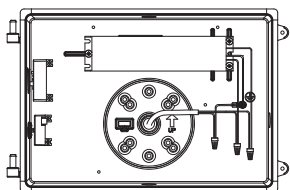


4.1.4 Connect corresponding positive, negative, and ground wires correctly.

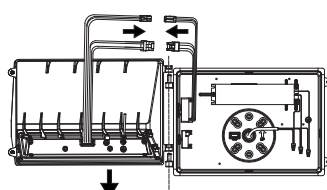


4.1.5 Reconnect the terminals.

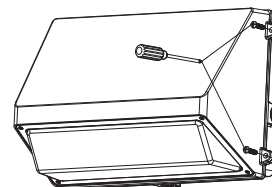


5. Close the front cover of the fixture and fix it with screws.

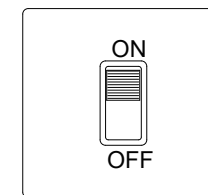

6. Make sure the installation is complete before turning power back on.

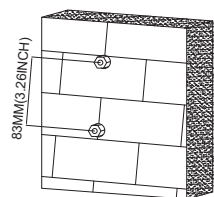

4.2.1 Drill corresponding mounting holes on the wall with an electric drill.

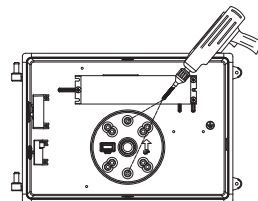

4.2.2 Drill through the mounting hole with an electric drill.

Standard wire:

L/live wire: Black\Brown; N/null wire: White\Blue; Ground wire: Green\Yellow-green.

Warning: During grounding, make sure the earth wire of the driver and fixture housing are connected together with the earth wire of the local power supply.

