


Installation Instructions

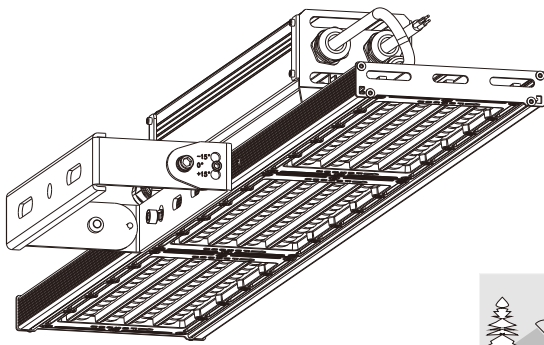

WARNING

- Turn off power supply before installation or before doing any maintenance work.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard. It is necessary to install a surge protection device in distribution box to extend luminaire lifespan.
- Turn on the luminaire after it is well grounded.
- Clean the luminaire regularly if using it in heavy dust or oil gas area.
- The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

Caution risk of electric shock

- Terminal block not included. Installation must be performed by a qualified person.

INSTALLATION OR ASSEMBLY INSTRUCTIONS INSTRUCTIONS D'INSTALLATION



CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR

CONSULTER UN ÉLECTRICIEN QUALIFIÉ POUR VOUS ASSURER QUE LES CONDUCTEURS DE LA DÉRIVATION SONT ADÉQUATS


Installation

1. Rotate the bracket to suitable angle before installation

Don't pull out the bolt when loosen the screws

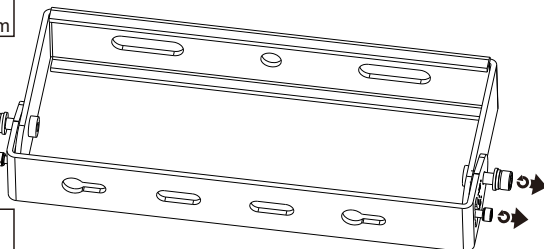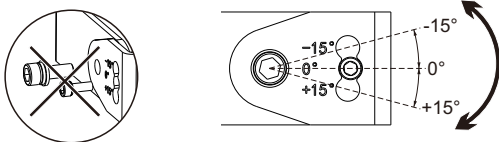


Fasten the M4 screws firstly, then the M6 screws

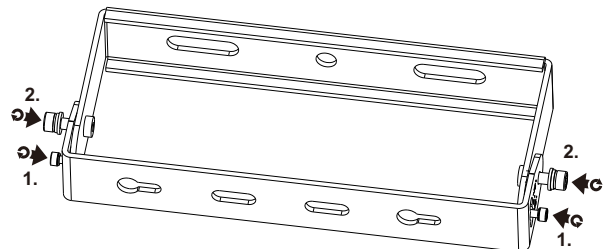

2.



This screw is not an included accessory and need to be sourced separately.

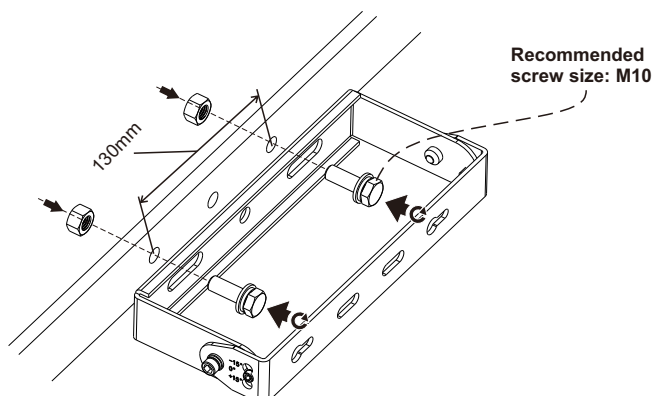

3.




Don't pull out the bolt when loosen the screws

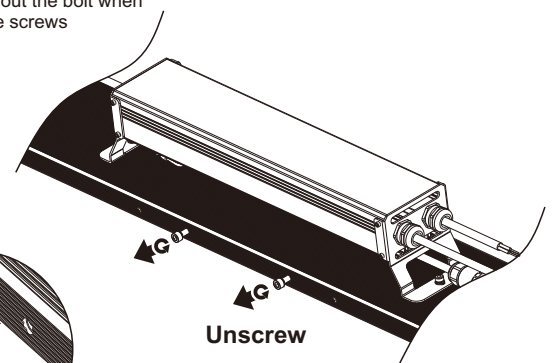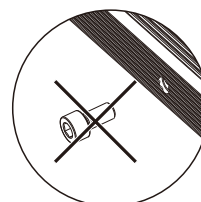


Unscrew

4. 


 2.5N.m

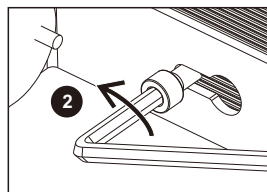


5. 

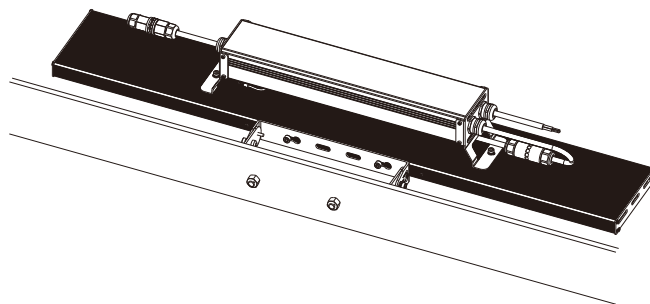

Connect Wires

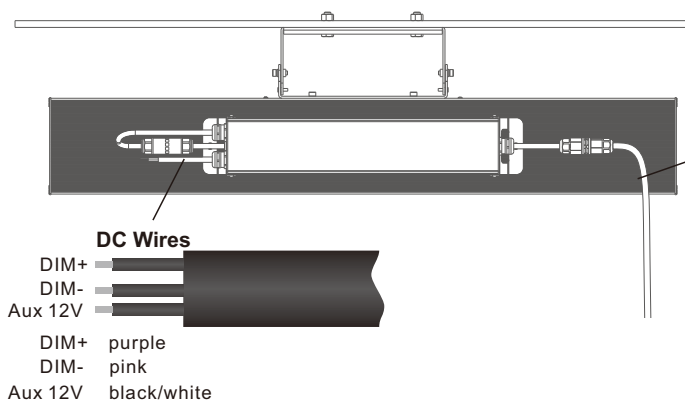


1 AC Wires

 

2

L ← L
N ← N
GND ← GND

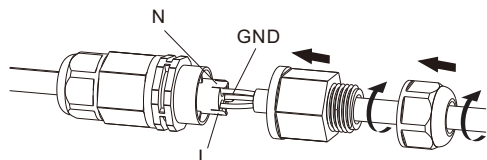


Cable size: Ø8~10mm

16mm

13~14mm

 3




Precautions for Outdoor Lighting

Lightning is a common natural phenomenon. When the accumulation of electric charge in the thundercloud to a certain degree, air breakdown will occur to cause electrostatic discharge between the clouds, or between the cloud and the earth. Normally there are direct lightning and induction lightning, most LED luminaires damage caused by induction lightning, such as electrostatic induction or magnetic field induction.

Below pretreatment can reduce lightning hazard, and extend luminaire lifetime.

1. LED luminaire should be effectively grounded

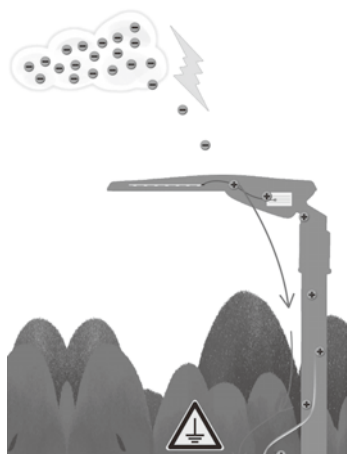

With effective grounding, the electric charge can be introduced to ground quickly

2. Install surge protector in power distribution box



The SPD can absorb most surge energy before luminaire