


LED Solar Wall Light

WESTGATE
THE FUTURE IS HERE...AND IT'S QUITE BRIGHT!

Installation Instructions

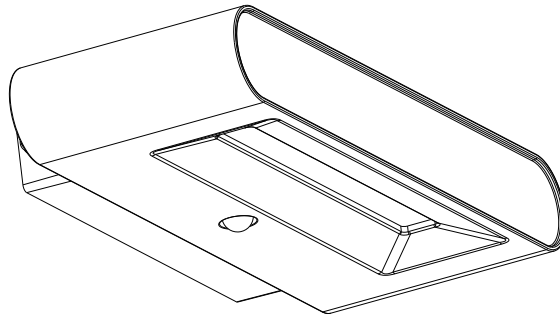


WARNING





- Turn off power supply before installation or before doing any maintenance work.
- Clean the luminaire regularly if using it in heavy dust or oil gas area.
- PIR sensor should keep away from large areas of metal and glass reflectors.
- The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

Installation

1.

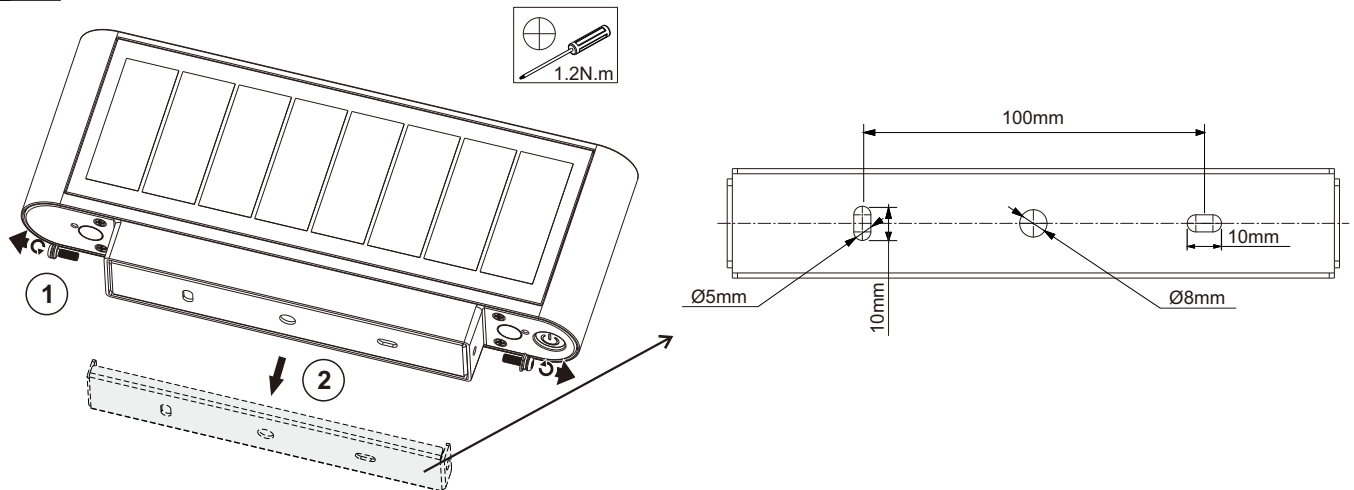



Installation size

 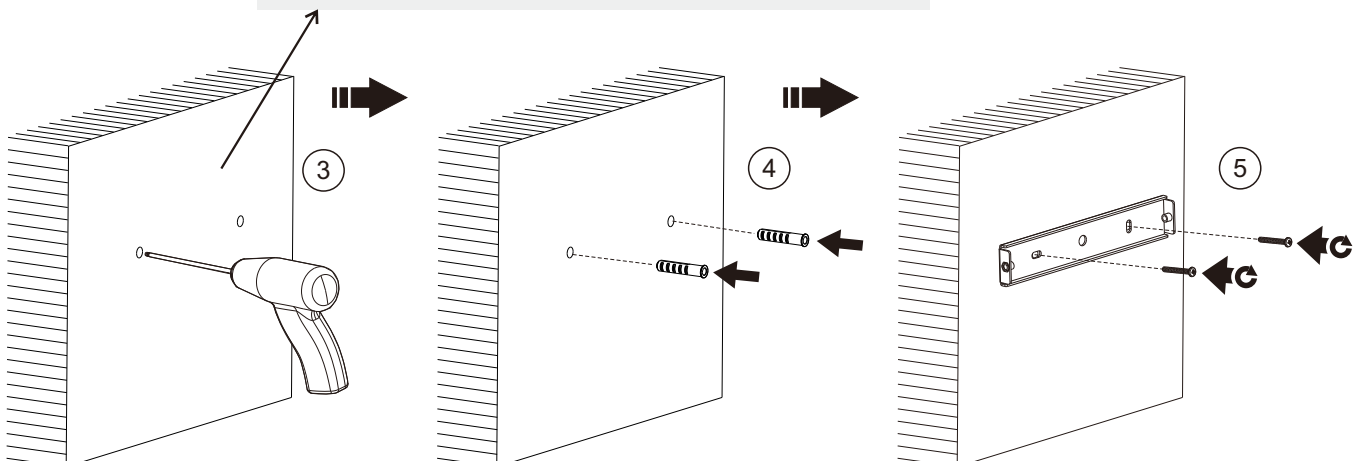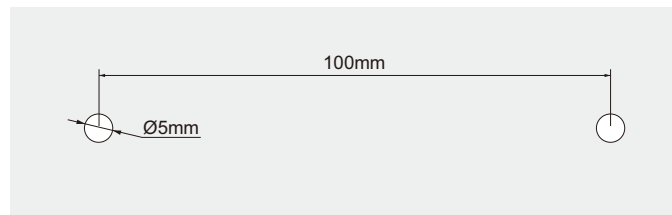 

2.

M4x12
2PCS

1.2N.m

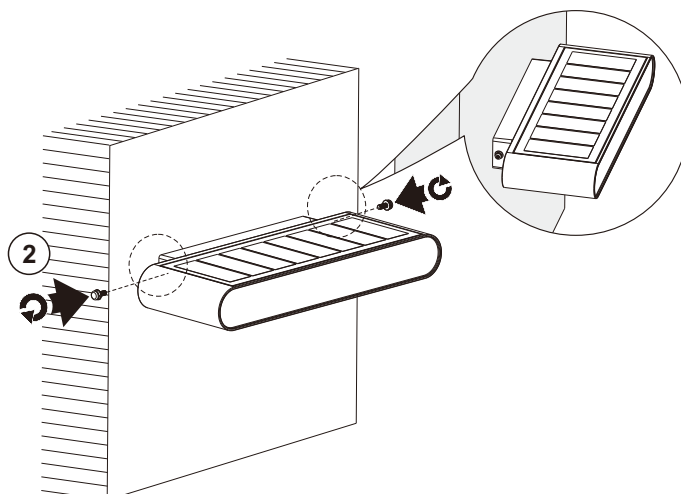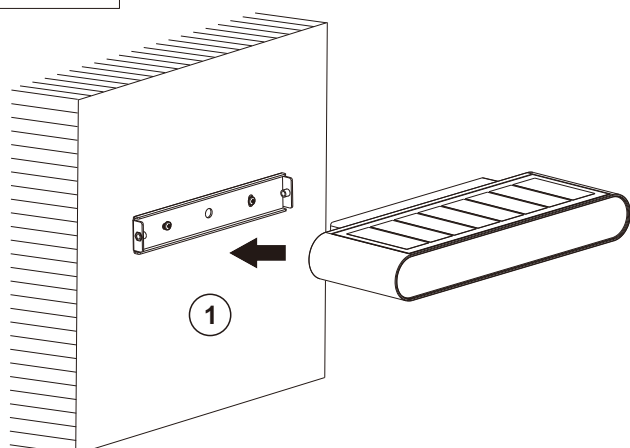


Switch button and work modes

Switch button

* Long press (3s): Turn on/off the light

* Short press: Switch work modes, light will flashes once if work mode switch successfully
(Follows a cyclic switching: light on is work mode 1 - work mode 2 - work mode 3)


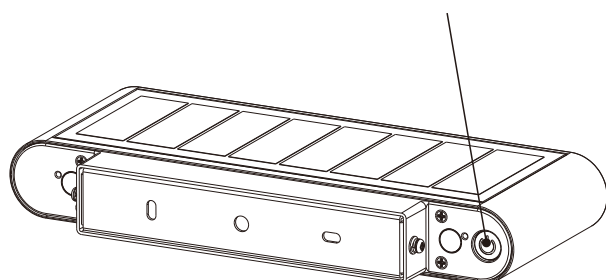


Mode 1	Working hours	From sunset to sunrise
	Not detected	0%
	Detected	100%
	Light up for 30 seconds when detected	

Mode 2	Working hours	From sunset to sunrise
	Not detected	10%
	Detected	100%
	Light up for 30 seconds when detected	

Mode 3	Working hours	From sunset to sunrise
	The initial 30% Power drops linearly to 5% in 12hours.	
	This working mode has no sensing function	

Recommended mounting height (2-2.5 m)

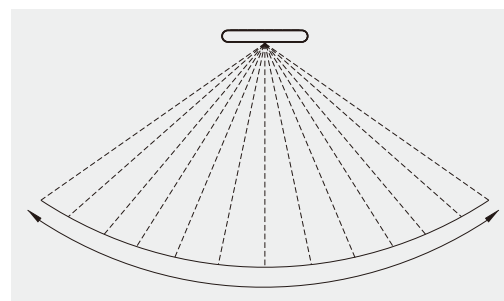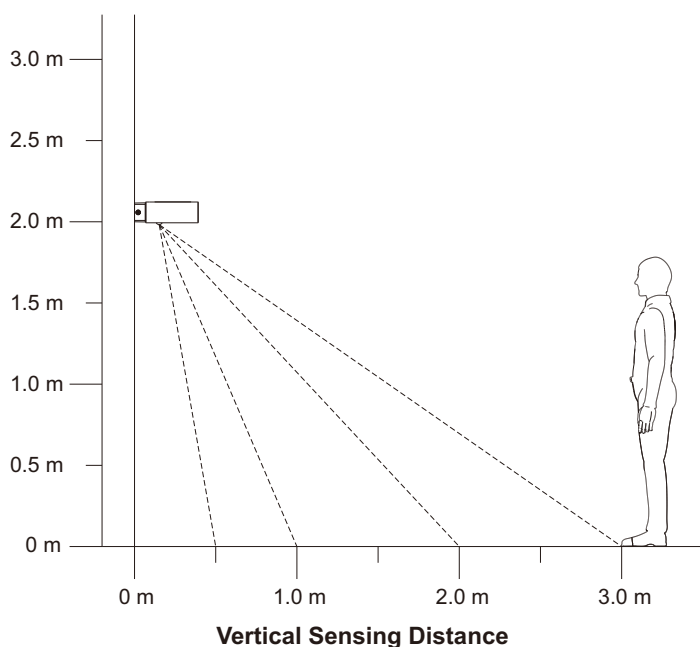

Horizontal Sensing Angle (110°)