


LED Solar Wall Light

WESTGATE
THE FUTURE IS HERE...AND IT'S QUITE BRIGHT!

Installation Instructions

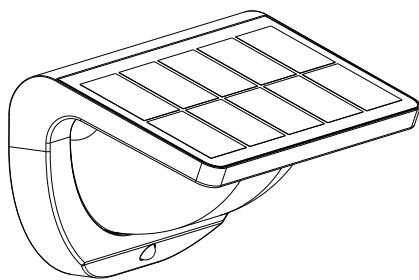



WARNING

- Turn off power supply before installation or before doing any maintenance work.
- Clean the luminaire regularly if using it in heavy dust or oil gas area.
- PIR sensor should keep away from large areas of metal and glass reflectors.
- The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.







Installation




1.

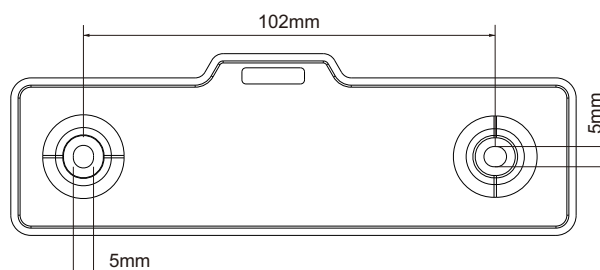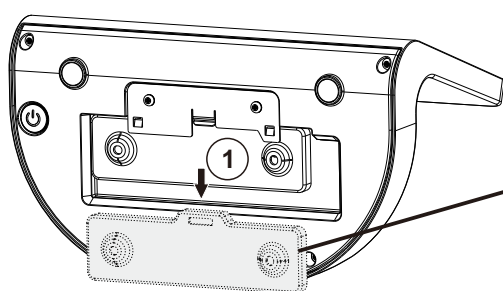




Installation size

  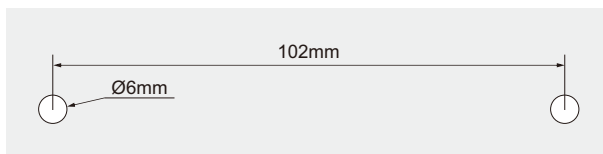 


PA4x25
2PCS
1.2N.m

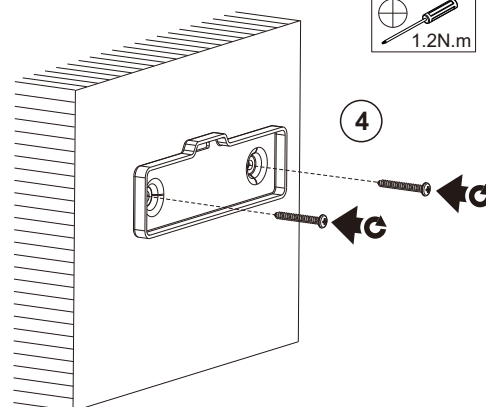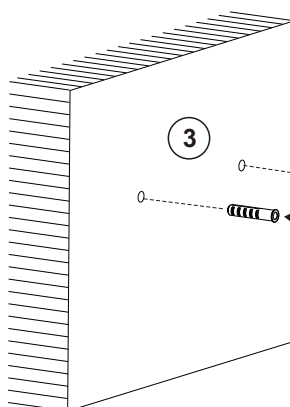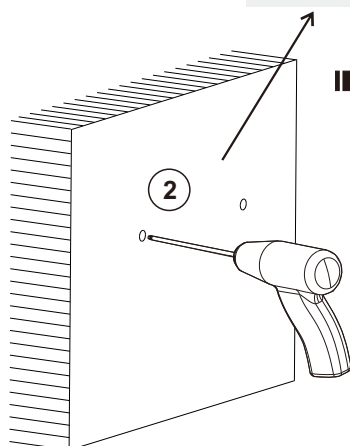

2.

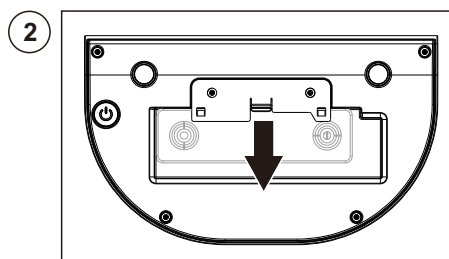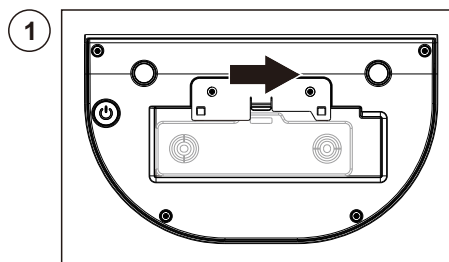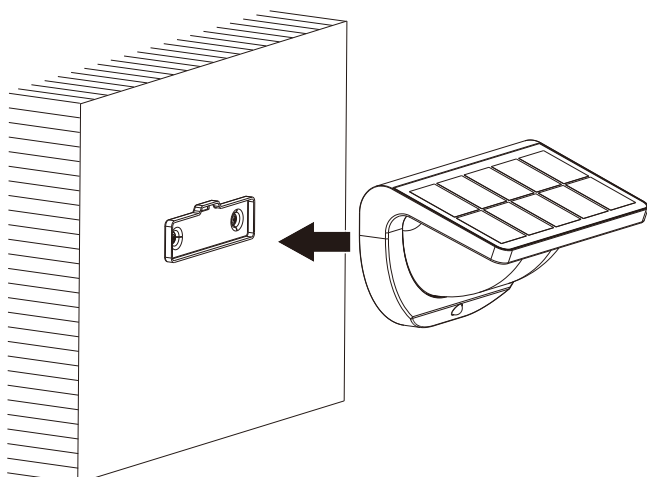

3.

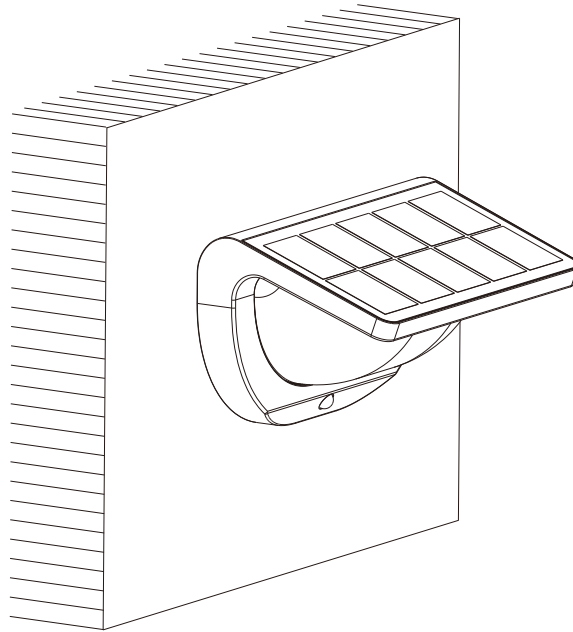


Switch button and work modes

Switch button

* Long press (3s): Turn on/off the light

* Short press: Switch work modes, light will flashes once if work mode switch successfully
(Follows a cyclic switching: light on is work mode 1 - work mode 2 - work mode 3)


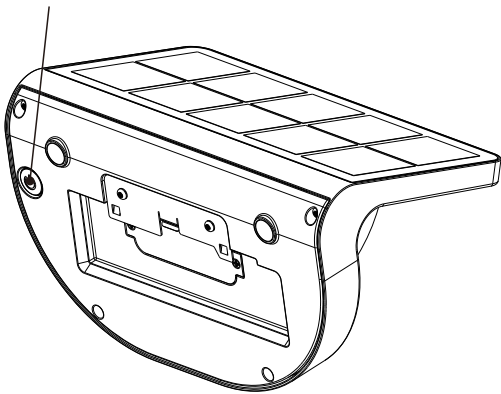


Mode 1	Working hours	From sunset to sunrise
	Not detected	0%
	Detected	100%
	Light up for 30 seconds when detected	

Mode 2	Working hours	From sunset to sunrise
	Not detected	10%
	Detected	100%
	Light up for 30 seconds when detected	

Mode 3	Working hours	From sunset to sunrise
	The initial 30% Power drops linearly to 5% in 12hours.	
	This working mode has no sensing function	

Recommended mounting height (2-2.5 m)

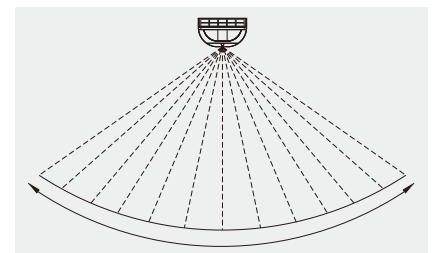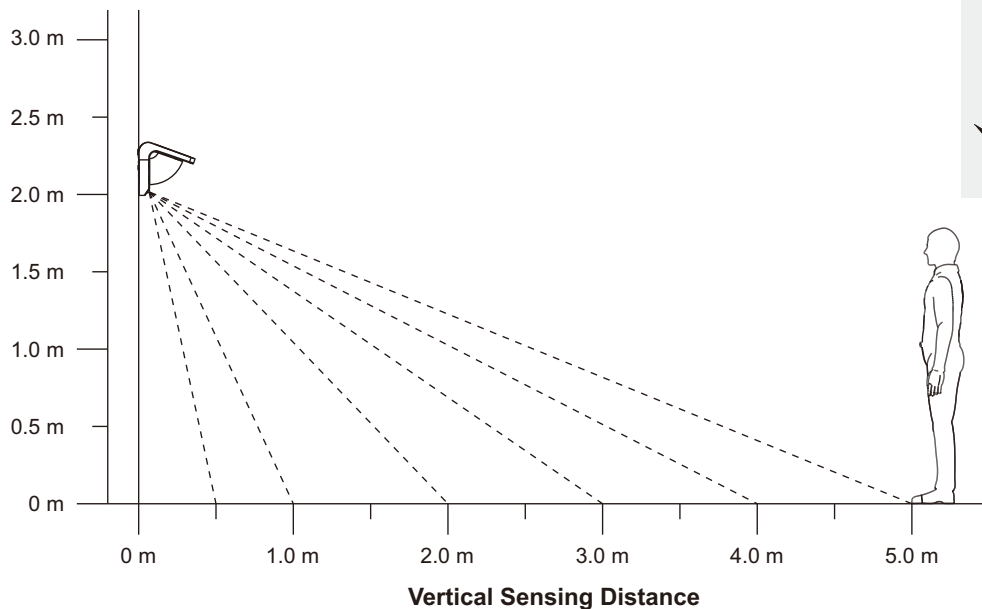

Horizontal Sensing Angle (110°)