

## RE4R01A ANTI-RATTLE CLIP LOCATION

*Refer to Figure 1 for a view of the Anti-Rattle Clip and it's location in the case. Assemble all Low Reverse Clutch Plates and steel plates into the case. Pinch the Anti-rattle clip together and push all the way down in the space between the short tab on the Low Reverse Steel and the case. The leg on the clip will lock into the bottom Low Reverse steel.*

*Assemble the Pressure plate on top of the last Low Reverse clutch plate as shown in Figure 2.*

*Install the retaining snap ring as shown in Figure 3.*

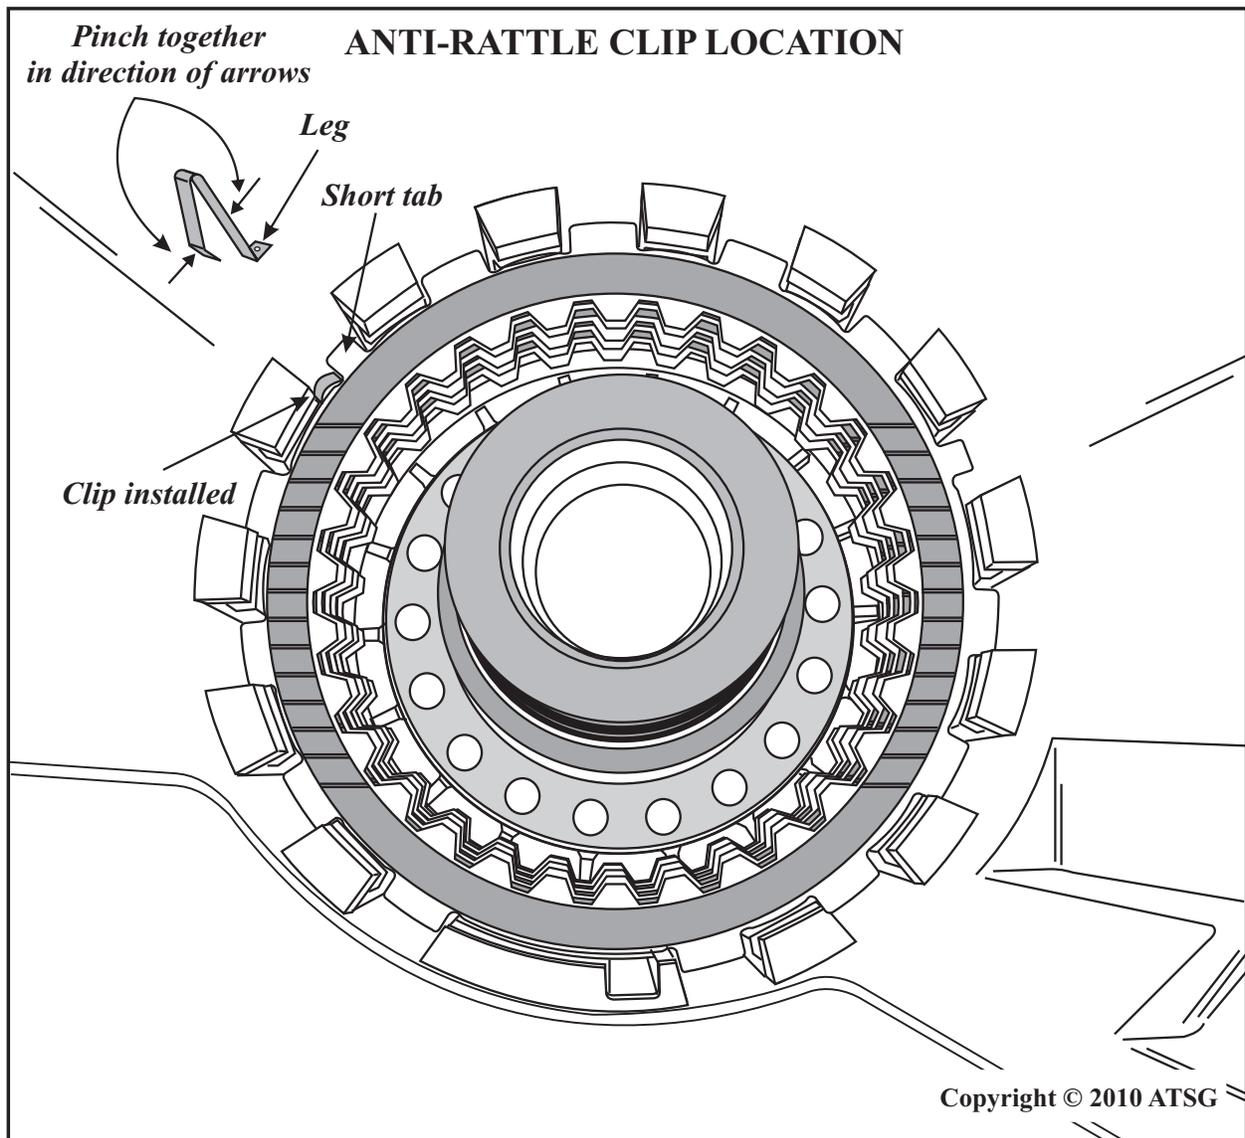


Figure 1

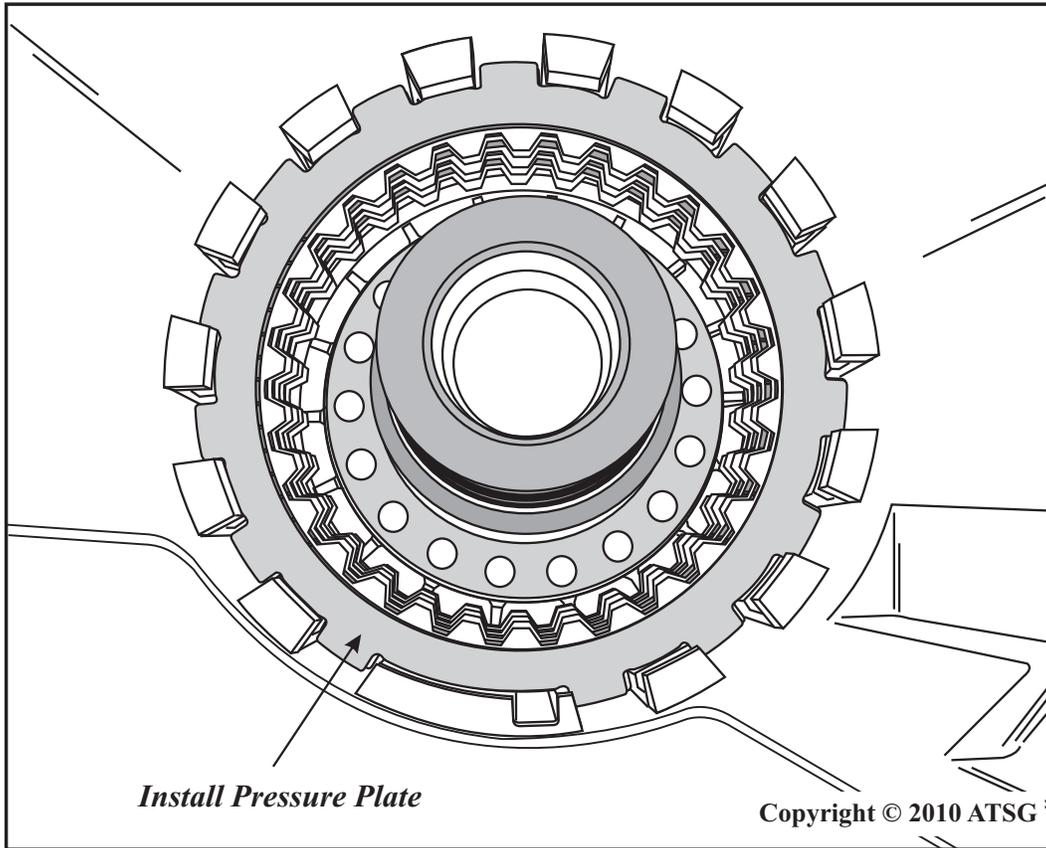


Figure 2

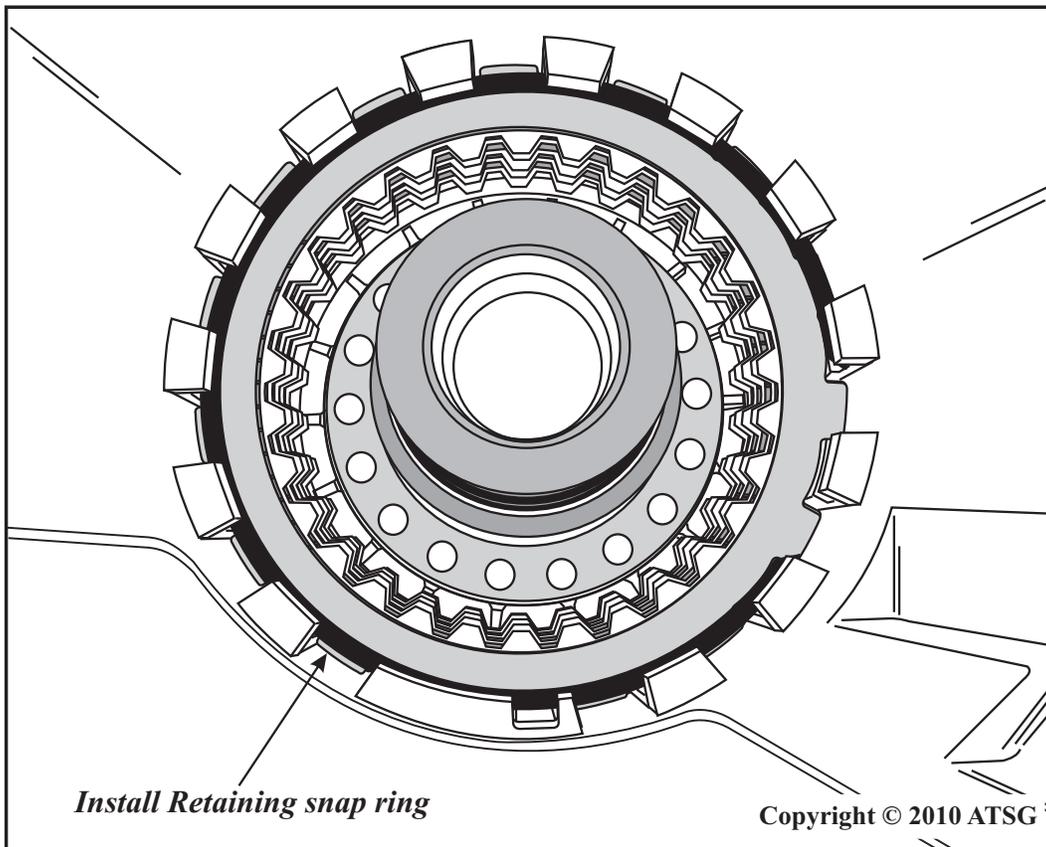


Figure 3