Safety Manual
Ver 24-12-2025
Each page printed A5 size (14.8 x 21.0 centimeters)
Stapelled

105克铜版纸--婉芳

aiwa®
Japan est1951

AIR FRYER
Instruction Manual

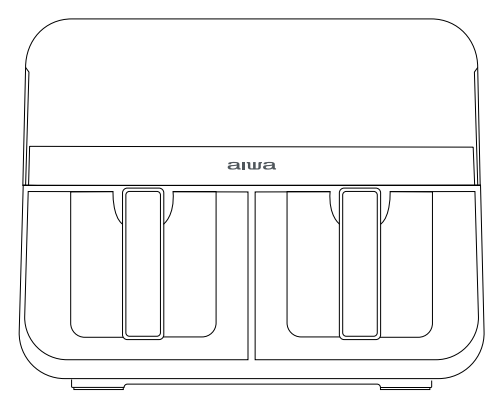

FUTAGO AFR-9000
220-240V~ | 50-60Hz | 2400W | 9L | 60-200°C

(EN) Air fryer - Instruction Manual
(ES) Batidora de mano - Manual de instrucciones y seguridad
(IT) Frullatore a mano - Manuale di istruzioni e sicurezza
(FR) Batteur à main - Manuel d'instructions et de sécurité
(DE) Handmixer - Bedienungs- und Sicherheitshandbuch
(PT) Misturador de mão - Manual de instruções e segurança
(NL) Handmixer - Handleiding en veiligheid
(BG) Ръчен миксер - Ръководство за употреба и безопасност
(EL) Μίξερ χειρός - Εγχειρίδιο οδηγιών και ασφάλειας
(PL) Mikser ręczny - Instrukcja obsługi i bezpieczeństwa
(SK) Ručný mixér - Príručka na používanie a bezpečnosť
(RO) Mixer de mână - Manual de instrucțiuni și siguranță
(HU) Kézi mixer - Használati és biztonsági útmutató
(SR) Миксер за руке - Упутство за коришћење и безбедност
(TR) El Mikseri - Kullanım ve Güvenlik Kılavuzu
(RU) Ручной миксер - Руководство по эксплуатации и безопасности

---

aiwa
Japan est1951

www.aiwaindustries.com
AIWA CO.,LTD. TOKYO, JAPAN
All Pictures shown are for illustration purpose only.
All Rights Reserved. All other trademarks are property of their respective owners.
All specifications are subject to change without prior notice.
Aiwa Asia Ltd.

www.aiwaindustries.com

Points de collecte sur www.quefairedemesdechets.fr

SPECIFICATIONS
Especificaciones, Specifiche, Spécifications, Spezifikationen, Especificações, Specificaties, Спецификации, Προδιαγραφές Specyfikacje, Špecifikácie, Specificații, Specifikációk, Спецификације, Özellikler, Спецификации

Power	2400 W
Capacity	9 L
Pre-sets	8
Body material	Stainless steel

Cavity type	Tray
Visible window	Yes
Auto clean	Yes

CONTENT
Contenido, Contenuto, Contenu, Inhalt, Conteúdo, Inhoud, Съдържание, Περιεχόμενο, Zawartość, Obsah, Conținut, Tartalom, Садржај, İçerik, Содержание



MESUREMENTS
Medidas, Misure ,Mesures, Maße , Medidas , Afmetingen ,Мерки, Μετρήσεις, Wymiary, Merania ,Măsurători, Méretek, Мере, Ölçümler, Измерения,

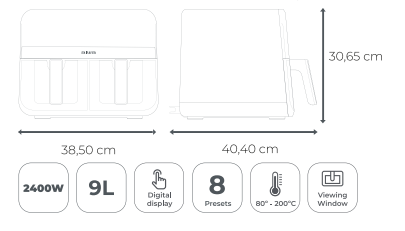

2400W | 9L | Digital display | 8 Presets | 80° - 200°C | Viewing Window
Cooking Light | Defrost | Dishwasher safe | Autoclean | Dual Cooking | SYNCRO Function
SUPER Quiet System®

GETTING TO KNOW YOUR AIR FRYER

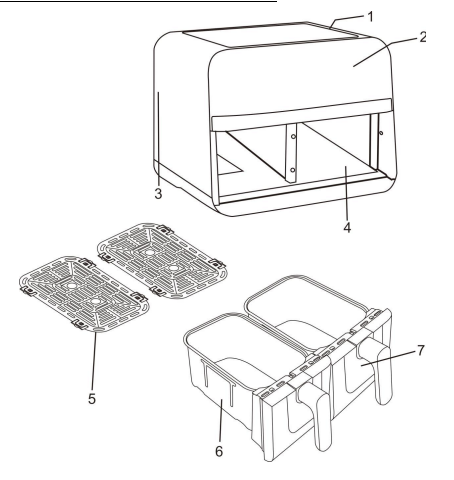

PARTS
(EN) 1. Air Intake Vent **2.**Control Panel **3.**Air Outlet (Located on back) **4.** Main Unit **5.** Non-stick grid (One for each zone) **6.**Baskets (One for each basket) **7.**Visible Window
(ES) 1. Ventilación de entrada de aire **2.** Panel de control **3.** Salida de aire (ubicada en la parte trasera) **4.** Unidad principal **5.** Rejilla antiadherente **6.** Cestas (una para cada cesta) **7.** Ventana visible.
(IT) 1. Ventilazione della presa d'aria **2.** Pannello di controllo **3.** Uscita dell'aria (situata nella parte posteriore) **4.** Unità principale **5.** Griglia antiaderente **6.** Cestelli (uno per ogni cestello) **7.** Finestra visibile.
(FR) 1. Ventilation d'admission d'air **2.** Panneau de commande **3.** Sortie d'air (située à l'arrière) **4.** Unité principale **5.** Grille antiadhésive **6.** Paniers (un pour chaque panier) **7.** Fenêtre visible.
(DE) 1. Lufteinlassentlüftung **2.** Bedienfeld **3.** Luftauslass (auf der Rückseite) **4.** Haupteinheit **5.** Antihaft-Gitter (Einer für jede Zone) **6.** Körbe (Einer für jeden Korb) **7.** Sichtbares Fenster.
(PT) 1. Ventilação de admissão de ar **2.** Painel de Controlo **3.** Saída de ar (localizada na traseira) **4.** Unidade Principal **5.** Grelha antiaderente **6.** Cestas (uma para cada cesto) **7.** Janela visível.
(NL) 1. Luchtinlaatopening **2.**Bedieningspaneel **3.** Luchtuitlaat (bevindt zich aan de achterkant) **4.** Hoofdeenheid **5.** Antiaanbakrooster (één voor elke zone) **6.** Manden (één voor elke mand) **7.** Zichtbaar venster.
(BG) 1.Вентилация на всмукването на въздух **2.** Контролен панел **3.** Изход за въздух (разположен отзад) **4.** Главна единица **5.** Незалепваща решетка 6. Кошници (по една за всяка кошница) **7.** Видим прозорец.
(EL) 1. Αεραγωγός εισαγωγής αέρα **2.** Πίνακας ελέγχου **3.** Έξοδος αέρα (που βρίσκεται στο πίσω μέρος) **4.** Κύρια μονάδα **5.** Αντικολλητικό πλέγμα (Ένα για κάθε ζώνη) **6.**Καλάθια (Ένα για κάθε καλάθι) **7.**Ορατό παράθυρο.
(PL) 1. Wentylacja wlotu powietrza **2.** Panel sterowania **3.** Wylot powietrza (umieszczony z tyłu) **4.** Jednostka główna **5.** Kratka nieprzywierająca **6.** Kosze (po jednym na każdy kosz) **7.** Widoczne okno.
(SK) 1. Vetrací otvor na prívod vzduchu **2.**Ovládací panel **3.**Výstup vzduchu (umiestnený na zadnej strane) **4.** Hlavná jednotka **5.** Nepriľnavá mriežka (jedna pre každú zónu) **6.**Koše (jeden pre každý kôš) **7.**Viditeľné okno.
(RO) 1. Ventilație de admisie a aerului **2.** Panoul de control **3.** Priză de aer (situată în spate) **4.** Unitatea principală **5.** Grilă antiaderentă **6.** Coșuri (câte unul pentru fiecare coș) **7.** Fereastră vizibilă.
(HU) 1. Levegőbeszívó szellőzés **2.** Vezérlőpult **3.** Levegő kimenet (hátul található) **4.** Főegység **5.** Tapadásmentes rács **6.** Kosarak (kosaranként egy) **7.** Látható ablak.
(SR) 1 .Аир Интаке Вент **2.**Цонтрол Панел **3.**Аир Оутлет (Лоцатед он бацк) **4.** Главна јединица **5.** Мрежа без штапа (По једна за сваку зону) **6.**Корпе (По једна за сваку корпу) **7.**Видљив прозор.
(TR) 1. Hava Giriş Menfezi **2.**Kontrol Paneli **3.**Hava Çıkışı (Arkada bulunur) **4.** Ana Ünite **5.** Yapışmaz ızgara (Her bölge için bir tane) **6.**Sepetler (Her sepet için bir tane) **7.** Görünür Pencere.
(RU) 1. Вентиляционное отверстие для впуска воздуха **2.** Панель управления **3.** Выпускное отверстие для воздуха (расположено сзади) **4.** Основной блок **5.** Антипригарная решетка (по одной для каждой зоны) **6.**Корзины (по одной на каждую корзину) **7.**Видимое окно.

FUNCTION BUTTONS

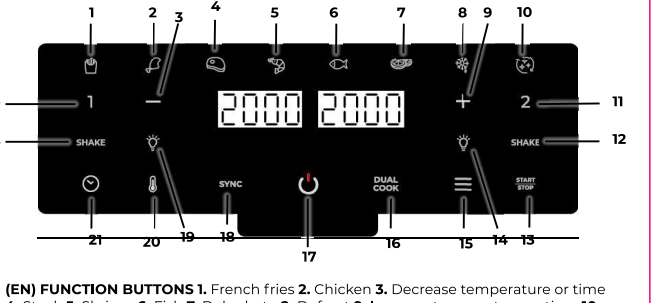

(EN) FUNCTION BUTTONS 1. French fries **2.** Chicken **3.** Decrease temperature or time **4.** Steak **5.** Shrimp **6.** Fish **7.** Dehydrate **8.** Defrost **9.** Increase temperature or time **10.** Auto clean **11.** Basket indicator **12.** Shake basket indicator **13.** Start/Stop **14.** Light **15.** Menu selector **16.** Dual cook **17.** Power **18.** Sync Smart finish **19.** Light **20.** Temperature selector **21.** time selector **22.** Shake basket indicator **23.** Basket indicator

(ES) BOTONES DE FUNCIÓN 1. Patatas fritas **2.** Pollo **3.** Disminuya la temperatura o el tiempo **4.** Bistec **5.** Marisco **6.** Pescado **7.** Deshidratar **8.** Descongelar **9.** Aumentar la temperatura o el tiempo **10.** Limpieza automática **11.** Indicador de cesta **12.** Indicador de agitación de cesta **13.** Inicio/parada **14.** Luz **15.** Selector de menú **16.** Cocción dual **17.** Potencia **18.** Acabado Sincronizado **19.** Luz **20.** Selector de temperatura **21.** Selector de tiempo **22.** Indicador de agitación de cesta **23.** Indicador de cesta

(IT) PULSANTI FUNZIONE 1. Patatine fritte **2.** Pollo **3.** Diminuire la temperatura o il tempo **4.** Bistecca **5.** Frutti di mare **6.** Pesce **7.** Disidratare **8.** Sbrinamento **9.** Aumentare la temperatura o il tempo **10.** Pulizia automatica **11.** Indicatore del cestello **12.** Indicatore di scuotimento del cestello **13.** Avvio/arresto **14.** Luce **15.** Selettore menu **16.** Doppia cottura **17.** Alimentazione **18.** Finitura sincronizzata **19.** Luce **20.** Selettore della temperatura **21.** Selettore dell'ora **22.** Indicatore di scuotimento del cestello **23.** Indicatore del cestello

(FR) BOUTONS DE FONCTION 1. Frites **2.** Poulet **3.** Diminuez la température ou le temps **4.** Bifteck **5.** Fruits de mer **6.** Poisson **7.** Déshydrater **8.** Décongélation **9.** Augmenter la température ou le temps **10.** Nettoyage automatique **11.** Indicateur de panier **12.** Indicateur de secousse du panier **13.** Marche/arrêt **14.** Lumière **15.** Sélecteur de menu **16.** Double cuisson **17.** Puissance **18.** Arrivée synchronisée **19.** Lumière **20.** Sélecteur de température **21.** Sélecteur de temps **22.** Indicateur de secousse du panier **23.** Indicateur de panier

(DE) FUNKTIONSTASTEN 1. Pommes Frites **2.** Huhn **3.** Verringern Sie die Temperatur oder Zeit **4.** Steak **5.** Meeresfrüchte **6.** Fisch **7.** Dehydrieren 8. Auftauen 9. Erhöhen Sie die Temperatur oder die Zeit **10.** Automatische Reinigung **11.** Warenkorb-Anzeige **12.** Schüttelanzeige des Korbs **13.** Start/Stopp **14.** Licht **15.** Menü-Selektor **16.** Duales Kochen **17.** Macht **18.** Synchronisiertes Finish **19.** Licht **20.** Temperatur-Wahlschalter **21.** Zeitwähler **22.** Korb schütteln Anzeige **23.** Warenkorb-Indikator

(PT) BOTÕES DE FUNÇÃO 1. Batatas fritas **2.** Frango **3.** 3Diminua a temperatura ou o tempo **4.** Bife **5.** Marisco **6.** Peixe **7.** Desidratar **8.** Descongelar **9.** Aumente a temperatura ou o tempo **10.** Limpeza automática **11.** Indicador do cabaz **12.** Indicador de agitação do cesto **13.** Início/paragem **14.** Luz **15.** Seletor de Menu **16.** Cozinha dupla **17.** Potência **18.** Acabamento sincronizado **19.** Luz **20.** Seletor de temperatura **21.** Seletor de Tempo **22.** Indicador de agitação do cesto **23.** Indicador da cesta

(NL) FUNCTIEKNOPPEN 1. Frieten **2.** Kip **3.** Verlaag de temperatuur of tijd **4.** Biefstuk **5.** Garnalen **6.** Vis **7.** Uitdrogen **8.** Ontdooien **9.** Verhoog de temperatuur of tijd **10.** Automatisch reinigen **11.** Mandje indicator **12.** Schud de mand indicator **13.** Start/Stop **14.** Verlichting **15.** Menukiezer **16.** Dubbele kok **17.** Vermogen **18.** Sync Smart finish **19.** Verlichting **20.** Temperatuur keuzeschakelaar **21.** Tijd keuzeschakelaar **22.** Schud de mand indicator **23.** Winkelmandje indicator

(BG) БУТОНИ ЗА ФУНКЦИИ 1. Пържени картофи **2.** Пиле **3.** Намаляване на температурата или времето **4.** Пържола **5.** Скариди **6.** Риба **7.** Дехидратирайте **8.** Размразяване **9.** Увеличете температурата или времето **10.** Автоматично почистване **11.** Индикатор за кошницата **12.** Индикатор за кошницата за разклащане **13.** Старт/Стоп **14.** Светлина **15.** Селектор на меню **16.** Двоен готвач **17.** Мощност **18.** Синхронизиране Интелигентно покритие **19.** Светлина **20.** Температурен селектор **21.** Времеви селектор **22.** Индикатор за кошницата за разклащане **23.** Индикатор за кошницата

(EL) ΠΛΗΚΤΡΑ ΛΕΙΤΟΥΡΓΙΑΣ 1. Πατάτες τηγανιτές **2.** Κοτόπουλο **3.** Μείωση θερμοκρασίας ή χρόνου **4.** Μπριζόλα **5.** Γαρίδες **6.** Ψάρια **7.** Αφυδατώστε **8.** Απόψυξη **9.** Αυξήστε τη θερμοκρασία ή το χρόνο **10.** Αυτόματος καθαρισμός **11.** Ένδειξη καλαθιού **12.** Ένδειξη καλαθιού ανακίνησης **13.** Έναρξη/Διακοπή **14.** Φως **15.** Επιλογέας μενού **16.** Διπλός μάγειρας **17.** Ισχύς **18.** Συγχρονισμός έξυπνου φινιρίσματος **19.** Φως **20.** Επιλογέας θερμοκρασίας **21.** Επιλογέας ώρας **22.** Ένδειξη καλαθιού ανακίνησης **23.** Ένδειξη καλαθιού

(PL) PRZYCISKI FUNKCJI 1. Frytki **2.** Kurczak **3.** Zmniejsz temperaturę lub czas **4.** Stek **5.** Krewetki **6.** Ryba **7.** Odwodnić **8.** Rozmrażanie **9.** Zwiększ temperaturę lub czas **10.** Automatyczne czyszczenie **11.** Wskaźnik koszyka **12.** Wskaźnik potrząsania koszem **13.** Uruchom/zatrzymaj **14.** Światło **15.** Selektor menu **16.** Podwójny kucharz **17.** Zasilanie **18.** Synchronizacja Inteligentne wykończenie **19.** Światło **20.** Przełącznik temperatury **21.** Selektor czasu **22.** Wskaźnik potrząsania koszem **23.** Wskaźnik koszyka

(SK) TLAČIDLÁ FUNKCIÍ 1. Hranolky **2.** Kuracie mäso **3.** Znížte teplotu alebo čas **4.** Steak **5.** Krevety **6.** Ryby **7.** Dehydratovať **8.** Rozmrazovanie **9.** Zvýšte teplotu alebo čas **10.** Automatické čistenie **11.** Ukazovateľ koša **12.** Indikátor koša na pretrepanie **13.** Štart/zastavenie **14.** Svetlo **15.** Výber ponuky **16.** Duálny kuchár **17.** Napájanie **18.** Synchronizácia inteligentného dokončenia **19.** Svetlo **20.** Volič teploty **21.** Výber času **22.** Indikátor koša na pretrepanie **23.** Indikátor košíka

(RO) BUTOANE DE FUNCȚIE 1. Cartofi prăjiți **2.** Pui **3.** Reduceți temperatura sau timpul **4.** Friptură **5.** Fructe de mare **6.** Pește **7.** Deshidratare **8.** Dezghețare **9.** Creșteți temperatura sau timpul **10.** Curățare automată **11.** Indicator coș **12.** Indicator agitare coș **13.** Start/stop **14.** Lumina **15.** Selector meniu **16.** Gătit dual **17.** Putere **18.** Finisaj sincronizat **19.** Lumina **20.** Selector de temperatură **21.** Selector de timp **22.** Indicator agitare coș **23.** Indicator coș

(HU) FUNKCIÓ GOMBOK 1. Sült krumpli **2.** Csirke **3.** Csökkentse a hőmérsékletet vagy az időt **4.** Steak **5.** Garnélarák **6.** Halak **7.** Dehidratálás **8.** Leolvasztás **9.** Növelje a hőmérsékletet vagy az időt **10.** Automatikus tisztítás **11.** Kosár mutató **12.** Rázza meg a kosarat **13.** Start/Stop **14.** Fény **15.** Menüválasztó **16.** Kettős szakács **17.** Teljesítmény **18.** Sync Smart felület **19.** Fény **20.** Hőmérséklet választó **21.** Időválasztó **22.** Rázza meg a kosarat **23.** Kosár jelző

(SR) DUGMAD ZA FUNKCIJE 1. Помфрит **2.** Пилетина **3.** Смањите температуру или време **4.** Одрезак **5.** Шкампи **6.** Риба **7.** Дехидрирајте **8.** Одмрзните **9.** Повећајте температуру или време **10.** Аутоматско чишћење **11.** Индикатор корпе **12.** Индикатор корпе за протресање **13.** Старт/Стоп **14.** Светло **15.** Бирач менија **16.** Двоструко кување **17.** Снага **18.** Синхронизација Паметна завршна обрада **19.** Светло **20.** Бирач температуре **21.** бирач времена **22.** Индикатор корпе за протресање 23. Индикатор корпе

(TR) FONKSIYON TUŞLARI 1. Patates kızartması **2.** Tavuk **3.** Sıcaklığı veya süreyi azaltın **4.** Biftek **5.** Karides **6.** Balık **7.** Kurutmak **8.** Buz çözme **9.** Sıcaklığı veya zamanı artırın **10.** Otomatik temizleme **11.** Sepet göstergesi **12.** Sallama sepeti göstergesi **13.** Başlat/Durdur **14.** Işık **15.** Menü seçici **16.** İkili pişirme **17.** Güç **18.** Senkronizasyon Akıllı kaplama **19.** Işık **20.** Sıcaklık seçici **21.** Zaman seçici **22.** Sallama sepeti göstergesi **23.** Sepet göstergesi

(RU) КНОПКИ ФУНКЦИЙ 1. Картофель фри **2.** Курица **3.** Sıcaklığı veya süreyi azaltın **4.** Biftek **5.** Karides **6.** Balık **7.** Kurutmak **8.** Buz çözme **9.** Sıcaklığı veya zamanı artırın **10.** Otomatik temizleme **11.** Sepet göstergesi **12.** Sallama sepeti göstergesi **13.** Başlat/Durdur **14.** Işık **15.** Menü seçici **16.** İkili pişirme **17.** Güç **18.** Senkronizasyon Akıllı kaplama **19.** Işık **20.** Sıcaklık seçici **21.** Zaman seçici **22.** Sallama sepeti göstergesi **23.** Sepet göstergesi

COOKING PRESETS

Menu	🌡	⏲ (One Basket / Two Basket)
🍟	200 °C	18mins
🥩	200 °C	20 mins
🍗	190°C	30 mins
🍋	60°C	8hrs (1-24hrs)
🦐	160°C	12 mins
🐟	180°C	10 mins
❄	80°C	15 mins
♻	200°C	5 mins

BEFORE FIRST USE
1. Remove and discard any packaging material, promotional labels, and tape from the unit.
2. Remove all accessories from the package and read this manual carefully. Please pay particular attention to operational instructions, warnings, and important safeguards to avoid any injury or property damage.
3. Wash the baskets and crisper plates in hot, soapy water, then rinse and dry thoroughly.
4. Clean the inside and outside of the product with warm wet cloth, then dry thoroughly.
5. The air fryer uses the technology of hot air heating. Never pour oil or fat into the fryer.
6. Leave a minimum of 13 cm of space between the back and top of the wall.

FUNCTION BUTTONS
- **POWER BUTTON:** The ⏻ button turns the unit on and off and stops all cooking functions. Once the Unit is plugged in, the Power Button will light up. Selecting the Power Button once (Press 1 second) will cause the full panel to be illuminated. Press 1 second the Power Button will shut down the Unit.
- **START/STOP:** After selecting temperature and time, start cooking by pressing the **START/STOP** button. To pause cooking, first select the zone you would like to pause, then press the **START/STOP** button(13).
- **Temperature Select Icon:** 🌡 Press this button to choose temperature, then press the + button or - button enable you to select exact cooking temperature.
- **Indicator Light:** 💡 When you want to see the cooking process of food ingredients, press this button, the light inside of the unit will light up. You can turn off the light, and press this button again.
- **Sake:** remind the turn the food to get a better crisper taste.
- **Dual cooking:** Automatically matches zone 2 settings to those of zone 1 to cook a larger amount of the same food, or cook different foods using the same function, temperature, and time.
- **SYNC: Smart finish** Automatically matches zone 2 settings to those of zone 1 to cook a larger amount of the same food, or cook different foods using the same function, temperature, and time.
- **NOTICE:** Please remember that these Default Settings offer only a reference. For food ingredients differ in source, size, shape and brand, we can not guarantee to provide the best Settings for your food ingredients. As the fast air change technology can give renewed heating to the air inside the product immediately, so, to pull the basket out of the unit during the operation will hardly affect the process of cooking.
- **NOTE:** If the dual basket air fryer starts with cold boot, the cooking time should be 3 minutes longer.

USING YOUR AIR FRYER
1. Pull the basket handle to remove it from the fryer gently.
2. Place food on the inner rack inside the basket.
3. Reinsert the basket with the food into the fryer.
Note: The appliance requires the basket to be fully closed for operation. Unwind the cord before plugging it in.
4. Plug the appliance into the power outlet. A beep will confirm the appliance is on, and the on/off button will light up.
5. Press the on/off button to activate the digital display.

MANUAL MODE
1. Once the ingredients are in the basket and the fryer is plugged in:
   - Adjust the time and temperature using the selector dial (20).
   - Use the +/- buttons (3)(9) to increase or decrease the temperature and time.
   - Press the start button (13) to start cooking.
2. During cooking:
   - Modify the time and temperature if needed.
   - To pause cooking, press the power button (13) or open the basket.
3. To stop the appliance completely:
   - Press the power button (17) again.
   - The screen will turn off, and the appliance will enter standby mode.

MENU MODE
1. Once ingredients are in the basket and the fryer is on:
   - Select desired menu using the menu selector (15).
   - Adjust temperature and time following manual steps.
   - Press start button (13) to begin cooking.
2. During cooking:
   - Modify time and temperature if needed.
   - To stop the appliance completely:
   - Press power button (13). Screen turns off, appliance enters standby mode.

COOKING IN YOUR DUAL BASKET AIR FRYER SMART FINISH (SYNC)
To finish cooking at the same time when foods have different cook times, temps, or even functions:
1. Place ingredients in the baskets, then insert baskets in unit.
2. Press **SYNC** button, zone 1 will remain illuminated, then press the Menu button for select the desired cooking function.
3. Select zone 2, then press the Menu button for select the desired cooking function.
NOTE: You can select a different function for zone 2.
4. Then press the **START/STOP** button to begin cooking in the zone with the longest time. The other zone will display HOLD. The unit will activate the second zone when both zones have the same time remaining.
NOTE: Some food ingredients require overturning during the middle term of cooking. To overturn the food ingredients, hold the handle and pull out the basket from the product, and then make the turning. After that, slip the basket back to the unit. (When you pull out the basket from the product, the screen will show "OPEN".)
NOTICE: When using it for the first time, please adjust the temperature to 200°C, and let the unit working 30 minutes without food.
5. When cooking is complete, the unit will beep 5 times and "End" will appear on the display, the motor will stop working after 20 seconds.
6. Remove ingredients by dumping them out or using silicone-tipped tongs/utensils. DO NOT place drawer on top of unit.

DUAL COOK
To cook a larger amount of the same food, or cook different foods using the same function, temperature, and time:
1. Place ingredients in the baskets, then insert baskets in unit.
2. Press the **DUAL COOK** button, then press the Menu button to select the desired cooking function.
3. Then Press **START/STOP** to begin cooking in both zones.

NOTE: Some food ingredients require overturning during the middle term of cooking. To overturn the food ingredients, hold the handle and pull out the basket from the product, and then make the turning. After that, slip the basket back to the unit. (When you pull out the basket from the product, the two screens will show "OPEN".)
4. When cooking is complete, the unit will beep 5 times and "End" will appear on the display, the motor will stop working after 20 seconds.
5. Remove ingredients by dumping them out or using silicone-tipped tongs/utensils.

STARTING BOTH ZONES AT THE SAME TIME, BUT ENDING AT DIFFERENT TIMES
1.1 Select zone 1, then press the Menu button (15) to select the desired cooking function.
1.2 Press the Time Control Button (20), then press the + (9) button or – (3) button enable you to select exact cooking time to the minute.
1.3 Press the Temperature Control Button (20), then press + (9) button or – (3) button enable you to raise or lower cooking temperature.
2.1 Select zone 2, then press the Menu button (15) to select the desired cooking function.
2.2 Press the Time Control Button, then press the + (9) button or – (3) button enable you to select exact cooking time to the minute.
2.3 Press the Temperature Control Button, then press + (9) button or – (3) button to enable you to raise or lower cooking temperature.
3. Press the **START/STOP** button to begin cooking in both zones.
NOTE: Some food ingredients require overturning during the middle term of cooking. To overturn the food ingredients, hold the handle and pull out the basket from the product, and then make the turning. After that, slip the basket back to the unit. (When you pull out the basket from the product, the two screens will show "OPEN".)
4. When cooking is complete in one zone, the unit will beep 10 times and "End" will appear on the display, the motor will stop working after 20 seconds.
5. Remove ingredients by dumping them out or using silicone-tipped tongs/utensils, then wait for the ingredients in another basket to finish cooking.

PAUSING BOTH ZONES AT THE SAME TIME
1. To pause time in the SMART FINISH(SYNC) mode, or to pause both zones in dual zone cooking, press the START/STOP button.
2. To resume cooking, press the START/STOP button again.

PAUSING A SINGLE ZONE DURING DUAL ZONE COOKING
1. To pause time in a single zone while both zones are running, select the zone you want to pause, then press the START/STOP button.
2. To resume cooking, press the START/STOP button again.

CANCEL OPERATION
In any mode, you want to cancel the program which you selected, press the START/STOP button, then press the power button, the unit will beep 5 times and "End" will appear on the display, the motor will stop working after 20 seconds.

CLEANING YOUR AIR FRYER
The unit should be cleaned thoroughly after every use. The inside of the baskets, crisper plates and the product are all covered with non-sticking painted coat. Do not use metal kitchen wares or abrasive cleaning material to do the cleaning, for this will damage the non-sticking painted coat.
1. Pull out the plug from the power socket, let the product cool down. (Note: Take out the baskets, thus, to make the fat-free fryer cool down more quickly.)
2. Use wet cloth to scrub the outside part of the product.
3. Clean the baskets or the bottom of the baskets with hot water, detergent and non-abrasive sponge, please add hot water into the baskets together with some detergent. Put crisper plates into the baskets, and then soak the baskets and the crisper plates for 10 minutes.
4. Clean the inside of the product with hot water and non-abrasive sponge.
5. Use cleaning brush to clean the heating components, swept away remaining food residual.
6. A timely manner with a clean brush to clean the air inlet opening and the air outlet opening, so as not to affect the air inlet and the outlet air flow.

Note: If food residue is stuck on the crisper plates or baskets, place them in a sink filled with warm, soapy water and allow to soak.

AUTO CLEAN FUNCTION
1. Fill the air fryer with water up to the edge of the cooking rack.
2. Add 5 ml of dishwashing detergent.
3. Press the "Auto Clean" button.
4. Empty the dirty water and clean any remaining residue.

With these simple steps, your air fryer will be ready for its next us

STORAGE YOUR AIR FRYER
1. Make sure the Air Fryer is unplugged and all parts are clean and dry before storing.
2. Never store the Air Fryer while it is hot or wet.
3. Put clean Crisper Plates into fryer basket and insert fryer basket into the Air Fryer body.
4. Store Air Fryer in its box or in a clean, dry place.

GUARANTEE AND SERVICES
If you require services or repairing, or have any doubt, you can communicate with the local Customer Center.
If there is no Customer Center near your location, you can communicate with your local dealer.

This symbol means that in case you wish to dispose of the product once its working life has ended, take it to an authorized waste agent for the selective collection of waste electrical and electronic equipment (WEEE). This appliance complies with Directive 2014/35/ EU on Low Voltage, Directive 2014/30/EU on Electromagnetic Compatibility, Directive 2011/65 EU on the restrictions of the use of certain hazardous substances in electrical and electronic equipment and Directive 2009/125/EC on the ecodesign requirements for energy-related products