



ADSHIELD CONSTRUCTION ASSEMBLY



ASSEMBLY KIT CONTAINS:

VISOR X 1, C-CLIPS X 3, SCREWS X 6




ASSEMBLY STEPS:

1. Screw the 3/8" screws into the upper hole of the C-Clips until the end of the screw exits the other side. Repeat the operation for the 3 C-Clips.



2. Attach the C-Clips to the visor using the 1/4" screws. Use the 3 small holes 1/8" in diameter located at the center and at the ends. Align the C-Clips vertically.

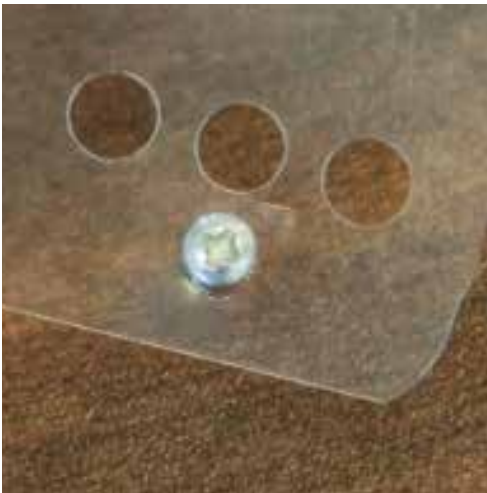

3. Once the 3 screws are fixed on the plastic visor, fix the central C-Clip on the helmet by tightening the screw from the top. Do not overtighten. Repeat with the two C-Clip ends. Position the plastic visor to obtain an adequate curvature.

