



## ADSHIELD MINI ASSEMBLY ADFAST

### ASSEMBLY KIT CONTAINS:

VISOR X 1, ADHESIVE STRIP X 1, ELASTICS X 2, ADJUSTMENT BAND X 1, STICKER X 1



Instruction video available on [www.adclean.ca/en](http://www.adclean.ca/en)



## ASSEMBLY STEPS:

**1.** Remove the film covering the pads adhesive strip.



**2.** Glue the pad onto the visor, centered between the two holes, taking care to align the edge of the acetate with that of the pad. Apply pressure to the pad to ensure it adheres well.



**3.** Tie a knot at one end of the elastic only.




**4.** Enter the other end of the elastic into the central hole.



**5.** Enter the elastic through the hole in the adjustment band. Leave roughly 1" protruding and pull upwards to lock the elastic in place.



**6.** Repeat steps 3, 4 and 5 for the other side.

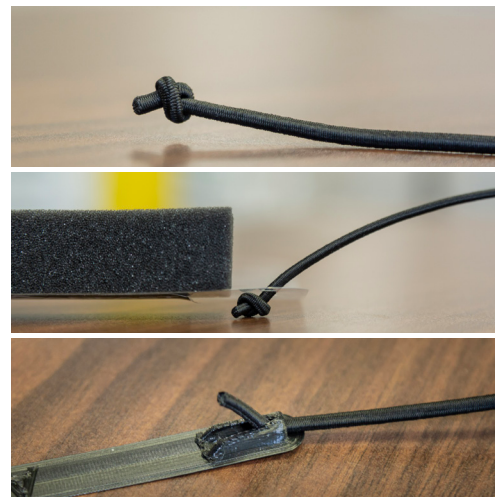

**7.** To adjust the tightness, pull the end of the elastic on the side of the adjustment band and rotate perpendicularly to lock it into the V-slot.

**8.** The curvature of the bottom of the visor can be altered by changing the hole where the elastic enters the visor. The top hole gives a larger curvature whereas the lower hole gives a more pronounced curvature.

**9. FINAL ADSHIELD MINI**



**Apply the sticker on the visor and personalize your Adshield Mini with washable markers.**

