

Drinking Water System Sanitization Kit

AQUA FLO®

42903015 QCRO SANITIZATION KIT


1 small housing. 3 blank Cartridges, 1 Membrane Cartridge (3 O-rings).

42903016 QCUF SANITIZATION KIT.

1 small housing. 4 blank Cartridges.


Preparation

Place some rags or a towel below the system as some water may leak during this procedure. Have a pail handy to drain water into.

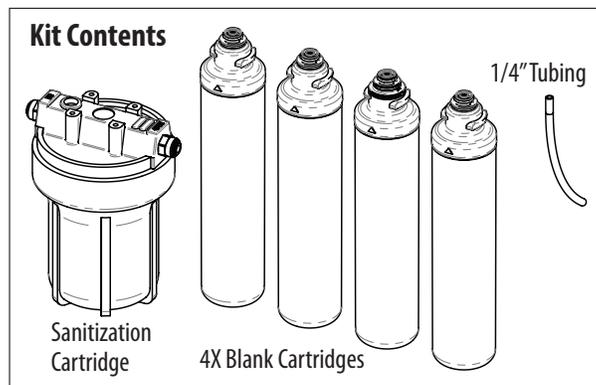


Procedure

- 1 Shut off the water supply to the system at the adapter valve. Open the faucet and allow the system to drain completely. Shut off the faucet once drained.

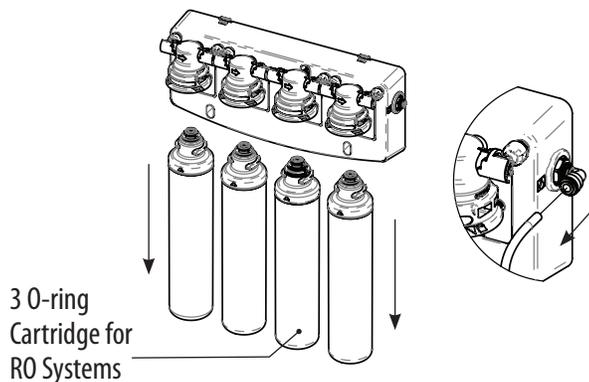


- 2 Disconnect all 4 cartridges and replace them with the blank cartridges included in this kit. Disconnect the inlet line from the system and drain excess water into a pail.


NOTE: if sanitizing an RO be sure to insert the blank RO cartridge (3 o-rings) in stage 3.

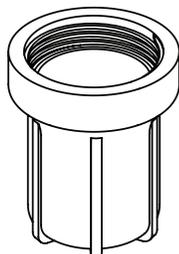

- 3 Add either 1/2 teaspoon of household bleach or 1 packet of Sani-System Liquid Concentrate (#50036) to the clear sanitization cartridge and seal the cartridge tightly.

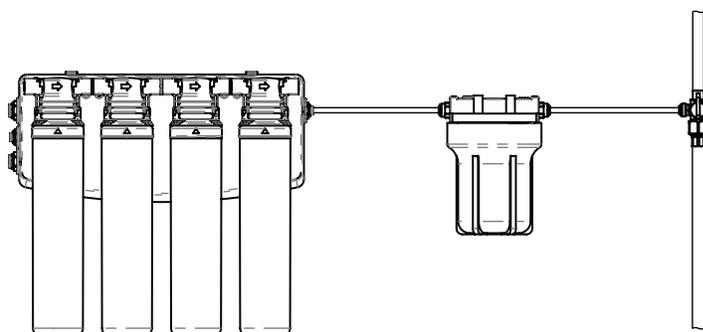

- 4 Using the tubing included in the kit, connect the sanitization cartridge between the adapter valve and the inlet port of the system.
- 5 Turn on the water at the adapter valve. If sanitizing an RO allow the system to fill the tank for 30 minutes. Next, turn on the faucet and allow the system to run for 30 minutes.
- 6 Leaving the faucet open, shut off inlet water and let the system drain completely.

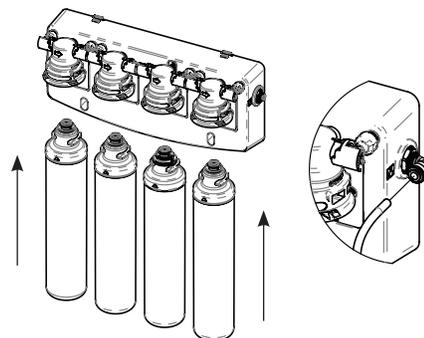

- 7 Disconnect the sanitization cartridge from the inlet line and system. Reconnect the inlet line to the system and replace cartridges on system.
- 8 Turn on the inlet water and check for leaks. If sanitizing an RO, allow the tank to fill for 30 minutes and discard the first tank. Allow tank to refill for 30 minutes.

Your system is now clean and ready to use!