

INSTALLATION INSTRUCTIONS

120-277V 50/60Hz

WESTGATE
THE FUTURE IS HERE... AND IT'S QUITE BRIGHT

SAFETY PRECAUTIONS:

Read all safety precautions and installation instructions carefully before installing or servicing this fixture. Failure to comply with these instructions could result in potentially fatal electric shock and/or property damage.

It is recommended that all wiring be performed by a qualified electrician. This fixture must be wired in accordance with all national and local electrical codes.

Do not handle any energized fixture or attempt to energize any fixture with wet hands or while standing on a wet or damp surface or in water.

Make sure that the power source conforms to the requirements of the fixture (see labels on fixture housing).

To reduce the risk of electrical shock, and to assure proper operation, this fixture must be adequately grounded. To accomplish proper grounding, there must be a separate ground wire (green) or bare metal contact (metal conduit) between this fixture and the ground connection of your main power supply panel.

INSTALLATION INSTRUCTIONS (Installation without the rear cover)

1. Turn off power at the circuit breaker and the light switch. Ensure the power is off before continuing.
2. Remove fixture screws (2), remove canopy (4) from fixture body (1).
3. Fix the canopy (4) to the junction box with the mounting screw (3).
4. Make all wire connections to appropriate wire. Secure with wire nuts.

Wire connection: Connect white(neutral) supply wire to white wire (7) ; connect black(hot) supply wire to black wire (8) ; connect ground wire to ground wire (9) , using wire nuts provided.

For 0-10V dimming fixture.


Connect the pink wire (10) from the fixture to the dimmer source gray or pink wire. Connect the purple wire (11) from the fixture to the dimmer source purple wire. Connect the white wire (7) from the fixture to the neutral (N) wire from dimming source per dimmer wiring instructions. Connect the black wire (8) from the fixture to the control line (L) wire from dimmer supply power source per dimmer wiring instructions.

For TRIAC dimming.

Connect the white wire (7) to corresponding white (N) wire in accordance with the dimmer manufacturer instructions.

Connect the black wire (8) to the corresponding control line (L) wire in accordance with the dimmer manufacturer instructions. Pink and purple wires are not to be used and must be individually capped to prevent shorting. Pull on each wire lead to verify all connections are secure.

5. The power switch (5) can be dialed to select the appropriate wattage. The 3CCT switch (6) can be dialed to adjust the appropriate color temperature (3000K/4000K/5000K).
6. Finally, the disassembled fixture body (1) is fixed to the canopy (4) through the fixture screw (2).
7. Complete the installation and turn on the switch.

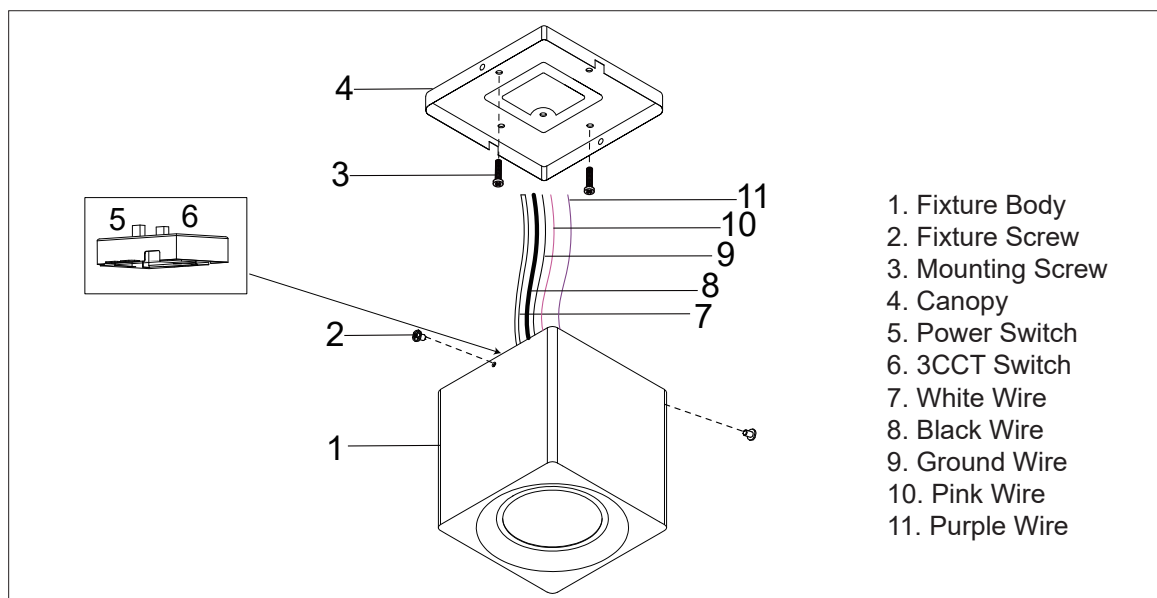

INSTALLATION INSTRUCTIONS (Install the rear cover)

1. Turn off power at the circuit breaker and the light switch. Ensure the power is off before continuing.
2. Remove fixture screw (2), remove canopy (4) from fixture body (1). Fix the rear cover screw (15) on the mounting bracket (14). Use canopy screw (16) to fix canopy (4) on rear cover (13).
3. Fix the mounting bracket (14) to the junction box with the mounting screw (3).
4. Pass the wires through the canopy (4) and the rear cover (13). Make all wire connections to appropriate wire. Secure with wire nuts.

Wire connection: Connect white (neutral) supply wire to white wire (7); connect black (hot) supply wire to black wire (8); connect ground wire to ground wire (9), using wire nuts provided.

For 0-10V dimming fixture.

Connect the pink wire (10) from the fixture to the dimmer source gray or pink wire. Connect the purple wire (11) from the fixture to the dimmer source purple wire. Connect the white wire (7) from the fixture to the neutral (N) wire from dimming source per dimmer wiring instructions. Connect the black wire (8) from the fixture to the control line (L) wire from dimmer supply power source per dimmer wiring instructions.

For TRIAC dimming.

Connect the white wire (7) to corresponding white (N) wire in accordance with the dimmer manufacturer instructions. Connect the black wire (8) to the corresponding control line (L) wire in accordance with the dimmer manufacturer instructions. Pink and purple wires are not to be used and must be individually capped to prevent shorting. Pull on each wire lead to verify all connections are secure.

5. This canopy (4) and rear cover (13) are fixed successively on the mounting bracket (14) through the nut (12).
6. The power switch (5) can be dialed to select the appropriate wattage. The 3CCT switch (6) can be dialed to adjust the appropriate color temperature (3000K/4000K/5000K).
7. Finally, the disassembled fixture body (1) is fixed to the canopy (4) through the fixture screw (2).
8. Complete the installation and turn on the switch.

