

Installation Instructions

WESTGATE®

ITEM: FDLO-32-MCT5

WARNING:

- Read all instruction before installation.
- System is intended for installation by a qualified electrician in accordance with the National Electrical Code and local regulations.
- Go to the main fuse box, or circuit breaker. Place the main power switch in the "OFF" position and unscrew the fuse(s) or switch "OFF" the circuit breaker switch(es) that control the power to the fixture or room that you are working on.
- Place the wall switch in the "OFF" position.
- Supply conductors (Power Wires) Connecting the fixture must be rated minimum 90°C. If uncertain, consult an electrician.


CAUTIONS

- These luminaires (fixtures) are designed to meet the latest NEC requirements and are listed in full compliance with ETL list.
- Before attempting installation, check your local electrical code, as it sets the wiring standards for your locality.

INSTALLATION

1. Unscrew the 4 cap nuts as shown and remove the lens, metal ring.
2. Provide electrical service according to the "National Electrical Code" or your local electrical code to the outlet box.
3. Secure the mounting screws (only screwing on halfway) to electrical box.
4. Position the fixture on the ceiling with the center hole over the electrical box. Mark the ceiling for the pilot hole locations through the small holes on the fixture. Drill pilot holes at each location. Determine the appropriate way (wood screws for the wooden studs or wall plugs and woods crews for dry wall) of fastening the fixture to the ceiling.
5. Use the slide switch to choose a color temperature. The options are 2700K, 3000K, 3500K, 4000K and 5000K.
6. Connect supply wires to fixture wires and insulate with proper size wire nuts(AA). Connect incoming ground wire (green or bare) to fixture ground wire (green or bare). Connect incoming common (white) wire to fixture white wire. Connect incoming hot (typically black) wire to fixture black wire.
7. Push back all the wire nuts into the junction box. Attach the fixture to the mounting screws (already mounted to the electrical box in step 3), twist the fixture and tighten the mounting screws. Secure the four wood screws with plastic anchors.
8. Reverse the process of step #1 to install the fixture.

Over standard electrical junction box

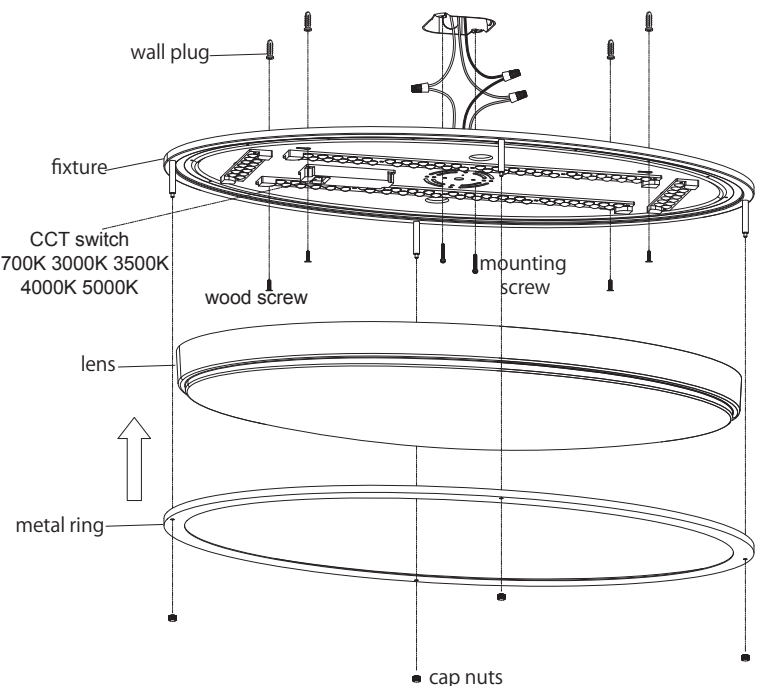

www.westgatemfg.com

Technical drawings for illustration purposes only. Westgate has the right to change any information without prior notice. Make sure you check all hole cut outs before work commences.