

# LED PENDANT LIGHT, MULTI COL

ITEM: LDAP-10-MCT5, LDAP-14-MCT5



# WESTGATE

www.westgatemfg.com

Please consult a qualified electrician for hanging fixture and wiring.

**CAUTION:** Before starting the installation, disconnect removing the fuse at the fuse box. Carefully unpack and identify all parts before assembly.

**CAUTION:** Always disconnect power at the main electrical panel before installation.

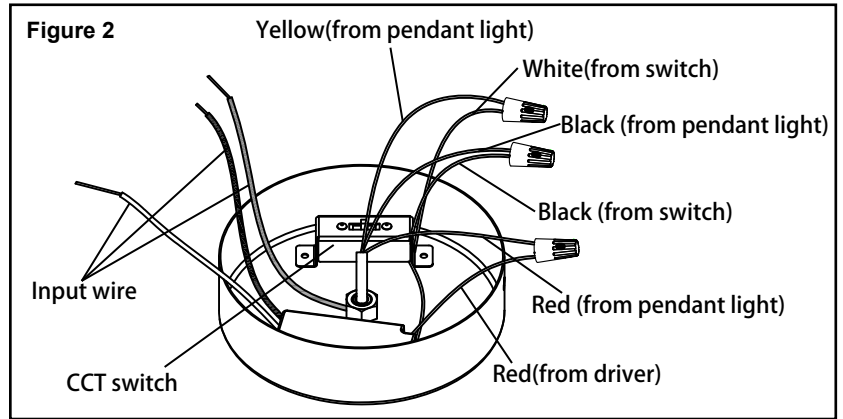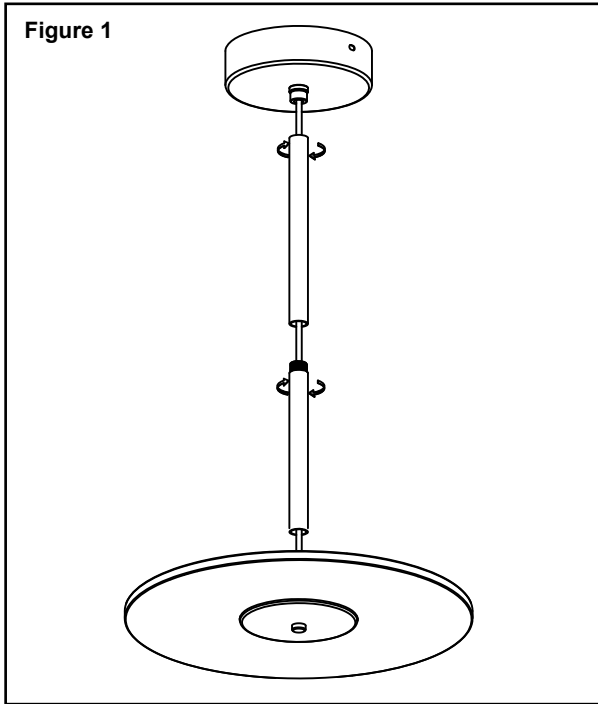

Step 1. Disconnect power at the main electrical panel.



Step 2. Insert the wire to the rods, and screw the 2 rods to the canopy. (See Figure 1)

Step 3. Connect the wires from pendant light and slim wires in canopy (marked 'Connect with the wire from pendant light'), Red to red, black to black, yellow to White. (See Figure 2)

Step 4. Find the CCT switch on the canopy and select the CCT needed. (with 2700k/3000k/3500k/4000k/5000k for selection).

Step 5. Screw the mounting plate to the junction. (See Figure 3)

Step 6. Connect supply wires to fixture wires and insulate with proper size wire nuts. Connect incoming ground wire (green or bare) to fixture ground wire (green or bare). Connect incoming common (white) wire to fixture white wire. Connect incoming hot (typically black) wire to fixture black wire. Please reference the following wiring guide.

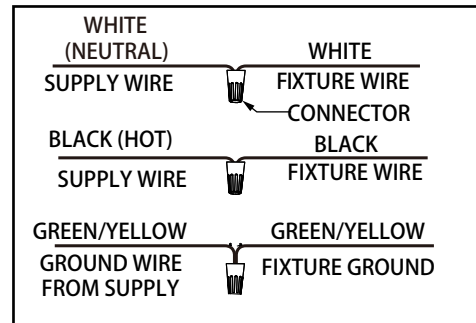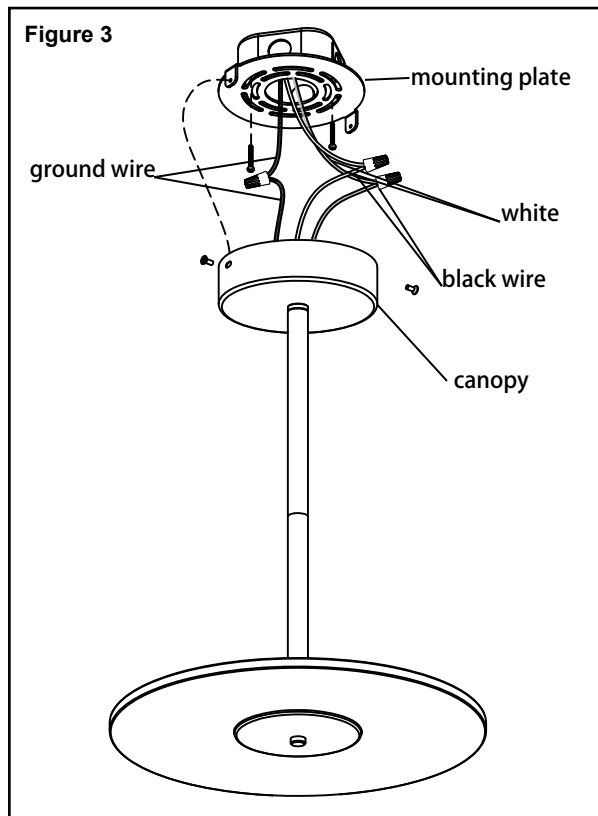

Then, screw the canopy to the mounting plate.

Step 7. Installation finished, connect the power and turn on the lights.