

LED VANITY BATH BAR, MULTI COL ITEM: LVD-WS-MCT5

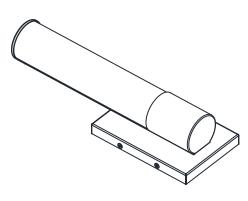


Please consult a qualified electrcian for hanging fixture and wiring. CAUTION: Before starting the installation, disconnect removing the fuse at the fuse box. Carefully unpack and identify all parts before assembly.




1. Always disconnect power at the main electrical panel before installation.

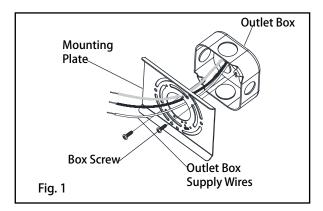


2. Pull wall box wires through center hole of mounting plate. Secure mounting plate to wall using screws so that the fixture mounting points are aligned vertically. (See Fig. 1)

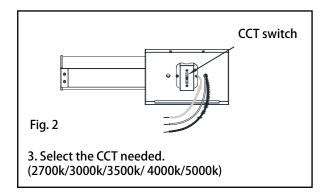


4. Follow wiring instructions Fig. 3 and Fig. 4

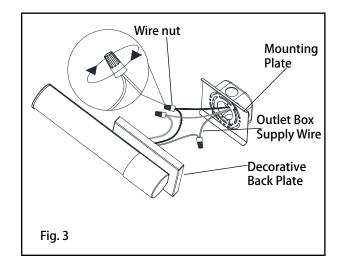

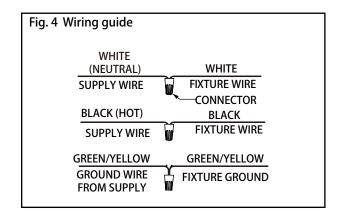

5. After connecting all wires, push all wires and wirenuts back through center hole of mounting plate and into the cavity of the electrical box, while positioning the fixture to align with the mounting points / tabs.

6. Secure decorative back plate with screws at top to the mounting plate. (See Fig. 5)

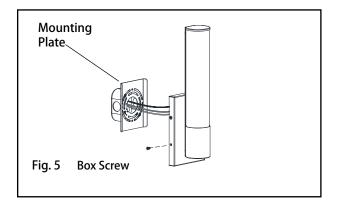

www.westgatemfg.com

Technical drawings for illustration purposes only. Westgate has the right to change any information.