

Read Instruction manual carefully to ensure proper installation. Please keep this instruction manual for future using!

To avoid the risk of fire,or electric shock this product should be installed,inspected,and maintained by a qualified electrician
only.Installation should be completely by an individual familiar with the construction and operation of the luminaire.Installation of
luminaire must be in accordance with nation and local building and electrical codes.

Safety Warning:

To avoid electric shock:

Be certain electrical power is OFF before and during installation and maintenance.

Luminaire must be supplied by a wiring system with an equipment grounding conductor.

To avoid burning hands:

Make sure lens and housing are cool when performing maintenance.

To avoid product degradation:

Make sure the wire supply voltage is the same as the luminaire supply

Use proper supply wiring as specified on the luminaire nameplate.

Avoid use in environments containing sulfur, chlorine, or other halides, methyl acetate or ethyl acetate, cyanoacrylates, glycol ethers, formaldehyde or butadiene.

Notes:

Instructions do not cover all details and all possible product configurations.

Do not restrict luminaire ventilation.

Ensure LED luminaire is not covered with material that will prevent convection or conduction cooling.

Ensure LED luminaire has the correct polarity before installation


Avoid exposing wiring to metal edges and sharp objects.


Maintenance:

Perform visual, electrical, and mechanical inspections on a regular basis. The environment and frequency of use should determine this. However, it is recommended that checks be made at least once a year. Electrically check to make sure that all connections are clean and tight. Mechanically check that all parts are properly assembled.


Installation Dimension(suspended)

Dip switch for CCT & Wattage

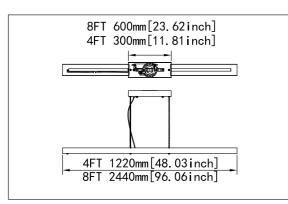

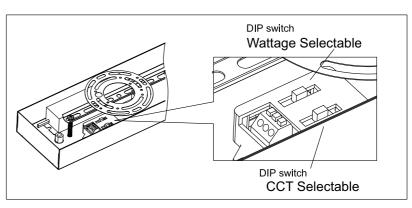


Wiring Diagram

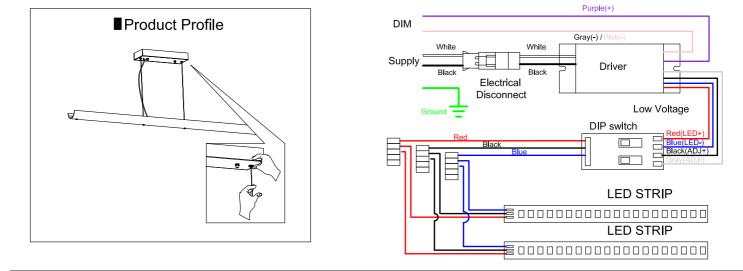


WESTGATE

LED Linear Architectural Installation Instructions

SUSPENDED MOUNT

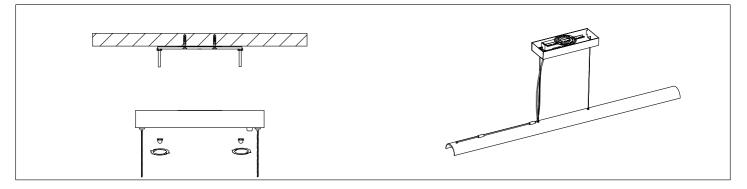


Down Lighting Version

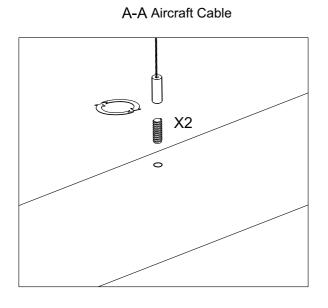


A-C

Adjust the length of the aircraft

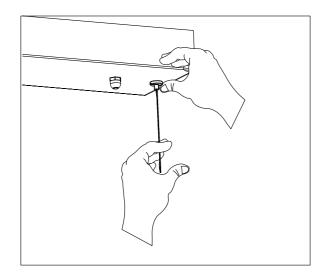




Use tape to attach the plastic white clip on the back of fixture

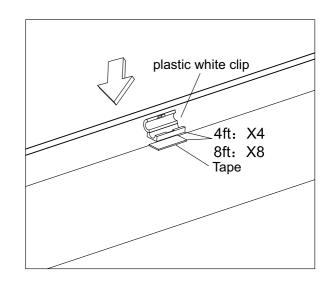




Connect Clear cable with AC input

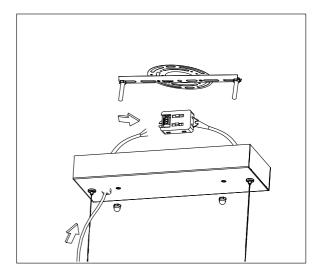

WESTGATE

A-E


Mount the Canopy kit on the ceiling

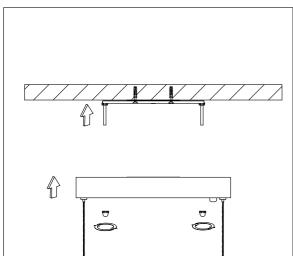

Conversion to Up lighting


B-A

Remove the clear cable from the driver kit

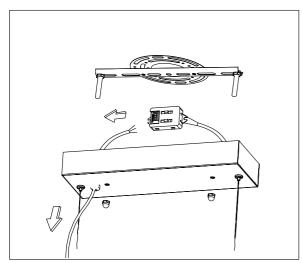


B-C

Atttach plastic white clip to along the tube side

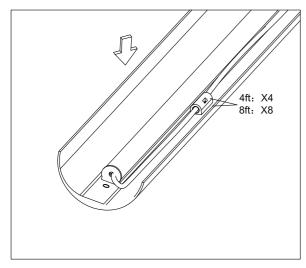


LED Linear Architectural Installation Instructions



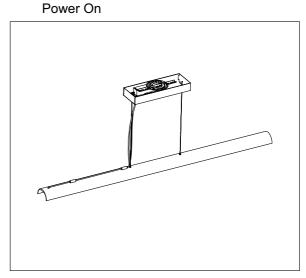




Disassemble the gripper on the fixture, change the direction

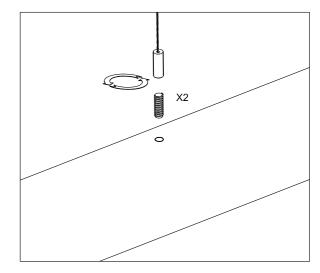

WESTGATE


B-E

Use the white rubber to cover the original hole

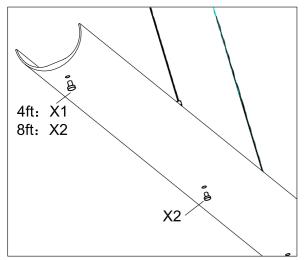

B-G


Connect Clear cable with AC input

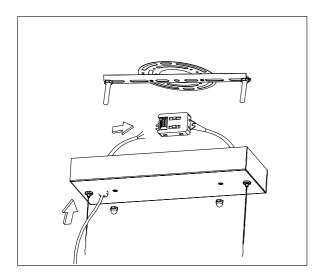

LED Linear Architectural Installation Instructions

B-F

Mount the gripper onto the bracket below

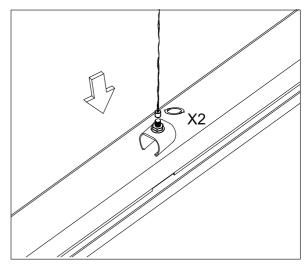

B-H

Mount the Canopy kit on the ceiling

