

# Bevi Free Set

## Operating Instructions



**BeviClean®**  
WIR MACHEN ALLES KLAR

<b>Contents</b>	<b>Page</b>
1. Safety instructions .....	2
2. Scope of supply .....	3
3. Operating instructions.....	3
4. Cleaning and service .....	4
5. General information .....	5
6. Illustration and components .....	6
7. Spare parts.....	7
8. Technical information.....	8

## 1. Safety Instructions

- Check the device for transport damages upon receipt
- Observe the operating instructions and always keep it next to the equipment
- It must be excluded that unauthorised persons operate the equipment
- Secure the dispensing equipment during the cleaning against use
- Do only use with water cocks not connected to a low-pressure flow heater
- We do not accept any liability for damages caused by use of not original parts and accessories, or due to inappropriate handling



## 2. Scope of Supply

- Bevi Free (automatic change over valve with 2 adaptor sight glass, beerline connector, one with shut-off cock)
- Connection line with 2 fittings
- Bevi Tab alkaline (30 tablets per box)
- Cleaning sponges (10 pcs. 7 or 10 mm)
- Fitting grease
- Cleaning brush
- Manual



## 3. Operating Instructions

### 3.1 Designated use

- Bevi Free is appropriate only for chemo-mechanical service cleaning of beverage lines
- Observe information from the manufacturer of equipment and cleansing agent.




### 3.2 Connection

- Connect the beer tubing to the adaptor and open the adaptor
- Join the taps on the dispensing head with the BEVI connecting tube to complete the beer tubing circuit

### 3.3 Cleaning


- Detach the adapter sight glass from the device by slightly turning it to the left, place the cleaning sponge (observe line diameter), and fasten again
- Open the water cock
- Possible beverage residues and accumulation of grime are flushed out of the system
- Close the water cock after the sponge has passed 2 times
- Detach the adapter sight glass, add to the sponge a Bevi Tab placing it flat (see Fig. below), and fasten again
- Open the water cock
- When using Bevi Tab, close the water cock after cleansing agent and sponge have reached the opposite adapter sight glass
- Let it act for 15 to 30 minutes
- Open the water cock and rinse sufficiently
- The travel direction of the sponge will change automatically several times
- Pay attention that the equipment is free from cleansing agent, check e.g. with pH indicator paper

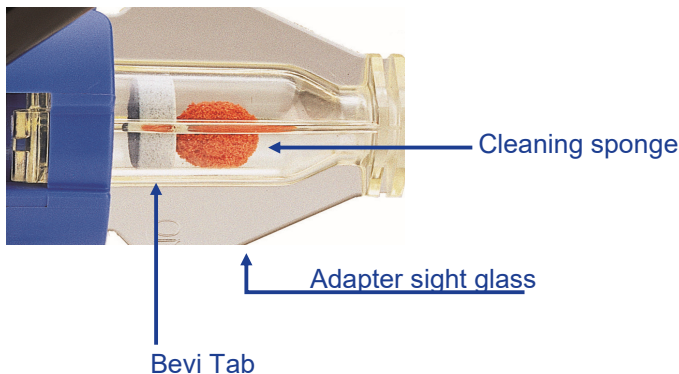


## 4. Cleaning and Service

- Disinfect inside and outside of the equipment in regular intervals, e.g. with Bevi Desinfect (Attention: do not use alcohol-containing agents)


- Lubricate piston (shown on the Bevi Profi)

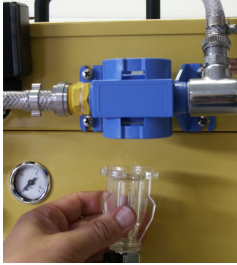

1. Detach the adapter sight glass from the valve

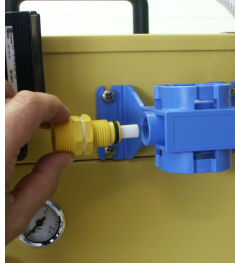


2. Unscrew the yellow low water intake nozzle

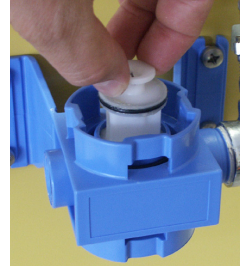


3. Take the white change-over piston out



4. Lubricate the O-ring with grease for cocks, and place the piston with the bore holes side-by-side towards the water intake side

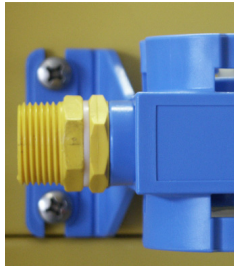

5. Screw the yellow intake cock in up to limit stop

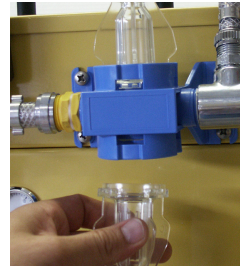


6. Fasten the adapter sight glass at the valve again

## 5. General Information

- It is only allowed to connect the equipment with water cocks without low-pressure flow heaters
- Protect the equipment against temperatures below freezing point (risk of freezing)
- Do only use customary cleansing agents (e. g. Bevi Tab)
- When operating the equipment properly the warranty components is of 1 year



# 6. Illustration and Components

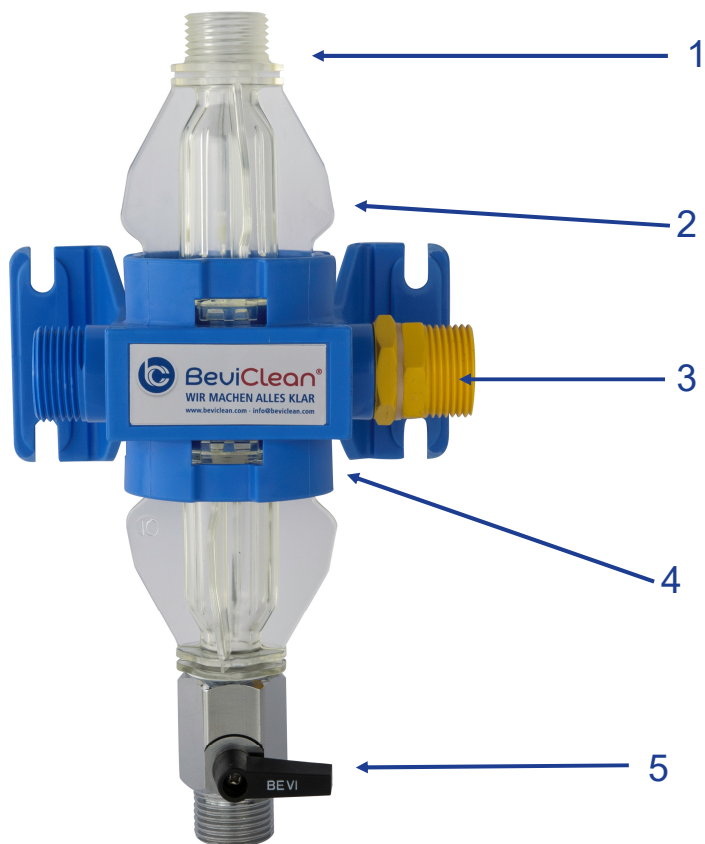

No.	Denomination
1	Beer line connection
2	Adapter sight glass
3	Valve nozzle self-adjusting
4	Automatic change-over valve
5	Shut-off cock

## 7. Spare Parts

Item no.	Component Bevi Plus
88120115	Adapter sight glass 7 mm
88120116	Adapter sight glass 10 mm
88120106	Gasket 33 x 3
88120108	Shut-off cock, 5/8" IA
88120119	Valve housing, POM blue
88120131	Valve housing complete 7/10 mm
88120122	Valve nozzle, self-adjusting
88120117	Piston, POM natural
88120109	Adapter 5/8" IA, glossy chrome plating

## 8. Technical Information

- Item No.: 88111000 (7 mm)  
88112000 (10 mm)
- Work range: 3-4 bar
- Weight / Box 1,0 kg
- Dimensions / box: 32 x 23 x 12,5 cm (L/W/H)



BeviClean strives for continuous improvement and reserves the right to up-date or change technical data without prior notice.



**BeviClean®**

**WIR MACHEN ALLES KLAR**

Carl-Benz-Straße 5 · D-56218 Mülheim-Kärlich  
T: +49 2630 / 966 30-0 · F: +49 2630 / 966 30-20  
[www.beviclean.com](http://www.beviclean.com) · [info@beviclean.com](mailto:info@beviclean.com)