

# clear health



Solutions for a safer work environment


**DEVICE USAGE MANUAL**



wesense.ai



wipro

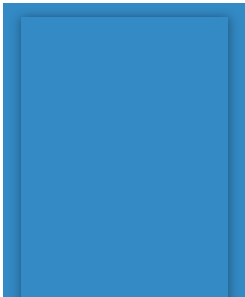

## HOW TO USE THE DEVICE

### Step 1

Stand in front of the device at a minimum distance of 1.5ft—2ft




### Step 2

Place your one hand below the device to collect the sanitizer

### Step 3

Temperature will displayed on the device.  
Remove your mask and look at the camera



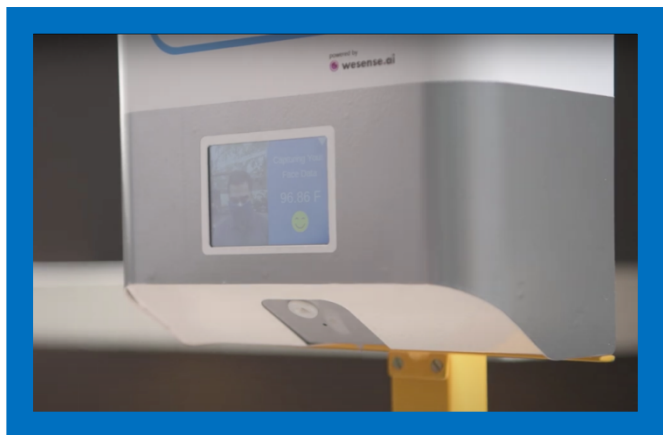

## Step 4

Stay there for few seconds till it arrives to normal mode (i.e. main screen)

## Step 5

Once recorded, wear your mask back and you are done.



## Note

- Users need to ensure all the conditions such as lighting, background , position of device, etc. are taken care of while using the device.
- After every recorded attendance , it takes 20 seconds for the recorded user's data to reflect in the server. Hence, users need to wait for the required time to check the data.
- Users will be notified on the display screen to remove the mask and place the hand near the sanitiser dispenser.
- Upon collecting sanitiser , the camera activates. The user is supposed to look into the camera so that the attendance can be captured.
- Once recorded, the process gets completed and the display comes back to normal mode.